

Contents

00 - Technical data	1
1 Identification	1
1.1 Gearbox identification	1
2 Technical data	2
2.1 Capacities	2
3 Safety precautions	3
3.1 Safety information	3
4 Repair instructions	4
4.1 Repair instructions	4
34 - Controls, housing	5
1 Safety and repair instructions	5
1.1 Safety information	5
1.2 Repair instructions	5
2 Removing and installing gearbox	6
2.1 Removing gearbox	6
2.2 Installing gearbox	6
3 Gearbox housing, clutch housing	7
3.1 Assembly overview - gearbox housing	7
4 Gear oil	8
4.1 Checking gear oil level	8
4.2 Draining and filling gear oil	9
39 - Final drive - differential	12
1 Safety and repair instructions	12
1.1 Safety information	12
1.2 Repair instructions	12
2 Oil seals	13
2.1 Assembly overview – seals	13
2.2 Renewing left seal	13
2.3 Renewing right seal	15