

Contents

00 - Technical data	1
1 Safety and repair instructions	1
1.1 Safety information	1
1.2 Repair instructions	1
2 Identification	2
2.1 PR number and type of brake system	2
3 Technical data	3
3.1 Test and adjustment values	3
4 Brake test	5
4.1 Checking vehicles on roller dynamometer	5
4.2 Checking parking brake	5
5 Electrical components	7
5.1 Starting diagnosis	7
6 Checking brake discs	9
6.1 Checking brake discs - steel brakes	9
6.2 Checking brake discs - ceramic brakes	13
45 - Anti-lock brake system	19
1 Safety and repair instructions	19
1.1 Safety information	19
1.2 Repair instructions	19
2 Overview of fitting locations	20
2.1 Overview of fitting locations - ABS/ESP	20
3 Sensors	21
3.1 Assembly overview - speed sensors on front axle	21
3.2 Exploded view - rear wheel speed sensor	21
3.3 Removing and installing front wheel speed sensor G45/G47	22
3.4 Removing and installing rear wheel speed sensor G44/G46	23
4 Control unit and hydraulic unit	25
4.1 Exploded view - control unit and hydraulic unit	25
4.2 Removing and installing ABS control unit J104/ABS hydraulic unit N55	25
46 - Brakes - mechanism	29
1 Safety and repair instructions	29
1.1 Safety information	29
1.2 Repair instructions	29
2 Front brakes	30
2.1 Exploded view - front brakes	30
2.2 Removing and installing brake pads	35
2.3 Removing and installing brake caliper	43
2.4 Renewing brake caliper	49
2.5 Removing and installing brake disc	52
2.6 Removing and installing splash plate	55
2.7 Removing and installing pad wear indicator wire	56
2.8 Removing and installing air duct for brake disc	58
3 Rear brakes	61
3.1 Exploded view - rear brakes	61
3.2 Removing and installing brake pads	65
3.3 Removing and installing brake caliper	71
3.4 Renewing brake caliper	79
3.5 Removing and installing brake disc	82

3.6	Removing and installing splash plate	84
3.7	Removing and installing pad wear indicator wire	85
3.8	Removing and installing air duct for brake disc	86
4	Parking brake	88
4.1	Assembly overview - parking brake	88
4.2	Removing and installing brake shoes	90
4.3	Adjusting brake shoes	92
4.4	Releasing parking brake manually	94
4.5	Removing and installing parking brake motor V282/V283	96
5	Brake pedal	97
5.1	Assembly overview - brake pedal	97
5.2	Removing and installing mounting bracket	97
5.3	Separating brake pedal from brake servo	99
5.4	Connecting brake pedal to brake servo	100
5.5	Removing and installing brake pedal	101
47	Brakes - hydraulics	103
1	Safety and repair instructions	103
1.1	Safety information	103
1.2	Repair instructions	103
2	Front brake caliper	104
2.1	Exploded view - front brake caliper	104
2.2	Removing and installing brake caliper piston	104
3	Rear brake caliper	108
3.1	Exploded view - rear brake caliper	108
3.2	Removing and installing brake caliper piston	108
4	Brake servo / brake master cylinder	109
4.1	Assembly overview - brake servo/brake master cylinder	109
4.2	Removing and installing brake servo	110
4.3	Removing and installing brake master cylinder	113
4.4	Removing and installing brake fluid reservoir	115
4.5	Removing and installing brake fluid level warning contact F34	119
5	Hydraulic system	121
5.1	Bleeding hydraulic system	121
5.2	Leak test	126