

Contents

00 - Technical data	1
1 Safety precautions	1
1.1 Safety precautions	1
2 Repair instructions	2
2.1 Repair instructions	2
3 Electrical components	3
3.1 Starting diagnosis	3
98 - Assist systems	9
1 Safety and repair instructions	9
1.1 Safety precautions	9
1.2 Repair instructions	9
2 Fitting locations	10
2.1 Overview of fitting locations - senders, sensors and control units in front section of vehicle	10
2.2 Overview of fitting locations - senders, sensors and control units in centre section of vehicle	12
2.3 Overview of fitting locations - senders, sensors and control units in rear section of vehicle	13
3 Senders/sensors/control units	15
3.1 Removing and installing front parking aid senders G252/G253/G254/G255	15
3.2 Removing and installing rear parking aid senders G203/G204/G205/G206	16
3.3 Removing and installing park assist steering senders G568/G569	16
3.4 Removing and installing rear park assist steering senders G716/G717	17
3.5 Removing and installing parking aid loudspeaker R169	17
3.6 Removing and installing control unit for radio-controlled parking J1182	18
3.7 Removing and installing aerial 3 for radio-controlled parking R361	20
3.8 Removing and installing aerial 4 for radio-controlled parking R362	21
3.9 Adaptive cruise control unit J428	21
3.10 Removing and installing lane change assist control unit J769/J770	25
3.11 Removing and installing reversing camera system control unit J772	27
3.12 Removing and installing control unit for night vision system J853	27
3.13 Removing and installing radar sensor control unit for object detection J1088/J1089	28
3.14 Removing and installing driver assist systems control unit J1121	29
3.15 Removing and installing lane change assist warning lamp in exterior mirror K233/K234	31
3.16 Removing and installing reversing camera R189	32
3.17 Camera for night vision system R212	33
3.18 Front camera for driver assist systems R242	35
3.19 Removing and installing front overhead view camera R243	38
3.20 Removing and installing right/left overhead view camera R244/R245	39
3.21 Removing and installing rear overhead view camera R246	40
4 Calibration conditions	42
4.1 Calibration requirements	42
5 Adaptive cruise control	43
5.1 Layout - adaptive cruise control	43
5.2 Exploded view - adaptive cruise control	43
5.3 Adjusting/calibrating adaptive cruise control	45
6 Parking aid/park assist steering/autonomous parking	49
6.1 Layout - parking aid/park assist steering/autonomous parking	49
7 Front corner radar	51
7.1 Layout - front corner radar	51
7.2 Calibrating front corner radar	51
8 Front camera for driver assist systems	55
8.1 Layout - front camera for driver assist systems	55



8.2	Exploded view - front camera for driver assist systems	55
8.3	Calibrating front camera for driver assist systems - static calibration (setting up calibration stand)	56
9	Night vision system	63
9.1	Layout - night vision system	63
9.2	Exploded view - camera for night vision system	63
9.3	Calibrating night vision system	65
10	Reversing camera system	72
10.1	Layout - reversing camera system	72
10.2	Calibrating reversing camera system	72
11	Lane change assist	77
11.1	Layout - lane change assist	77
11.2	Calibrating lane change assist	77
12	Overhead view camera	85
12.1	Layout - overhead view camera	85
12.2	Exploded view - overhead view camera	85
12.3	Calibrating overhead view camera	87