

Contents

| | |
|---|-----------|
| 00 - Technical data | 1 |
| 1 Safety precautions | 1 |
| 1.1 Safety precautions | 1 |
| 2 Repair instructions | 2 |
| 2.1 Repair instructions | 2 |
| 3 Electrical components | 3 |
| 3.1 Starting diagnosis | 3 |
| 91 - Communication | 6 |
| 1 Safety and repair instructions | 6 |
| 1.1 Safety precautions | 6 |
| 1.2 Repair instructions | 6 |
| 2 Fitting locations | 7 |
| 2.1 Overview of fitting locations - components/control units in front section of vehicle | 7 |
| 2.2 Overview of fitting locations - components/control units in centre section of vehicle | 7 |
| 2.3 Overview of fitting locations - components/control units in rear section of vehicle | 10 |
| 3 Components/control units | 11 |
| 3.1 Removing and installing display unit for front information display and operating unit control unit J685 | 11 |
| 3.2 Removing and installing control unit 1 for information electronics J794 | 11 |
| 3.3 Removing and installing driver side volume regulator E67 | 13 |
| 3.4 Removing and installing digital sound package control unit J525 - premium sound | 14 |
| 3.5 Removing and installing front treble loudspeaker R20/R22 | 15 |
| 3.6 Removing and installing front treble loudspeaker 2 R220/R221 - premium sound | 16 |
| 3.7 Removing and installing rear treble loudspeaker R14/R16 | 16 |
| 3.8 Removing and installing front mid-range loudspeaker R103/R104 | 17 |
| 3.9 Removing and installing rear bass loudspeaker R15/R17 | 18 |
| 3.10 Removing and installing front bass loudspeaker R21/R23 | 18 |
| 3.11 Removing and installing subwoofer R211 - premium sound | 19 |
| 3.12 Removing and installing effect loudspeaker R209/R210 - premium sound | 20 |
| 3.13 Removing and installing centre loudspeaker R208 - premium sound | 21 |
| 3.14 Removing and installing internal microphone R74 - premium sound | 21 |
| 3.15 Removing and installing aerial amplifier R24 | 21 |
| 3.16 Removing and installing aerial amplifier 2 R111 | 22 |
| 3.17 Removing and installing GPS aerial R50 | 23 |
| 3.18 Removing and installing dedicated short-range communication aerial R269 | 23 |
| 3.19 Removing and installing satellite tuner aerial R172 | 24 |
| 3.20 Removing and installing wireless data transfer aerial R336 | 24 |
| 3.21 Removing and installing wireless data transfer aerial 2 R366 | 25 |
| 3.22 Removing and installing wireless data transfer aerial 2 R366 | 26 |
| 3.23 Removing and installing digital radio aerial R183 | 27 |
| 3.24 Removing and installing emergency call module aerial R263 | 27 |
| 3.25 Removing and installing emergency call module aerial 2 R322 | 27 |
| 3.26 Removing and installing emergency call module aerial 3 R323 | 28 |
| 3.27 Removing and installing emergency call module aerial 4 R380 | 28 |
| 3.28 Removing and installing LTE aerial 3 R330 - Audi phone box | 29 |
| 3.29 Removing and installing telephone microphone R38 | 29 |
| 3.30 Removing and installing telephone bracket - Audi phone box, Audi phone box light | 30 |
| 3.31 Removing and installing aerial amplifier for mobile telephone R86 - Audi phone box | 30 |
| 3.32 Removing and installing chip card reader control unit J676 | 31 |
| 3.33 Removing and installing paddle E755/E756 | 32 |
| 3.34 Removing and installing multifunction buttons in steering wheel E441/E440 | 32 |
| 3.35 Removing and installing control unit for steering wheel contact detection J1158 | 33 |



| | | |
|-----------|--|-----------|
| 3.36 | Removing and installing USB connection 1 U41 | 34 |
| 3.37 | Removing and installing USB hub R293 | 35 |
| 3.38 | Removing and installing control unit with Android operating system J1243 | 35 |
| 3.39 | Removing and installing emergency call module control unit and communication unit J949 | 36 |
| 3.40 | Removing and installing loudspeaker for emergency call module R335 | 37 |
| 3.41 | Removing and installing emergency battery, telematics A16 | 37 |
| 3.42 | Removing and installing interface control unit for telematics J1221 | 38 |
| 3.43 | Removing and installing telephone and telematics control unit J526 | 39 |
| 3.44 | Removing and installing data transmission aerials | 40 |
| 4 | Infotainment system | 42 |
| 4.1 | Layout - infotainment system | 42 |
| 5 | Sound system | 43 |
| 5.1 | Layout - sound system | 43 |
| 6 | Aerial systems | 45 |
| 6.1 | Layout - aerial systems | 45 |
| 7 | Radio | 47 |
| 7.1 | Layout - radio | 47 |
| 8 | Telephone system | 48 |
| 8.1 | Layout - telephone | 48 |
| 9 | Navigation system | 49 |
| 9.1 | Layout - navigation system | 49 |
| 10 | Multi-function steering wheel | 50 |
| 10.1 | Layout - multi-function steering wheel | 50 |
| 10.2 | Exploded view - multi-function steering wheel | 50 |
| 11 | Connection for external multimedia devices | 52 |
| 11.1 | Layout - external multimedia devices | 52 |
| 12 | Mobile online services | 53 |
| 12.1 | Layout - online services | 53 |