

Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety information	1
2 Repair instructions	2
2.1 Repair instructions	2
3 Electrical components	3
3.1 Starting diagnosis	3
68 - Interior equipment	5
1 Safety information	5
1.1 Safety information	5
2 Storage compartments/covers/trim panels	6
2.1 Overview of fitting locations - storage compartments/covers/trim panels	6
2.2 Assembly overview - dash panel cover (driver side)	6
2.3 Assembly overview - steering column trim	7
2.4 Assembly overview - glove compartment	8
2.5 Removing and installing dash panel cover (driver side)	10
2.6 Removing and installing gap cover for dash panel insert	11
2.7 Removing and installing footwell cover (driver side)	12
2.8 Removing and installing footwell cover (front passenger side)	13
2.9 Removing and installing upper steering column trim	13
2.10 Removing and installing lower steering column trim	15
2.11 Removing and installing glove compartment opening mechanism	17
2.12 Removing and installing lock cylinder for glove compartment opening mechanism	17
2.13 Removing and installing glove compartment	19
2.14 Removing and installing glove compartment cover	23
3 Equipment	24
3.1 Assembly overview - sun visors	24
3.2 Removing and installing sun visor	24
3.3 Removing and installing sun visor centre mount	25
3.4 Removing and installing grab handle	26
4 Centre console	29
4.1 Assembly overview - centre console	29
4.2 Removing and installing rear centre console trim	32
4.3 Removing and installing centre console insert	33
4.4 Removing and installing centre console carrier	34
4.5 Removing and installing front centre console storage compartment	37
4.6 Removing and installing storage compartment lid in centre console	39
4.7 Removing and installing side centre console trim	40
4.8 Removing and installing centre console	42
4.9 Removing and installing trim panel for centre console	44
4.10 Removing and installing vent (rear) in centre console	45
4.11 Removing and installing brackets for centre console	46
5 Interior mirror	48
5.1 Assembly overview - interior mirror	48
5.2 Removing and installing interior mirror	48
5.3 Setting magnetic deflection zone	50
5.4 Calibrating digital compass	51
5.5 Adjusting automatic anti-dazzle interior mirror for right-hand drive or left-hand drive vehicles	52
5.6 Selecting the applicable deflection zone from the map	53

69 - Passenger protection	56
1 Safety information	56
1.1 Safety information	56
2 Seat belts	57
2.1 Overview of fitting locations - seat belts and anchorage points	57
2.2 Assembly overview - front three-point seat belt	59
2.3 Assembly overview - rear outer three-point seat belt	61
2.4 Assembly overview - rear centre three-point seat belt	61
2.5 Assembly overview - front belt buckle	62
2.6 Assembly overview - rear belt buckle	63
2.7 Removing and installing front three-point seat belt	64
2.8 Removing and installing rear three-point seat belt	68
2.9 Removing and installing front belt guide	74
2.10 Removing and installing rear belt guide	75
2.11 Removing and installing rear outer belt guide fitting	76
2.12 Removing and installing front belt end fitting	77
2.13 Removing and installing rear outer belt end fitting	78
2.14 Removing and installing rear centre belt end fitting	79
2.15 Removing and installing belt height adjuster	80
2.16 Removing and installing front belt buckle	81
2.17 Removing and installing rear belt buckle	82
3 Child seat anchors	85
3.1 Assembly overview - rear child seat anchors	85
3.2 Removing and installing rear child seat anchor	85
4 Airbag system	87
4.1 Overview of fitting locations - airbag system	87
5 Airbag control unit	90
5.1 Assembly overview - airbag control unit	90
5.2 Removing and installing airbag control unit J234	90
6 Airbag (driver side)	93
6.1 Assembly overview - driver airbag	93
6.2 Removing and installing airbag unit with igniters	93
6.3 Removing and installing connector at airbag	99
7 Front passenger airbag	101
7.1 Assembly overview - front passenger airbag	101
7.2 Removing and installing front passenger airbag unit with igniters	101
7.3 Removing and installing key-operated switch to deactivate airbag on front passenger side	104
8 Side airbags	108
8.1 Assembly overview - front side airbag	108
8.2 Assembly overview - rear side airbag	108
8.3 Removing and installing front side airbag with igniter	109
8.4 Removing and installing rear side airbag with igniter	112
9 Curtain airbags	115
9.1 Assembly overview - curtain airbag	115
9.2 Removing and installing curtain airbag with igniter	115
10 Knee airbags	120
10.1 Assembly overview - knee airbag	120
10.2 Removing and installing knee airbag with igniter	120
11 Crash sensors for airbags	126
11.1 Assembly overview - crash sensors for airbags	126
11.2 Removing and installing front airbag crash sensor for driver side G283	128
11.3 Removing and installing front side airbag crash sensor G179/G180	130
11.4 Removing and installing rear side airbag crash sensor G256/G257	133

11.5	Removing and installing crash sensor for side airbag in B-pillar G1101/G1102	136
11.6	Removing and installing crash sensor for power and control electronics G871	139
11.7	Removing and installing crash sensor 2 for power and control electronics G1113	142
12	Seat position sensor	145
12.1	Assembly overview - seat position sensor	145
12.2	Removing and installing seat position sensor	145
13	Belt-fastened recognition system	148
13.1	Removing and installing seat occupied sensor on front passenger side G128	148
14	Seat occupied recognition system	149
14.1	Overview of fitting locations - seat occupied recognition system	149
14.2	Removing and installing seat occupied recognition control unit J706	149
14.3	Removing and installing seat occupied sensor	150
70 - Trim, insulation	153	
1	Safety information	153
1.1	Safety information	153
2	Front door trim	154
2.1	Assembly overview - front door trim	154
2.2	Removing and installing mid-range loudspeaker trim	156
2.3	Removing and installing bass loudspeaker trim	156
2.4	Removing and installing trim panel	157
2.5	Removing and installing front door trim	158
2.6	Removing and installing front armrest	161
2.7	Removing and installing front door puller	162
2.8	Removing and installing interior door handle	164
3	Rear door trim	165
3.1	Assembly overview - rear door trim	165
3.2	Removing and installing mid-range loudspeaker trim	167
3.3	Removing and installing bass loudspeaker trim	167
3.4	Removing and installing trim panel	168
3.5	Removing and installing rear door trim	169
3.6	Removing and installing rear armrest	172
3.7	Removing and installing rear door puller	173
3.8	Removing and installing interior door handle	175
4	Dash panel	176
4.1	Assembly overview - dash panel	176
4.2	Removing and installing dash panel cover (side)	179
4.3	Removing and installing dash panel cover (centre)	182
4.4	Removing and installing trim for dash panel insert	182
4.5	Removing and installing loudspeaker trim	183
4.6	Removing and installing trim panel for dash panel	184
4.7	Removing and installing dash panel	188
4.8	Removing and installing cover for dash panel/head-up display	194
4.9	Removing and installing support bracket for dash panel insert	195
4.10	Removing and installing outer dash panel vent	196
4.11	Removing and installing centre vent	197
4.12	Removing and installing front centre defroster vent	198
5	Dash panel cross member	200
5.1	Assembly overview - dash panel cross member	200
5.2	Removing and installing dash panel cross member	200
6	Passenger compartment trim panels	207
6.1	Overview of fitting locations - passenger compartment trim panels	207
6.2	Assembly overview - A-pillar trim	207
6.3	Assembly overview - B-pillar trim	209

6.4	Assembly overview - C-pillar trim	210
6.5	Assembly overview - foot rest and floor covering	211
6.6	Assembly overview - rear shelf	212
6.7	Removing and installing upper A-pillar trim	213
6.8	Removing and installing lower A-pillar trim	216
6.9	Removing and installing upper B-pillar trim	219
6.10	Removing and installing lower B-pillar trim	220
6.11	Removing and installing C-pillar trim	221
6.12	Removing and installing side window trim (rear)	226
6.13	Removing and installing foot rest	227
6.14	Removing and installing floor covering	228
6.15	Removing and installing rear shelf	231
7	Luggage compartment trim panels	232
7.1	Overview of fitting locations - luggage compartment trim panels	232
7.2	Assembly overview - luggage compartment (front)	232
7.3	Assembly overview - luggage compartment side trim	233
7.4	Assembly overview - luggage compartment floor	234
7.5	Assembly overview - lower rear lid trim	235
7.6	Removing and installing lower rear lid trim	236
7.7	Removing and installing cover for rear lid hinge	238
7.8	Removing and installing front luggage compartment pan	240
7.9	Removing and installing storage compartment for vehicle tool kit	241
7.10	Removing and installing luggage compartment side trim	242
7.11	Removing and installing front luggage compartment trim	244
7.12	Removing and installing luggage compartment floor	245
7.13	Removing and installing retainer for luggage compartment floor	246
7.14	Removing and installing lock carrier trim	248
7.15	Removing and installing fastening ring	249
7.16	Removing and installing bag hook	250
8	Roof trim panels	251
8.1	Assembly overview - moulded headliner	251
8.2	Removing and installing moulded headliner	251
8.3	Lowering moulded headliner	253
72 - Seat frames	258	
1	Safety and repair instructions	258
1.1	Safety information	258
1.2	Repair instructions	258
2	Front seats	259
2.1	Assembly overview - front seat	259
2.2	Assembly overview - seat pan	259
2.3	Assembly overview - front seat backrest	262
2.4	Assembly overview - head restraint	264
2.5	Overview of fitting locations - electrical and electronic components	264
2.6	Removing and installing front seat	266
2.7	Removing and installing seat rail cover	271
2.8	Removing and installing seat frame trim	273
2.9	Removing and installing trim for seat depth adjuster	276
2.10	Removing and installing front seat backrest	277
2.11	Removing and installing backrest cover panel	279
2.12	Removing and installing support piece for seat bolster/backrest bolster	281
2.13	Renewing seat pan	282
2.14	Removing and installing outer backrest frame	283
2.15	Removing and installing seat adjustment operating unit E470/E471	285
2.16	Removing and installing control unit for seat functions	285

2.17	Removing and installing bracket for control unit	286
2.18	Removing and installing bracket for wiring harness	287
2.19	Removing and installing bracket for valve block	288
2.20	Removing and installing front seat fans	290
2.21	Removing and installing head restraint	293
2.22	Removing and installing bracket for head restraint	293
2.23	Removing and installing trim in backrest	294
2.24	Removing and installing bracket for fire extinguisher	295
3	Rear seats	297
3.1	Assembly overview - rear seat backrest	297
3.2	Assembly overview - centre armrest/load-through hatch	298
3.3	Assembly overview - locking mechanism	300
3.4	Assembly overview - head restraint and head restraint guide	302
3.5	Removing and installing bench seat/individual seats	302
3.6	Removing and installing rear seat backrest	304
3.7	Removing and installing backrest with load-through hatch	305
3.8	Removing and installing trim for locking mechanism	306
3.9	Removing and installing locking mechanism for rear seat backrest	307
3.10	Removing and installing trim for backrest with load-through hatch	312
3.11	Removing and installing centre armrest	314
3.12	Removing and installing centre mounting	315
3.13	Removing and installing outer bearing	316
3.14	Removing and installing catch	317
3.15	Removing and installing head restraint	318
3.16	Removing and installing head restraint guide	318
3.17	Removing and installing trim for backrest with load-through hatch	320
4	Front seat pneumatic system	321
4.1	Connection diagram - pneumatic system	321
4.2	Assembly overview - pneumatic system	321
4.3	Checking pneumatic system	323
4.4	Disconnecting and connecting pneumatic lines	328
4.5	Servicing pneumatic lines	329
4.6	Removing and installing pneumatic lumbar support	329
4.7	Removing and installing air cushion for backrest bolster adjuster	331
4.8	Removing and installing air cushion for seat bolster adjustment	331
4.9	Removing and installing massage mat	332
4.10	Removing and installing valve block for massage function	333
4.11	Removing and installing compressor for pneumatic system	334
74 - Seat - padding, covers	336	
1	Safety and repair instructions	336
1.1	Safety information	336
1.2	Repair instructions	336
2	Covers and padding on front seats	337
2.1	Assembly overview - cover and padding	337
2.2	Assembly overview - seat heater elements	339
2.3	Removing and installing seat pan cover and padding	339
2.4	Removing and installing padding for seat depth adjuster	344
2.5	Separating seat pan cover and padding	345
2.6	Removing and installing backrest cover and padding	347
2.7	Separating backrest cover and padding	350
2.8	Removing and installing seat heater element	351
2.9	Removing and installing seat depth adjuster heater element	352
2.10	Removing and installing backrest heater element	353
3	Covers and padding on rear seats	354

3.1	Assembly overview - cover and padding	354
3.2	Assembly overview - seat heater elements	356
3.3	Removing and installing cover and padding	357
3.4	Removing and installing intermediate padding - backrest with load-through hatch	361
3.5	Detaching cover from padding	363
3.6	Removing and installing side padding	368
3.7	Removing and installing seat heater element	369
3.8	Removing and installing backrest heater element	369
3.9	Removing and installing side padding heater element	370