

Contents

00 - Technical data	1
1 Safety information	1
2 Repair instructions	2
3 Electrical components	3
3.1 Starting diagnosis	3
50 - Body - front	5
1 Safety information	5
2 Lock carrier	6
2.1 Assembly overview - lock carrier	6
2.2 Removing and installing lock carrier	7
2.3 Removing and installing lock carrier (top section)	9
2.4 Removing and installing lock carrier (bottom section)	10
3 Wing	12
3.1 Assembly overview - wing	12
3.2 Assembly overview - repair set for wing	14
3.3 Removing and installing wing	15
3.4 Removing and installing wing panel brace	19
3.5 Removing and installing wing bracket	21
3.6 Removing and installing cover for wing	23
3.7 Removing and installing closure plate	24
3.8 Removing and installing air duct	24
4 Bulkhead	26
4.1 Assembly overview - plenum chamber partition panel	26
4.2 Assembly overview - plenum chamber cover	26
4.3 Removing and installing plenum chamber partition panel	27
4.4 Removing and installing plenum chamber cover	30
55 - Bonnet, rear lid	32
1 Safety information	32
2 Bonnet	33
2.1 Assembly overview - bonnet	33
2.2 Assembly overview - bonnet lock	35
2.3 Removing and installing bonnet	36
2.4 Adjusting bonnet	38
2.5 Removing and installing bonnet seal	42
2.6 Removing and installing bonnet lock	43
2.7 Removing and installing bonnet release motor V394	44
2.8 Removing and installing actuator for luggage compartment manual release, front F564	44
2.9 Removing and installing striker	45
2.10 Removing and installing hinges	45
2.11 Removing and installing gas strut	46
2.12 Releasing gas from gas strut	47
3 Rear lid	48
3.1 Assembly overview - rear lid	48
3.2 Assembly overview - rear lid power opening	50
3.3 Removing and installing rear lid	52
3.4 Adjusting rear lid	53
3.5 Removing and installing hinges	57
3.6 Removing and installing rear lid seal	57
3.7 Removing and installing adjusting buffer	58
3.8 Removing and installing stop for adjusting buffer	58

3.9	Removing and installing extension spring	58
3.10	Removing and installing rear lid lock	59
3.11	Removing and installing striker	60
3.12	Removing and installing power latching motor for rear lid V382	61
3.13	Removing and installing rear lid drive unit VX69	61
3.14	Adapting rear lid drive unit VX69	63
3.15	Removing and installing rear lid control unit J605	63
3.16	Removing and installing rear lid power opening control unit J938	64
3.17	Removing and installing rear lid power opening sender G750/G760	65
4	Charging flap unit	66
4.1	Assembly overview - charging flap unit	66
4.2	Removing and installing charging flap unit	67
4.3	Removing and installing charging flap unit trim	68
4.4	Removing and installing actuator for high-voltage charging flap lock F496/F497	69
4.5	Removing and installing module for battery charge selector buttons EX32/EX40	70
57	Front doors, door components, central locking	71
1	Safety information	71
2	Door	72
2.1	Assembly overview - door	72
2.2	Assembly overview - door seals	74
2.3	Removing and installing door	75
2.4	Adjusting door	76
2.5	Removing and installing door hinge	79
2.6	Removing and installing door arrester	81
2.7	Removing and installing inner door seal	82
2.8	Removing and installing door seal for roof trim strip	83
2.9	Removing and installing outer door seal	84
2.10	Removing and installing joint seal (bottom)	87
3	Door components	89
3.1	Assembly overview - window regulator	89
3.2	Assembly overview - door handle and door lock	90
3.3	Assembly overview - window guides and window slot seals	92
3.4	Removing and installing window regulator	93
3.5	Removing and installing window regulator motor	94
3.6	Removing and installing door handle	95
3.7	Removing and installing door handle trim	96
3.8	Removing and installing trim strip for door handle	97
3.9	Removing and installing door lock and mounting bracket	98
3.10	Removing and installing transmission module for door	106
3.11	Removing and installing lock cylinder	106
3.12	Removing and installing cap on door handle	107
3.13	Removing and installing trim strip for cap	108
3.14	Removing and installing cover for door lock	109
3.15	Removing and installing striker	110
3.16	Removing and installing operating cable for exterior door handle	110
3.17	Removing and installing operating cable for interior door handle	111
3.18	Removing and installing inner door cover	112
3.19	Removing and installing guide rail for door window	113
3.20	Removing and installing inner window slot seal	115
3.21	Removing and installing outer window slot seal	116
4	Central locking system	118
4.1	Overview of fitting locations - central locking system	118
4.2	Removing and installing driver door control unit J386 and front passenger door control unit J387	120

4.3	Removing and installing rear left door control unit J388 and rear right door control unit J389	120
4.4	Removing and installing convenience system central control unit J393	121
58	- Rear doors, door components	123
1	Safety information	123
2	Door	124
2.1	Assembly overview - door	124
2.2	Assembly overview - door seals	126
2.3	Removing and installing door	127
2.4	Adjusting door	128
2.5	Removing and installing door hinges	131
2.6	Removing and installing door arrester	133
2.7	Removing and installing inner door seal	134
2.8	Removing and installing outer door seal	137
2.9	Removing and installing joint seal (rear)	140
2.10	Removing and installing joint seal (bottom)	140
3	Door components	142
3.1	Assembly overview - window regulator	142
3.2	Assembly overview - door handle and door lock	143
3.3	Assembly overview - window guides and window slot seals	145
3.4	Removing and installing window regulator	146
3.5	Removing and installing window regulator motor	146
3.6	Removing and installing door handle	147
3.7	Removing and installing door handle trim	148
3.8	Removing and installing trim strip for door handle	149
3.9	Removing and installing mounting bracket	150
3.10	Removing and installing door lock	152
3.11	Removing and installing housing	153
3.12	Removing and installing cap on door handle	154
3.13	Removing and installing trim strip for cap	154
3.14	Removing and installing striker	155
3.15	Removing and installing operating cable for exterior door handle	155
3.16	Removing and installing operating cable for interior door handle	156
3.17	Removing and installing inner door cover	158
3.18	Removing and installing inner window slot seal	158
3.19	Removing and installing outer window slot seal	160
60	- Sunroof	162
63	- Bumpers	163
1	Safety information	163
2	Front bumper	164
2.1	Assembly overview - bumper cover	164
2.2	Assembly overview - impact bar	166
2.3	Removing and installing bumper cover	168
2.4	Adjusting bumper cover	170
2.5	Removing and installing bumper cover mounting	170
2.6	Removing and installing centre ventilation grille	171
2.7	Removing and installing bumper cover trim	171
2.8	Removing and installing trim for air duct (side)	172
2.9	Removing and installing front spoiler	172
2.10	Removing and installing lower closure plate for bumper cover	173
2.11	Removing and installing closure plate (side) for bumper cover	174
2.12	Removing and installing lock carrier cover	176
2.13	Removing and installing impact bar	178



2.14	Removing and installing mounting for assist systems	180
3	Bumper (rear)	182
3.1	Assembly overview - bumper cover	182
3.2	Assembly overview - impact bar	186
3.3	Removing and installing bumper cover	187
3.4	Removing and installing upper section of bumper cover	190
3.5	Removing and installing lower section of bumper cover	190
3.6	Removing and installing bumper cover mounting	190
3.7	Removing and installing bumper cover strut	192
3.8	Removing and installing trim strip for bumper cover	193
3.9	Removing and installing impact bar	194
3.10	Removing and installing moulded foam insert	195
3.11	Checking forced ventilation vents in passenger compartment	195
3.12	Removing and installing forced ventilation vents in passenger compartment	196
64	- Glazing	198
1	Safety information	198
2	Repair instructions	199
2.1	Minimum drying times for bonded windows	199
2.2	Repairing windows	199
2.3	Tools and materials required for installation and removal	200
2.4	Preparing undamaged windows for installation	203
2.5	Preparing new windows for installation	203
2.6	Preparing body flange for installation	205
2.7	Cleaning off adhesive sealant	206
3	Windscreen	207
3.1	Assembly overview - windscreen	207
3.2	Removing and installing windscreen	208
4	Panoramic sunroof	215
4.1	Assembly overview - panoramic sunroof	215
4.2	Removing and installing panoramic sunroof	215
5	Rear window	223
5.1	Assembly overview - rear window	223
5.2	Removing and installing rear window	223
6	Glass trim	231
6.1	Assembly overview - glass trim	231
6.2	Removing and installing glass trim	231
7	Side windows	234
7.1	Assembly overview - rear side window	234
7.2	Removing and installing rear side window	234
8	Door windows	236
8.1	Assembly overview - front door window	236
8.2	Assembly overview - rear door window	236
8.3	Removing and installing front door window	237
8.4	Adjusting front door window	238
8.5	Removing and installing rear door window	242
8.6	Adjusting rear door window	243
66	- Exterior equipment	248
1	Safety information	248
2	Radiator grille/front trim	249
2.1	Assembly overview - radiator grille	249
2.2	Attaching number plate	251
2.3	Removing and installing mounting for overhead view camera	255

2.4	Removing and installing closure plate (top)	256
2.5	Removing and installing cover for sensor	256
3	Spoiler	257
3.1	Assembly overview - spoiler	257
3.2	Removing and installing spoiler	259
3.3	Removing and installing spoiler blade	262
3.4	Removing and installing spoiler cover	263
3.5	Adjusting spoiler	263
3.6	Removing and installing water drain hose	266
3.7	Removing and installing rear spoiler adjustment control unit J223	267
4	Strips/trim panels/extensions	269
4.1	Assembly overview - trim strips	269
4.2	Assembly overview - covers	270
4.3	Assembly overview - sill panel trim	270
4.4	Assembly overview - side member trim	271
4.5	Assembly overview - trim panel for A-pillar	272
4.6	Assembly overview - trim panel for B-pillar	273
4.7	Assembly overview - wheel arch covers	274
4.8	Removing and installing trim strip	275
4.9	Removing and installing cover	277
4.10	Removing and installing side member trim	280
4.11	Removing and installing trim panel for A-pillar	283
4.12	Removing and installing trim panel for B-pillar	283
4.13	Removing and installing wheel arch covers	284
5	Underbody cladding	286
5.1	Assembly overview - underbody cladding	286
5.2	Assembly overview - underbody struts	286
5.3	Removing and installing cross member (bottom)	288
5.4	Removing and installing cross piece	293
6	Exterior mirrors	295
6.1	Assembly overview - exterior mirror	295
6.2	Removing and installing exterior mirror	297
6.3	Removing and installing mirror glass	298
6.4	Removing and installing mirror adjustment unit	299
6.5	Removing and installing mirror cover	300
6.6	Removing and installing mirror trim	301
7	Wheel housing liners	303
7.1	Assembly overview - wheel housing liner (front)	303
7.2	Assembly overview - wheel housing liner (rear)	303
8	Lettering and badges	305
8.1	General notes on renewing lettering and badges	305
8.2	Dimensions - lettering and badges on rear	305
8.3	Removing and installing lettering and badges for radiator grille	306