

## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety information	1
<b>2 Repair instructions</b>	<b>2</b>
2.1 Repair instructions	2
<b>3 Electronic components</b>	<b>3</b>
3.1 Starting diagnosis	3
<b>72 - Seat frames</b>	<b>4</b>
<b>1 Safety and repair instructions</b>	<b>4</b>
1.1 Safety information	4
1.2 Repair instructions	4
<b>2 Front seats</b>	<b>5</b>
2.1 Assembly overview - front seat	5
2.2 Assembly overview - seat pan	5
2.3 Assembly overview - front seat backrest	8
2.4 Assembly overview - head restraint	10
2.5 Overview of fitting locations - electrical and electronic components	10
2.6 Removing and installing front seat	12
2.7 Removing and installing seat rail cover	16
2.8 Removing and installing seat frame trim	18
2.9 Removing and installing trim for seat depth adjuster	21
2.10 Removing and installing front seat backrest	22
2.11 Removing and installing backrest cover panel	24
2.12 Removing and installing support piece for seat bolster/backrest bolster	26
2.13 Renewing seat pan	27
2.14 Removing and installing outer backrest frame	28
2.15 Removing and installing seat adjustment operating unit E470/E471	30
2.16 Removing and installing control unit for seat functions	30
2.17 Removing and installing bracket for control unit	31
2.18 Removing and installing bracket for wiring harness	32
2.19 Removing and installing bracket for valve block	33
2.20 Removing and installing front seat fans	35
2.21 Removing and installing head restraint	38
2.22 Removing and installing bracket for head restraint	38
2.23 Removing and installing trim in backrest	39
2.24 Removing and installing bracket for fire extinguisher	40
<b>3 Rear seats</b>	<b>42</b>
3.1 Assembly overview - rear seat backrest	42
3.2 Assembly overview - centre armrest/load-through hatch	43
3.3 Assembly overview - locking mechanism	45
3.4 Assembly overview - head restraint and head restraint guide	47
3.5 Removing and installing bench seat/individual seats	47
3.6 Removing and installing rear seat backrest	49
3.7 Removing and installing backrest with load-through hatch	50
3.8 Removing and installing trim for locking mechanism	51
3.9 Removing and installing locking mechanism for rear seat backrest	52
3.10 Removing and installing trim for backrest with load-through hatch	57
3.11 Removing and installing centre armrest	59
3.12 Removing and installing centre mounting	60
3.13 Removing and installing outer bearing	61
3.14 Removing and installing catch	62



3.15	Removing and installing head restraint	63
3.16	Removing and installing head restraint guide	63
3.17	Removing and installing trim for backrest with load-through hatch	65
<b>4</b>	<b>Front seat pneumatic system</b>	<b>66</b>
4.1	Connection diagram - pneumatic system	66
4.2	Assembly overview - pneumatic system	66
4.3	Checking pneumatic system	68
4.4	Disconnecting and connecting pneumatic lines	73
4.5	Servicing pneumatic lines	74
4.6	Removing and installing pneumatic lumbar support	74
4.7	Removing and installing air cushion for backrest bolster adjuster	76
4.8	Removing and installing air cushion for seat bolster adjustment	76
4.9	Removing and installing massage mat	77
4.10	Removing and installing valve block for massage function	78
4.11	Removing and installing compressor for pneumatic system	79
<b>74</b>	<b>Seat - padding, covers</b>	<b>81</b>
<b>1</b>	<b>Safety and repair instructions</b>	<b>81</b>
1.1	Safety information	81
1.2	Repair instructions	81
<b>2</b>	<b>Covers and padding on front seats</b>	<b>82</b>
2.1	Assembly overview - cover and padding	82
2.2	Assembly overview - seat heater elements	84
2.3	Removing and installing seat pan cover and padding	84
2.4	Removing and installing padding for seat depth adjuster	89
2.5	Separating seat pan cover and padding	90
2.6	Removing and installing backrest cover and padding	92
2.7	Separating backrest cover and padding	95
2.8	Removing and installing seat heater element	96
2.9	Removing and installing seat depth adjuster heater element	97
2.10	Removing and installing backrest heater element	98
<b>3</b>	<b>Covers and padding on rear seats</b>	<b>99</b>
3.1	Assembly overview - cover and padding	99
3.2	Assembly overview - seat heater elements	101
3.3	Removing and installing cover and padding	102
3.4	Removing and installing intermediate padding - backrest with load-through hatch	106
3.5	Detaching cover from padding	108
3.6	Removing and installing side padding	113
3.7	Removing and installing seat heater element	114
3.8	Removing and installing backrest heater element	114
3.9	Removing and installing side padding heater element	115