

## Contents

<b>54 - Vehicle-specific paintwork information</b> .....	<b>1</b>
<b>1 Safety information</b> .....	<b>1</b>
1.1 Safety information .....	1
<b>2 Repair instructions</b> .....	<b>2</b>
2.1 Repair instructions .....	2
<b>3 Paintwork structure</b> .....	<b>3</b>
3.1 Structure of factory finish .....	3
<b>4 Areas exposed to stone chipping</b> .....	<b>4</b>
4.1 Overview - areas exposed to stone chipping .....	4
<b>5 Masked sectors</b> .....	<b>5</b>
5.1 Masking areas - general information .....	5
5.2 Masking areas - body, front .....	5
5.3 Masking areas - body, centre .....	6
5.4 Masking areas - body, rear .....	6
<b>6 Seam sealing</b> .....	<b>7</b>
6.1 Joint seals - general information .....	7
6.2 Joint seals - body, front .....	7
6.3 Joint seals - body, centre .....	7
6.4 Joint seals - body, rear .....	8
<b>7 Underseal</b> .....	<b>9</b>
7.1 Underseal - general information .....	9
7.2 Overview - underseal (body), with differing layer thicknesses .....	9
<b>8 Cavity sealing</b> .....	<b>10</b>
8.1 Cavity sealing - general information .....	10
8.2 Overview - cavity sealing, body .....	10
<b>9 Contrasting colours</b> .....	<b>12</b>
9.1 Contrasting colours - whole vehicle .....	12
<b>10 Paintwork repair</b> .....	<b>14</b>
10.1 Repairing paintwork - components .....	14
10.2 Repairing paintwork - sensors .....	15