

Contents

00 - Technical data	1
1 Safety precautions	1
1.1 Safety information	1
2 Repair instructions	2
2.1 Repair instructions	2
3 Identification	3
3.1 Identification of transmission unit	3
4 Technical data	4
4.1 Capacities	4
34 - Controls, housing	5
1 Safety precautions	5
1.1 Safety information	5
2 Removing and installing transmission unit	6
2.1 Removing transmission unit	6
3 Gear oil	7
3.1 Checking gear oil level	7
3.2 Draining and filling gear oil	8
39 - Final drive - differential	11
1 Safety precautions	11
1.1 Safety information	11
2 Oil seals	12
2.1 Exploded view - oil seals	12
2.2 Renewing oil seal (right-side)	12
2.3 Renewing oil seal (left-side)	13