

## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety precautions</b>	<b>1</b>
1.1 Safety information	1
<b>2 Repair instructions</b>	<b>2</b>
2.1 Repair instructions	2
<b>3 Assessing high-voltage system risk level</b>	<b>3</b>
3.1 Work that requires high-voltage system to be de-energised	3
<b>4 Electrical components</b>	<b>6</b>
4.1 Starting diagnosis	6
<b>5 Identification</b>	<b>10</b>
5.1 Motor number/motor data	10
<b>10 - Removing and installing engine</b>	<b>11</b>
<b>1 Safety and repair instructions</b>	<b>11</b>
1.1 Safety information	11
1.2 Repair instructions	11
<b>2 Removing and installing motor (front)</b>	<b>12</b>
2.1 Exploded view - motor	12
2.2 Assembly overview - motor and transmission unit	13
2.3 Removing motor	14
2.4 Installing motor	17
2.5 Securing motor to engine and gearbox support	21
2.6 Separating motor and transmission unit	22
2.7 Assembling motor and transmission unit	25
2.8 Determining thickness of shim for transmission unit gear cluster	29
<b>3 Removing and installing motor (rear)</b>	<b>31</b>
3.1 Exploded view - motor (rear)	31
3.2 Assembly overview - motor and transmission unit (rear)	31
3.3 Removing rear motor	32
3.4 Installing rear motor	36
3.5 Securing motor to engine and gearbox support	38
3.6 Separating motor and transmission unit - motor (rear)	39
3.7 Assembling motor and transmission unit - motor (rear)	41
<b>4 Assembly mountings (front)</b>	<b>43</b>
4.1 Exploded view - assembly mountings	43
4.2 Removing and installing motor carriers	45
4.3 Supporting motor in installation position	51
<b>5 Assembly mountings (rear)</b>	<b>53</b>
5.1 Exploded view - assembly mountings (rear)	53
5.2 Removing and installing motor carriers	56
<b>19 - Cooling</b>	<b>67</b>
<b>1 Safety and repair instructions</b>	<b>67</b>
1.1 Safety information	67
1.2 Repair instructions	67
<b>2 Cooling system/coolant</b>	<b>68</b>
2.1 Assembly overview - coolant expansion tank	68
2.2 Removing and installing coolant expansion tank	68
2.3 Connection diagram - coolant hoses	69
2.4 Draining coolant	71
2.5 Filling cooling system	74



2.6	Bleeding cooling system	76
2.7	Checking cooling system for leaks	77
<b>3</b>	<b>Coolant pump/thermostat assembly</b>	<b>80</b>
3.1	Overview of fitting locations - coolant pump/thermostat assembly	80
3.2	Exploded view - electric coolant pump	83
3.3	Exploded view - coolant valves	85
3.4	Exploded view - coolant temperature sender	87
3.5	Removing and installing coolant pump for high-voltage battery V590	88
3.6	Removing and installing thermal management coolant pump 2 V618	88
3.7	Removing and installing thermal management coolant pump 4 V620	89
3.8	Removing and installing coolant changeover valve 1 N632	90
3.9	Removing and installing coolant changeover valve 2 N633	91
3.10	Removing and installing changeover and mixing valve for thermal management V650	92
3.11	Removing and installing changeover and mixing valve 2 for thermal management V651	93
3.12	Removing and installing changeover and mixing valve 4 for thermal management V653	93
3.13	Removing and installing changeover and mixing valve 7 for thermal management V656	94
3.14	Removing and installing coolant shortage indicator sender 2 G837	95
3.15	Removing and installing coolant temperature sender 1 for thermal management G902	95
3.16	Removing and installing coolant temperature sender 2 for thermal management G903	96
3.17	Removing and installing coolant temperature sender 3 for thermal management G904	97
3.18	Removing and installing coolant temperature sender 4 for thermal management G905	98
3.19	Removing and installing coolant temperature sender 5 for thermal management G906	98
3.20	Removing and installing coolant temperature sender 7 for thermal management G908	99
3.21	Removing and installing coolant temperature sender 8 for thermal management G968	100
3.22	Removing and installing coolant temperature sender 9 for thermal management G1017	101
3.23	Removing and installing coolant temperature sender 1 for high-voltage battery G898	101
3.24	Removing and installing coolant temperature sender 2 for high-voltage battery G899	102
<b>4</b>	<b>Coolant pipes</b>	<b>104</b>
4.1	Assembly overview - coolant pipes	104
4.2	Removing and installing coolant distributor	106
4.3	Removing and installing coolant manifold	109
<b>5</b>	<b>Radiator/radiator fan</b>	<b>110</b>
5.1	Exploded view - radiator/radiator fan	110
5.2	Exploded view - radiator blind	110
5.3	Removing and installing radiator	111
5.4	Removing and installing radiator fan V7	113
5.5	Removing and installing radiator fan 2 V177	114
5.6	Removing and installing radiator blind	114
5.7	Removing and installing radiator blind control motor V544	115
5.8	Removing and installing radiator blind control motor 2 V550	116
5.9	Removing and installing radiator cowl	117
<b>93</b>	<b>Electric drive systems</b>	<b>119</b>
<b>1</b>	<b>Safety and repair instructions</b>	<b>119</b>
1.1	Safety information	119
1.2	Repair instructions	119
<b>2</b>	<b>High-voltage components</b>	<b>120</b>
2.1	Overview of fitting locations - high-voltage components	120
<b>3</b>	<b>Warning labels</b>	<b>123</b>
3.1	Checking warning stickers	123
<b>4</b>	<b>High-voltage battery unit</b>	<b>127</b>
4.1	Assembly overview - high-voltage battery 1 AX2 (installed)	127
4.2	Assembly overview - switching unit for high-voltage battery SX6	130
4.3	Inspecting and classifying high-voltage battery 1 AX2	131
4.4	Diagnosis of removed high-voltage battery 1 AX2	132

4.5	Determining mean cell voltage	134
4.6	Charging and discharging battery modules	134
4.7	Leak test for high-voltage battery 1 AX2	135
4.8	Checking high-voltage battery 1 AX2 for leaks	142
4.9	Removing and installing high-voltage battery 1 AX2	142
4.10	Lifting high-voltage battery 1 AX2	151
4.11	Removing and installing switching unit for high-voltage battery SX6	153
<b>5</b>	<b>High-voltage battery components</b>	<b>165</b>
5.1	Assembly overview - high-voltage battery 1 AX2 (removed)	165
5.2	Overview of fitting locations - battery modules	170
5.3	Overview of fitting locations - battery connectors	171
5.4	Marking battery modules and battery connectors	174
5.5	Handling replacement bolts for cover for battery housing	175
5.6	Removing and installing cover for battery housing	175
5.7	Removing and installing igniter 3 for high-voltage battery isolation N813	197
5.8	Removing and installing battery temperature sensor G729	204
5.9	Removing and installing battery housing (level 2)	205
5.10	Removing battery module	218
5.11	Installing battery module	226
5.12	Visually inspecting and classifying battery module	231
5.13	Provisional energisation of high-voltage battery 1 AX2	232
5.14	Removing and installing communication wiring harness on high-voltage battery 1 AX2	235
<b>6</b>	<b>Power and control electronics for electric drive</b>	<b>247</b>
6.1	Exploded view - power and control electronics for electric drive	247
6.2	Removing and installing power and control electronics for electric drive	249
<b>7</b>	<b>Electric drive motor</b>	<b>257</b>
7.1	Removing and installing drive motor rotor position sender 1 G713	257
7.2	Removing and installing rear drive motor rotor position sender G1095	258
<b>8</b>	<b>Motor control unit</b>	<b>259</b>
8.1	Removing and installing motor control unit J623	259
<b>9</b>	<b>High-voltage wiring</b>	<b>261</b>
9.1	Overview of fitting locations - high-voltage wires	261
9.2	Removing and installing high-voltage wiring harness for drive motor	264
9.3	Removing and installing high-voltage wiring harness for switching unit for high-voltage battery	268
9.4	Removing and installing high-voltage wire for voltage converter	269
9.5	Removing and installing high-voltage wire for electrical air conditioner compressor	271
9.6	Unplugging high-voltage connectors	271
9.7	Removing and installing high-voltage wire for high-voltage heater	275
9.8	Removing and installing high-voltage wire for charging unit 1 for high-voltage battery	277
<b>10</b>	<b>De-energising high-voltage system</b>	<b>279</b>
10.1	De-energising high-voltage system	279
<b>11</b>	<b>Re-energising high-voltage system</b>	<b>281</b>
11.1	Re-energising high-voltage system	281
<b>12</b>	<b>Potential equalisation lines</b>	<b>283</b>
12.1	General notes - potential equalisation lines	283
12.2	Potential equalisation measurement	283
12.3	Overview of fitting locations - potential equalisation lines	283
<b>13</b>	<b>Charging socket</b>	<b>286</b>
13.1	Assembly overview - charging socket	286
13.2	Assembly overview - charging socket 2	287
13.3	Removing and installing high-voltage battery charging socket 1 UX4	289
13.4	Removing and installing high-voltage battery charging socket 2 UX5	298
13.5	e-tron charging system	303

13.6	Diagnosis of e-tron charging system	303
13.7	Removing and installing actuator for high-voltage charging socket lock	306
<b>14</b>	<b>Charging unit for high-voltage battery</b>	<b>313</b>
14.1	Assembly overview - charging unit 1 for high-voltage battery	313
14.2	Removing and installing charging unit 1 for high-voltage battery AX4	315
14.3	Removing and installing bracket for charging unit for high-voltage battery	317
14.4	Removing and installing charging process display unit	317
<b>15</b>	<b>Voltage converter</b>	<b>319</b>
15.1	Exploded view - voltage converter	319
15.2	Removing and installing voltage converter	321
15.3	Removing and installing power contactor with boost function	326
15.4	Removing and installing bracket for power contactor with boost function	331
<b>16</b>	<b>Engine sound generation</b>	<b>334</b>
16.1	Overview of fitting locations - vehicle noise/engine sound	334
16.2	Removing and installing engine sound generator control unit (GM4)	336
16.3	Removing and installing engine sound generator control unit (GM3)	338
16.4	Removing and installing actuator for engine sound generator (GM4)	341
16.5	Removing and installing actuator for engine sound generator (GM3)	342
16.6	Removing and installing internal loudspeaker for engine sound generator (GM3)	345
<b>17</b>	<b>Accelerator mechanism</b>	<b>347</b>
17.1	Exploded view - accelerator pedal module	347
17.2	Removing and installing accelerator pedal module GX2	347