

001 - Electric drive system for front axle	1-3
1. Electric drive system for front axle	1
2. Data bus diagnostic interface, Fuse holder H, Relay and fuse carrier 3, Front three-phase current drive	2
3. Power contactor with boost function, Brake servo, Front three-phase current drive, Electric drive motor for front axle	3
002 - Electric drive system for rear axle	4-7
1. Electric drive system for rear axle	4
2. Rear three-phase current drive	5
3. Axle differential lock control unit, Rear three-phase current drive	6
4. High-voltage battery 1, Gearbox speed sender, Rear three-phase current drive	7
003 - Electric drive system, motor control unit	8-16
1. Electric drive system, motor control unit	8
2. Engine/motor control unit	9
3. Accelerator pedal module, Accelerator position sender, Accelerator position sender 2, Engine/motor control unit	10
4. Gearbox oil temperature sender, Clutch position sender, Clutch jaw position sensor, Convenience system central control unit, Engine/motor control unit, Brake servo	11
5. Engine/motor control unit, Running gear control unit, Gear actuator	12
6. Parking lock solenoid, Gearbox auxiliary hydraulic pump	13
7. Selector lever, Electromechanical parking brake button, Selector lever sensors control unit, Parking lock indicator lamp, Selector lever position display	14
8. Selector lever, Gearbox speed sender, Selector lever position sender, Driver assist systems control unit, Rear three-phase current drive	15
9. ABS control unit, Steering column electronics control unit, Data bus diagnostic interface	16
004 - Fuses in engine compartment	17-30
1. Fuses in engine compartment	17
2. Battery, Wiring junction	18
3. Radiator fan relay, Radiator fan 2 relay, Wiring junction	19
4. Wiring junction	20
5. Voltage converter for 800 V, 400 V, 48 V, 12 V, Power contactor with boost function	21
6. Voltage converter for 800 V, 400 V, 48 V, 12 V, Control unit for air conditioner compressor	22
7. Fuse holder A, Relay and fuse carrier 3	23
8. Fuse holder A, Relay and fuse carrier 3	24
9. Fuse holder A, Relay and fuse carrier 3	25
10. Fuse holder A, Relay and fuse carrier 3	26
11. Fuse holder A, Relay and fuse carrier 3	27
12. Coolant pump relay, Coolant shut-off valve relay, High-voltage battery coolant pump relay, Relay and fuse carrier 3	28
13. Data bus diagnostic interface, Coupling point in engine compartment, right	29
14. Coupling point in engine compartment, right, Front three-phase current drive	30
005 - Fuses in interior	31-56
1. Fuses in interior	31
2. Terminal 15 voltage supply relay, Wiring junction	32
3. Relay and fuse carrier 1	33
4. Relay and fuse carrier 1	34
5. Convenience system central control unit, Relay and fuse carrier 2	35
6. Thermal management coolant pump relay, Relay and fuse carrier 2	36
7. Onboard supply control unit relay, Fuse holder B, Connection for emergency power supply	37
8. Fuse holder B	38
9. Onboard supply control unit, Fuse holder B	39
10. Onboard supply control unit	40
11. Fuse holder C	41
12. Fuse holder C	42
13. Coupling point on dash panel, right, Diagnostic connection	43
14. Fuse holder D	44
15. Brake servo, Fuse holder D	45
16. Fuse holder F	46
17. Fuse holder F	47
18. Data bus diagnostic interface, Fuse holder G	48
19. Fuse holder G	49
20. Fuse holder H	50
21. Fuse holder H	51
22. Operating and display unit for rear air conditioning system, Selector lever	52
23. Fuse holder O	53
24. Fuse holder O	54

25. Fuse holder P	55
26. Fuse holder P	56
006 - Fuses in luggage compartment	57-65
1. Fuses in luggage compartment	57
2. Relay and fuse carrier 4, Wiring junction	58
3. Relay and fuse carrier 4, Fuse holder K	59
4. Convenience system central control unit, Fuse holder K	60
5. Fuse holder L	61
6. Fuse holder L	62
7. Remote-controlled air conditioning relay, Fuse holder M	63
8. Engine sound generator control unit 3, Fuse holder H, Fuse holder M	64
9. Engine/motor control unit, Coupling point in luggage compartment, centre	65
007 - Convenience system	66-71
1. Convenience system	66
2. Fuse holder B, Fuse holder C, Fuse holder D, Relay and fuse carrier 1, Relay and fuse carrier 2	67
3. Onboard supply control unit, Fuse holder F, Fuse holder H	68
4. Onboard supply control unit	69
5. Convenience system central control unit, Onboard supply control unit, Data bus diagnostic interface	70
6. Brake fluid level warning contact, Bonnet contact switch, Ambient temperature sensor, Windscreen washer fluid level sender, Onboard supply control unit	71
008 - Airbag systems for LHD vehicles , (L0L)	72-85
1. Airbag systems for LHD vehicles , (L0L)	72
2. Airbag control unit, Convenience system central control unit	73
3. Driver side belt force limiter, Airbag control unit, Battery regulation control unit, Control unit for front left belt tensioner, Front left seat belt, Driver seat belt tensioner igniter 1, Coupling point for switching unit for high-voltage battery	74
4. Front airbag crash sensor for driver side, Front airbag crash sensor for front passenger side, Front passenger side belt force limiter, Airbag control unit, Control unit for front right belt tensioner, Front right seat belt, Front passenger seat belt tensioner igniter 1	75
5. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on passenger side, Crash sensor for side airbag in B-pillar, driver side, Crash sensor for side airbag in B-pillar, passenger side, Airbag control unit	76
6. Key-operated switch to deactivate airbag on front passenger side, Airbag control unit, Rear side airbag igniter on driver side, Rear side airbag igniter on passenger side, Driver side curtain airbag igniter	77
7. Airbag control unit, Seat occupied recognition control unit, Front passenger side curtain airbag igniter, Heater element with seat occupied recognition, front passenger side, Earth point, under front passenger seat	78
8. Front passenger side belt switch, Front passenger seat adjustment operating unit, Belt switch for seat row 2, driver side, Belt switch for seat row 2, centre, Seat occupied sensor on front passenger side, Front passenger side seat position sensor, Airbag control unit	79
9. Driver side belt switch, Driver seat adjustment operating unit, Belt switch for seat row 2, passenger side, Driver side seat position sensor, Airbag control unit, Emergency call module control unit and communication unit	80
10. Airbag control unit, Onboard supply control unit, Side airbag igniter on driver side, Side airbag igniter on front passenger side, Front roof module	81
11. Airbag control unit, Steering column electronics control unit, Airbag igniter on driver side, Driver side knee airbag igniter, Igniter for exhaust valve for driver airbag, Coupling point on dash panel, left	82
12. Airbag control unit, Front passenger airbag unit, Airbag igniter 1 on front passenger side, Airbag igniter 2 on front passenger side, Front passenger side knee airbag igniter, Igniter for exhaust valve for front passenger airbag	83
13. Crash sensor for power and control electronics, Crash sensor 2 for power and control electronics, Airbag control unit, Rear belt tensioner igniter on driver side, Rear belt tensioner igniter on passenger side	84
14. Airbag control unit, Data bus diagnostic interface, Lane change assist control unit 2	85
009 - Brake system	86-93
1. Brake system	86
2. ABS control unit, Running gear control unit	87
3. Front right brake pad wear sender, Front right speed sensor, ABS control unit, Data bus diagnostic interface	88
4. Front left brake pad wear sender, Rear right brake pad wear sender, Rear right speed sensor, Front left speed sensor, ABS control unit, Right parking brake motor	89
5. Rear left brake pad wear sender. Rear left speed sensor. ABS control unit. Left parking brake	90

motor	
6. Centre switch module in dash panel, ABS control unit, Adaptive cruise control unit, Onboard supply control unit	91
7. Selector lever, Brake servo	92
8. Brake servo, Front three-phase current drive	93
010 - Data bus network	94-110
1. Data bus network	94
2. Data bus diagnostic interface	95
3. Battery, Driver side volume regulator, Selector lever, Data bus diagnostic interface, Charging unit 1 for mobile devices	96
4. Data bus diagnostic interface, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Control unit for radio-controlled parking, Diagnostic connection	97
5. Data bus diagnostic interface, Diagnostic connection	98
6. Control unit in dash panel insert, Steering column electronics control unit, Data bus diagnostic interface, Control unit for head-up display, Heater and air conditioning system control unit	99
7. Data bus diagnostic interface, Lane change assist control unit, Control unit for night vision system	100
8. Tyre Pressure Monitoring System control unit, Data bus diagnostic interface, Engine/motor control unit, Lane change assist control unit 2, Reversing camera system control unit, Thermal management control unit, Engine sound generator control unit 2, Engine sound generator control unit 3	101
9. Telephone and telematics control unit, Data bus diagnostic interface, Interface control unit for telematics, Gear actuator, Rear three-phase current drive	102
10. Data bus diagnostic interface, Interface control unit for telematics, Coupling point for switching unit for high-voltage battery	103
11. Charging unit 1 for high-voltage battery, Voltage converter for 800 V, 400 V, 48 V, 12 V, Data bus diagnostic interface, Emergency call module control unit and communication unit, Power contactor with boost function, Front three-phase current drive	104
12. Front passenger door control unit, Control unit for front passenger seat adjustment with memory function, Data bus diagnostic interface	105
13. Rear spoiler adjustment control unit, Driver door control unit, Convenience system central control unit, Data bus diagnostic interface	106
14. Control unit for seat and steering column adjustment with memory function, Data bus diagnostic interface, Rear lid control unit	107
15. Onboard supply control unit, Data bus diagnostic interface, Front left headlight, Front right headlight	108
16. Running gear control unit, Driver assist systems control unit, Adaptive suspension compressor electronics	109
17. Airbag control unit, Front left seat belt, Front right seat belt	110
011 - Data bus network (FlexRay bus)	111-122
1. Data bus network (FlexRay bus)	111
2. Data bus diagnostic interface, Driver assist systems control unit	112
3. Steering column electronics control unit, Data bus diagnostic interface, Driver assist systems control unit	113
4. Data bus diagnostic interface, Front left radar sensor control unit for object detection, Front right radar sensor control unit for object detection	114
5. Data bus diagnostic interface, Engine/motor control unit, Running gear control unit, Front left radar sensor control unit for object detection	115
6. ABS control unit, Adaptive cruise control unit, Data bus diagnostic interface, Running gear control unit	116
7. Adaptive cruise control unit, Data bus diagnostic interface	117
8. Data bus diagnostic interface, Rear three-phase current drive	118
9. Data bus diagnostic interface, Axle differential lock control unit, Rear wheel steering control unit	119
10. Power steering control unit, Data bus diagnostic interface, Brake servo, Front three-phase current drive	120
11. Airbag control unit, Data bus diagnostic interface, Lane change assist control unit, Lane change assist control unit 2	121
12. Data bus diagnostic interface, Lane change assist control unit	122
012 - Steering wheel	123-128
1. Steering wheel	123
2. Steering column electronics control unit	124
3. Steering column electronics control unit, Airbag igniter on driver side, Heated steering wheel	125
4. Horn plate, Multifunction steering wheel control unit, Steering column electronics control unit, Igniter for exhaust valve for driver airbag	126
5. Multifunction buttons on left in steering wheel. Downshift paddle. Heated steering wheel sender.	127

	Multifunction steering wheel control unit	128
	6. Upshift paddle, Multifunction steering wheel control unit	128
013	- Dash panel insert	129-131
	1. Dash panel insert	129
	2. Control unit in dash panel insert, Control unit for night vision system	130
	3. Control unit in dash panel insert, Control unit 1 for information electronics	131
014	- Light switch	132-133
	1. Light switch	132
	2. Light switch, Onboard supply control unit	133
015	- Centre console switches	134-137
	1. Centre console switches	134
	2. Centre switch module in dash panel, Onboard supply control unit	135
	3. Centre switch module in dash panel, Onboard supply control unit	136
	4. Onboard supply control unit, Coupling point on dash panel, right	137
016	- Adaptive suspension	138-148
	1. Adaptive suspension	138
	2. ABS control unit, Convenience system central control unit, Engine/motor control unit, Running gear control unit	139
	3. Running gear control unit, Adaptive suspension compressor electronics, Adaptive suspension drain valve, Quick-fill valve for air springs, Adaptive suspension compressor motor, Air compressor for suspension control	140
	4. Pressure sender for adaptive suspension, Running gear control unit, Valve block for adaptive suspension, Front left suspension strut valve, Front right suspension strut valve, Rear left suspension strut valve, Rear right suspension strut valve, Adaptive suspension pressure accumulator valve	141
	5. Rear left vehicle level sender, Running gear control unit	142
	6. Rear right vehicle level sender, Front left vehicle level sender, Front right vehicle level sender, Running gear control unit	143
	7. Running gear control unit, Rear left shock absorber damping adjustment valve, Rear right shock absorber damping adjustment valve	144
	8. Rear right wheel acceleration sender, Rear right body acceleration sender, Running gear control unit, Rear right air spring module, Additional air spring volume valve 1, rear right, Additional air spring volume valve 2, rear right	145
	9. Front left wheel acceleration sender, Front left body acceleration sender, Running gear control unit, Front left suspension strut module, Front left shock absorber damping adjustment valve, Additional air spring volume valve 1, front left, Additional air spring volume valve 2, front left	146
	10. Front right wheel acceleration sender, Front right body acceleration sender, Running gear control unit, Front right suspension strut module, Front right shock absorber damping adjustment valve	147
	11. Rear left wheel acceleration sender, Rear left body acceleration sender, Running gear control unit, Rear left air spring module, Additional air spring volume valve 1, rear left, Additional air spring volume valve 2, rear left	148
017	- 12 V sockets	149-150
	1. 12 V sockets	149
	2. Cigarette lighter, 12 V socket, 12 V socket 2	150
018	- Door control units, driver side , (LOL)	151-161
	1. Door control units, driver side , (LOL)	151
	2. Driver door control unit, Driver assist systems control unit, Light for exterior door handle illumination, driver side	152
	3. Driver door control unit, Driver door lock unit, Driver side window regulator motor, Driver side entry light	153
	4. Operating unit for window regulator in driver door, Driver operating unit for memory settings, Driver door control unit, Central locking SAFELOCK function warning lamp	154
	5. Operating unit for window regulator in driver door, Driver door control unit	155
	6. Exterior mirror adjuster, Driver side interior locking button for central locking system, Driver door control unit	156
	7. Rear lid remote release button, Driver door control unit, Left overhead view camera, Driver side exterior mirror	157
	8. Potentiometer for horizontal adjustment of driver side mirror, Driver door control unit, Lane change assist warning lamp in driver side exterior mirror, Driver side exterior mirror, Driver side mirror adjustment motor 2	158
	9. Rear driver side door control unit, Light for rear exterior door handle illumination, driver side	159
	10. Rear driver side door control unit, Rear door lock unit, driver side, Rear driver side window regulator motor	160
	11. Operating unit in rear door, driver side, Rear driver side interior locking button for central locking system. Rear driver side door control unit. Rear driver side entry light	161

019 - Door control units, passenger side , (L0L)	162-169
1. Door control units, passenger side , (L0L)	162
2. Front passenger door control unit, Driver assist systems control unit	163
3. Front passenger door control unit, Light for exterior door handle illumination, front passenger side, Front passenger door lock unit, Front passenger side window regulator motor	164
4. Window regulator switch in front passenger door, Front passenger side interior locking button for central locking system, Front passenger door control unit, Passenger side entry light	165
5. Front passenger door control unit, Lane change assist warning lamp in passenger side exterior mirror, Passenger side exterior mirror	166
6. Front passenger door control unit, Rear passenger side door control unit, Passenger side exterior mirror	167
7. Rear passenger side door control unit, Light for rear exterior door handle illumination, passenger side, Rear door lock unit, passenger side	168
8. Operating unit in rear door, passenger side, Rear passenger side interior locking button for central locking system, Rear passenger side door control unit, Rear passenger side window regulator motor, Rear passenger side entry light	169
020 - Driver seat , (3L4),(Q1G)	170-174
1. Driver seat , (3L4),(Q1G)	170
2. Seat and steering column adjustment control unit with memory, Relay and fuse carrier 1	171
3. Driver seat adjustment operating unit, Seat and steering column adjustment control unit with memory	172
4. Seat and steering column adjustment control unit with memory, Driver seat longitudinal adjustment motor, Driver seat backrest adjustment motor, Driver seat rake adjustment motor, Driver seat height adjustment motor	173
5. Onboard supply control unit	174
021 - Driver seat , (3L5),(Q1G)	175-177
1. Driver seat , (3L5),(Q1G)	175
2. Driver seat adjustment operating unit	176
3. Driver seat adjustment operating unit, Driver seat longitudinal adjustment motor, Driver seat backrest adjustment motor, Driver seat rake adjustment motor, Driver seat height adjustment motor	177
022 - Front passenger seat , (Q1G)	178-180
1. Front passenger seat , (Q1G)	178
2. Front passenger seat adjustment operating unit, Relay and fuse carrier 1, Relay and fuse carrier 2	179
3. Front passenger seat adjustment operating unit, Front passenger seat longitudinal adjustment motor, Front passenger seat backrest adjustment motor, Front passenger seat rake adjustment motor, Front passenger seat height adjustment motor	180
023 - Interior lights , (QQ0)	181-189
1. Interior lights , (QQ0)	181
2. Front left footwell light, Front roof module	182
3. Glove compartment light switch, Front roof module, Glove compartment light	183
4. Driver vanity mirror contact switch, Front passenger vanity mirror contact switch, Front roof module, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror, Rear left interior light, Rear right interior light	184
5. Onboard supply control unit, Front right footwell light, Front luggage compartment light, Coupling point for front left seat, Front roof module, Rear left footwell light	185
6. Convenience system central control unit, Onboard supply control unit, Left luggage compartment light, Right luggage compartment light, Rear right footwell light	186
7. Rear driver side door control unit, Rear passenger side door control unit, Light for rear driver side interior door handle illumination, Light for rear passenger side interior door handle illumination, Rear driver side entry light, Light for rear sill panel moulding background lighting, driver side	187
8. Driver door control unit, Rear passenger side door control unit, Rear passenger side entry light, Light for sill panel moulding background lighting, driver side, Light for rear sill panel moulding background lighting, passenger side	188
9. Driver door control unit, Front passenger door control unit, Light for driver side interior door handle illumination, Light for passenger side interior door handle illumination, Driver side entry light, Passenger side entry light, Light for sill panel moulding background lighting, front passenger side	189
024 - Headlights , (8IY)	190-192
1. Headlights , (8IY)	190
2. Output module 1 for right LED headlight, Onboard supply control unit, Front right headlight, Right headlight range control motor, Right headlight fan	191
3. Output module 1 for left LED headlight, Onboard supply control unit, Front left headlight, Left headlight range control motor, Left headlight fan	192
025 - Tail light clusters . (AV0).(AV1).(AV4)	193-196

1. Tail light clusters , (AV0),(AV1),(AV4)	193
2. Convenience system central control unit	194
3. Convenience system central control unit, Centre tail light cluster	195
4. Convenience system central control unit, Left tail light cluster, Right tail light cluster, High-level brake light bulb, Heated rear window	196
026 - Window wash/wipe system	197-199
1. Window wash/wipe system	197
2. Wiper motor control unit, Windscreen wiper motor, Windscreen wiper	198
3. Washer pump, Headlight washer system pump	199
027 - Air conditioning system , (KH5)	200-213
1. Air conditioning system , (KH5)	200
2. Fresh air blower control unit, Heater and air conditioning system control unit, Fresh air blower	201
3. Sunlight penetration photosensor, External air quality and air humidity sensor, Heater and air conditioning system control unit	202
4. Air conditioner sensor for fine particle concentration, Ioniser control unit, Heater and air conditioning system control unit, Driver side ioniser, Passenger side ioniser	203
5. Operating and display unit for rear air conditioning system, Vent temperature sender for rear left footwell, Vent temperature sender for rear right footwell, Heater and air conditioning system control unit, Rear right air distribution control motor	204
6. Heater and air conditioning system control unit, Rear left air quantity flap control motor, Rear right air quantity flap control motor, Rear left air distribution control motor	205
7. Operating and display unit for front air conditioning system, Data bus diagnostic interface, Heater and air conditioning system control unit	206
8. Dash panel temperature sensor, Potentiometer in left centre dash panel vent, Potentiometer in left side vent, Potentiometer in right side vent, Heater and air conditioning system control unit	207
9. Left footwell vent temperature sender, Right footwell vent temperature sender, Evaporator temperature sensor, Front left chest vent temperature sensor, Front right chest vent temperature sensor, Coolant temperature sender before heat exchanger, Heater and air conditioning system control unit	208
10. Heater and air conditioning system control unit, Defroster flap control motor, Right footwell flap control motor, Rear right temperature flap control motor, Fresh air flap control motor	209
11. Heater and air conditioning system control unit, Air recirculation flap control motor, Right temperature flap control motor, Control motor for right footwell temperature flap, Fresh air flap control motor	210
12. Heater and air conditioning system control unit, Front left chest vent control motor, Front right chest vent control motor, Left side vent control motor, Right side vent control motor	211
13. Heater and air conditioning system control unit, Left footwell flap control motor, Indirect ventilation flap control motor, Left side vent control motor, Control motor for left footwell temperature flap	212
14. Left temperature flap control motor, Rear left temperature flap control motor	213
028 - Interior mirror , (4L6),(4L7)	214-215
1. Interior mirror , (4L6),(4L7)	214
2. Interior mirror, Onboard supply control unit	215
029 - Rain and light sensor	216-217
1. Rain and light sensor	216
2. Rain and light sensor, Onboard supply control unit	217
030 - Electrically operated rear lid	218-222
1. Electrically operated rear lid	218
2. Rear lid handle release button, Convenience system central control unit, Rear lid control unit	219
3. Operating unit for rear lid control, Convenience system central control unit, Rear lid control unit, Power latching for rear lid, Rear lid lock unit, Power latching motor for rear lid	220
4. Rear lid warning buzzer, Rear lid control unit, Rear lid drive unit	221
5. Rear lid power opening sender, Rear lid power opening sender 2, Rear lid power opening control unit	222
031 - Horn	223-224
1. Horn	223
2. Treble horn, Bass horn, Onboard supply control unit	224
032 - Entry and start authorisation	225-233
1. Entry and start authorisation	225
2. Convenience system central control unit	226
3. Button for luggage compartment manual release, Button for luggage compartment manual release, rear, Convenience system central control unit	227
4. Convenience system central control unit	228
5. Front lid remote release button, Contact sensor for driver exterior door handle, Contact sensor for front passenger exterior door handle, Driver door control unit, Convenience system central control unit	229

6. Entry and start authorisation button, Convenience system central control unit, Onboard supply control unit, Interior aerial 1 for entry and start system	230
7. Contact sensor for rear left exterior door handle, Contact sensor for rear right exterior door handle, Convenience system central control unit, Left aerial for entry and start authorisation, Right aerial for entry and start authorisation, Front aerial for entry and start authorisation	231
8. Convenience system central control unit, Luggage compartment aerial for entry and start system	232
9. Actuator for luggage compartment manual release, front, Actuator for luggage compartment release, front, Rear spoiler adjustment control unit, Convenience system central control unit, Aerial amplifier	233
033 - Heated rear window	234-236
1. Heated rear window	234
2. Suppression filter, Window aerial suppression filter, Heated rear window relay, Convenience system central control unit, Heated rear window	235
3. Operating and display unit for front air conditioning system, Heater and air conditioning system control unit	236
034 - Electromechanical steering	237-239
1. Electromechanical steering	237
2. Power steering control unit	238
3. Steering moment sender, Power steering control unit	239
035 - All-wheel drive , (GH3)	240-243
1. All-wheel drive , (GH3)	240
2. Data bus diagnostic interface, Axle differential lock control unit	241
3. Axle differential lock control unit, Rear three-phase current drive, Axle differential lock	242
4. Axle differential lock control unit, Axle differential lock	243
036 - Electrically adjustable rear spoiler	244-246
1. Electrically adjustable rear spoiler	244
2. Left cooling flap position sender, Right cooling flap position sender, Rear spoiler adjustment control unit, Data bus diagnostic interface	245
3. Actuator for luggage compartment manual release, front, Rear spoiler adjustment control unit, Drive unit for rear spoiler adjustment	246
037 - Anti-theft alarm system , (7AL)	247-248
1. Anti-theft alarm system , (7AL)	247
2. Interior monitoring sensor, Vehicle inclination sender, Anti-theft alarm sensor, Alarm horn, Convenience system central control unit, Front roof module	248
038 - Front camera for driver assist systems	249-251
1. Front camera for driver assist systems	249
2. Driver assist systems control unit, Front camera for driver assist systems	250
3. Front camera for driver assist systems, Windscreen heater for front sensors	251
039 - Adaptive cruise control , (8T4),(8T5)	252-253
1. Adaptive cruise control , (8T4),(8T5)	252
2. ABS control unit, Adaptive cruise control unit, Data bus diagnostic interface	253
040 - Sound system , (9VD)	254-258
1. Sound system , (9VD)	254
2. Control unit 1 for information electronics, Emergency call module control unit and communication unit	255
3. Control unit 1 for information electronics, Front left treble loudspeaker, Front right treble loudspeaker	256
4. Front left bass loudspeaker, Front right bass loudspeaker, Front left mid-range loudspeaker, Front right mid-range loudspeaker	257
5. Rear left treble loudspeaker, Rear left bass loudspeaker, Rear right treble loudspeaker, Rear right bass loudspeaker	258
041 - MMI (information electronics 1)	259-266
1. MMI (information electronics 1)	259
2. Data bus diagnostic interface, Control unit 1 for information electronics	260
3. Digital sound package control unit, Control unit 1 for information electronics, Emergency call module control unit and communication unit, Satellite tuner aerial	261
4. Control unit 1 for information electronics, Radio aerial 2, Aerial amplifier 2, Digital radio aerial	262
5. Control unit 1 for information electronics, Aerial, Aerial amplifier	263
6. Convenience system central control unit, Control unit 1 for information electronics, Aerial amplifier	264
7. Display unit for front information display and operating unit control unit, Control unit 1 for information electronics	265
8. Driver side volume regulator, Display unit for front information display and operating unit control unit, Charging unit 1 for mobile devices	266
042 - Communication . (IW3).(IW6)	267-271

1. Communication , (IW3),(IW6)	267
2. Emergency battery, telematics, Airbag control unit, Emergency call module control unit and communication unit	268
3. Digital sound package control unit, Control unit 1 for information electronics, Emergency call module control unit and communication unit, Emergency call module aerial 3, Loudspeaker for emergency call module, Wireless data transfer aerial	269
4. Emergency call module control unit and communication unit, GPS aerial, Emergency call module aerial, Emergency call module aerial 2, Wireless data transfer aerial 2, Emergency call module aerial 4	270
5. Breakdown assistance call button, Emergency assistance call button, Data bus diagnostic interface, Emergency call module control unit and communication unit, Telephone microphone, Front roof module	271
043 - Mobile telephone systems , (9ZE),(9ZV)	272-274
1. Mobile telephone systems , (9ZE),(9ZV)	272
2. Control unit 1 for information electronics, Charging unit 1 for mobile devices	273
3. Aerial amplifier for mobile telephone, LTE aerial 3	274
044 - USB connections for data transfer	275-278
1. USB connections for data transfer	275
2. Onboard supply control unit, USB hub, USB connection 1	276
3. USB hub, USB connection 1	277
4. Control unit 1 for information electronics, USB hub, USB charging socket 2	278
045 - Interface for external use , (IU3),(IU4)	279-281
1. Interface for external use , (IU3),(IU4)	279
2. Control unit with Android operating system	280
3. Control unit 1 for information electronics, Control unit with Android operating system	281
046 - High-voltage battery charging , (ES7)	282-291
1. High-voltage battery charging , (ES7)	282
2. Charging unit 1 for high-voltage battery	283
3. Charging unit 1 for high-voltage battery, Actuator for high-voltage charging flap lock 1, Data bus diagnostic interface, LED module 2 for charging socket 1	284
4. Charging unit 1 for high-voltage battery, Actuator for high-voltage charging flap lock 2, LED module 2 for charging socket 2	285
5. Charging unit 1 for high-voltage battery, Module for battery charge selector buttons, Module 2 for battery charge selector buttons, LED module for charging socket 1, LED module for charging socket 2	286
6. Charging unit 1 for high-voltage battery, Temperature sender for charging socket 2, High-voltage battery charging socket 2	287
7. Charging unit 1 for high-voltage battery, Actuator for high-voltage charging socket lock 1, Actuator for high-voltage charging socket lock 2, High-voltage battery charging socket 2	288
8. Charging unit 1 for high-voltage battery, Temperature sender for charging socket 1, High-voltage battery charging socket 1	289
9. Charging unit 1 for high-voltage battery, Power contactor with boost function, High-voltage battery charging socket 1	290
10. Power contactor with boost function	291
047 - High-voltage battery system , (J9I)	292-297
1. High-voltage battery system , (J9I)	292
2. Battery module 1, Battery module 5, Battery module 27, Battery module 28, Coupling point on high-voltage battery	293
3. Battery module 6, Battery module 13, Battery module 14, Battery module 19, Battery module 23, Battery module 24, Battery module 25, Battery module 26, Battery module 28	294
4. Battery module 2, Battery module 7, Battery module 9, Battery module 14, Battery module 20, Battery module 21, Battery module 22	295
5. Battery module 3, Battery module 4, Battery module 7, Battery module 8, Battery module 10, Battery module 11, Battery module 12, Battery module 15, Battery module 16	296
6. Battery module 16, Battery module 17, Battery module 18	297
048 - High-voltage battery system , (J9K)	298-304
1. High-voltage battery system , (J9K)	298
2. Battery module 9, Coupling point on high-voltage battery	299
3. Battery module 2, Battery module 5, Battery module 9, Battery module 10, Battery module 28, Battery module 29, Battery module 30, Battery module 31, Battery module 32, Battery module 33	300
4. Battery module 8, Battery module 10, Battery module 11, Battery module 12, Battery module 14, Battery module 15, Battery module 16, Battery module 17, Battery module 24, Battery module 25, Battery module 26	301
5. Battery module 1, Battery module 3, Battery module 4, Battery module 6, Battery module 7, Battery module 8	302
6. Battery module 13, Battery module 19, Battery module 21, Battery module 22, Battery module 23, Battery module 27	303

7. Battery temperature sender, Battery module 19, Igniter 3 for high-voltage battery isolation	304
049 - Thermal management	305-318
1. Thermal management	305
2. Thermal management coolant pump relay	306
3. Relay and fuse carrier 3	307
4. Coolant pump relay, Coolant shut-off valve relay, Relay and fuse carrier 3	308
5. Radiator fan relay, Radiator fan 2 relay	309
6. Data bus diagnostic interface, Thermal management control unit	310
7. Thermal management control unit, Coolant changeover valve 1, Coolant changeover valve 2	311
8. Thermal management control unit, Thermal management coolant pump 4, Changeover and mixing valve for thermal management, Changeover and mixing valve 2 for thermal management, Changeover and mixing valve 7 for thermal management	312
9. Coolant temperature sender 1 for thermal management, Coolant temperature sender 2 for thermal management, Coolant temperature sender 3 for thermal management, Coolant temperature sender 4 for thermal management, Coolant temperature sender 7 for thermal management, Coolant temperature sender 9 for thermal management, Thermal management control unit	313
10. Coolant shortage indicator sender 2, Coolant temperature sender 5 for thermal management, Coolant temperature sender 8 for thermal management, Thermal management control unit, Refrigerant expansion valve 2, Refrigerant expansion valve 3	314
11. Refrigerant pressure and temperature sender 3, Thermal management control unit, Refrigerant shut-off valve 2, Refrigerant shut-off valve 3, Refrigerant shut-off valve 5	315
12. Refrigerant pressure and temperature sender, Thermal management control unit, Power contactor with boost function, Thermal management coolant pump 2	316
13. Refrigerant pressure and temperature sender 2, Thermal management control unit, Radiator fan, Radiator fan 2, Changeover and mixing valve 4 for thermal management	317
14. Left cooling flap position sender, Right cooling flap position sender, Rear spoiler adjustment control unit	318
050 - High-voltage system	319-331
1. High-voltage system	319
2. Relay and fuse carrier 3	320
3. Airbag control unit, Fuse holder K, Maintenance connector for high-voltage system	321
4. Voltage converter for 800 V, 400 V, 48 V, 12 V, Control unit for air conditioner compressor	322
5. Voltage converter for 800 V, 400 V, 48 V, 12 V, Control unit for air conditioner compressor	323
6. Thermal management control unit, Power contactor with boost function, High-voltage heater (linear)	324
7. Charging unit 1 for high-voltage battery, Power contactor with boost function, Front three-phase current drive	325
8. Power contactor with boost function	326
9. High-voltage battery 1, Battery regulation control unit, Power contactor with boost function, Coupling point for switching unit for high-voltage battery	327
10. High-voltage battery 1, Coolant temperature sender 1 for high-voltage battery, Coolant temperature sender 2 for high-voltage battery, Battery regulation control unit, Coupling point for switching unit for high-voltage battery, Coolant pump for high-voltage battery	328
11. High-voltage battery 1, Battery regulation control unit, Coupling point for switching unit for high-voltage battery	329
12. High-voltage battery 1, Battery regulation control unit	330
13. High-voltage battery 1, Rear three-phase current drive	331
051 - Engine sound generator , (GM3),(GM4)	332-335
1. Engine sound generator , (GM3),(GM4)	332
2. Data bus diagnostic interface, Engine sound generator control unit 3	333
3. Engine sound generator control unit 3, Mid-range loudspeaker with additional internal loudspeaker, rear left, Mid-range loudspeaker with additional internal loudspeaker, rear right	334
4. Engine sound generator control unit 2, Actuator 3 for engine sound generator, Actuator 4 for engine sound generator	335
052 - Airbag systems for RHD vehicles , (L0R)	336-348
1. Airbag systems for RHD vehicles , (L0R)	336
2. Airbag control unit, Convenience system central control unit	337
3. Airbag control unit, Front left seat belt, Coupling point for switching unit for high-voltage battery	338
4. Front airbag crash sensor for driver side, Front airbag crash sensor for front passenger side, Airbag control unit, Front right seat belt	339
5. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on passenger side, Crash sensor for side airbag in B-pillar, driver side, Crash sensor for side airbag in B-pillar, passenger side, Airbag control unit	340
6. Key-operated switch to deactivate airbag on front passenger side. Airbag control unit. Rear side	341

airbag igniter on driver side, Rear side airbag igniter on passenger side	
7. Driver side belt switch, Driver seat adjustment operating unit, Belt switch for seat row 2, driver side, Belt switch for seat row 2, centre, Belt switch for seat row 2, passenger side, Driver side seat position sensor, Airbag control unit	342
8. Front passenger side belt switch, Front passenger seat adjustment operating unit, Seat occupied sensor on front passenger side, Front passenger side seat position sensor, Airbag control unit, Emergency call module control unit and communication unit	343
9. Airbag control unit, Side airbag igniter on driver side, Side airbag igniter on front passenger side	344
10. Airbag control unit, Onboard supply control unit, Driver side knee airbag igniter, Front passenger side knee airbag igniter, Diagnostic connection, Front roof module	345
11. Airbag control unit, Front passenger airbag unit, Rear belt tensioner igniter on driver side, Rear belt tensioner igniter on passenger side, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter	346
12. Crash sensor for power and control electronics, Crash sensor 2 for power and control electronics, Airbag control unit, Steering column electronics control unit, Airbag igniter on driver side, Igniter for exhaust valve for driver airbag	347
13. Airbag control unit, Data bus diagnostic interface, Lane change assist control unit 2	348
053 - Parking aid (PDC) , (7X2)	349-353
1. Parking aid (PDC) , (7X2)	349
2. Onboard supply control unit	350
3. Front right parking aid sender, Front centre right parking aid sender, Front centre left parking aid sender, Front left parking aid sender, Onboard supply control unit	351
4. Rear left parking aid sender, Rear centre left parking aid sender, Rear centre right parking aid sender, Rear right parking aid sender, Onboard supply control unit	352
5. Centre switch module in dash panel, Operating unit 1 for driver and convenience functions, Onboard supply control unit, Parking aid loudspeaker, Coupling point on dash panel, left	353
054 - Parking aid (PDC) , (7X5),(9X0)	354-361
1. Parking aid (PDC) , (7X5),(9X0)	354
2. Driver assist systems control unit	355
3. Front centre right parking aid sender, Front centre left parking aid sender, Front left parking aid sender, Driver assist systems control unit	356
4. Front right parking aid sender, Front left sender for park assist steering on left side of vehicle, Front right sender for park assist steering on right side of vehicle, Driver assist systems control unit	357
5. Rear left parking aid sender, Rear centre left parking aid sender, Rear centre right parking aid sender, Rear right parking aid sender, Driver assist systems control unit	358
6. Rear left park assist steering sender, Rear right park assist steering sender, Driver assist systems control unit	359
7. Centre switch module in dash panel, Onboard supply control unit, Driver assist systems control unit, Control unit for radio-controlled parking, Parking aid loudspeaker	360
8. Data bus diagnostic interface, Control unit for radio-controlled parking, Aerial 3 for radio-controlled parking, Aerial 4 for radio-controlled parking	361
055 - Door control units, driver side , (LOR)	362-372
1. Door control units, driver side , (LOR)	362
2. Driver door control unit, Driver assist systems control unit, Light for exterior door handle illumination, driver side	363
3. Driver door control unit, Driver door lock unit, Driver side window regulator motor, Driver side entry light	364
4. Operating unit for window regulator in driver door, Driver operating unit for memory settings, Driver door control unit, Central locking SAFELock function warning lamp	365
5. Operating unit for window regulator in driver door, Driver door control unit, Warning light for activated childproof lock	366
6. Exterior mirror adjuster, Driver side interior locking button for central locking system, Driver door control unit	367
7. Rear lid remote release button, Driver door control unit, Left overhead view camera, Driver side exterior mirror	368
8. Driver door control unit, Lane change assist warning lamp in driver side exterior mirror, Driver side exterior mirror	369
9. Rear driver side door control unit, Light for rear exterior door handle illumination, driver side	370
10. Rear exterior door handle switch, driver side, Rear driver side door control unit, Rear door lock unit, driver side, Rear driver side window regulator motor	371
11. Rear driver side interior locking button for central locking system, Rear driver side door control unit, Rear driver side entry light	372
056 - Door control units, passenger side , (LOR)	373-381
1. Door control units. passenger side . (LOR)	373

2. Front passenger door control unit, Driver assist systems control unit	374
3. Front passenger door control unit, Light for exterior door handle illumination, front passenger side, Front passenger door lock unit, Front passenger side window regulator motor	375
4. Window regulator switch in front passenger door, Front passenger side interior locking button for central locking system, Front passenger door control unit, Passenger side entry light	376
5. Front passenger door control unit, Lane change assist warning lamp in passenger side exterior mirror, Passenger side exterior mirror	377
6. Front passenger door control unit, Rear passenger side door control unit, Right overhead view camera, Passenger side exterior mirror	378
7. Rear passenger side door control unit, Light for rear exterior door handle illumination, passenger side, Rear door lock unit, passenger side	379
8. Operating unit in rear door, passenger side, Rear passenger side interior locking button for central locking system, Rear passenger side door control unit, Rear passenger side window regulator motor	380
9. Rear passenger side door control unit, Rear passenger side entry light	381
057 - Driver seat , (Q1J),(Q2J)	382-388
1. Driver seat , (Q1J),(Q2J)	382
2. Seat and steering column adjustment control unit with memory, Driver seat adjustment thermal fuse 1	383
3. Driver seat adjustment operating unit, Seat and steering column adjustment control unit with memory	384
4. Driver seat adjustment operating unit, Seat and steering column adjustment control unit with memory, Driver seat depth adjustment motor	385
5. Seat and steering column adjustment control unit with memory, Driver seat longitudinal adjustment motor, Driver seat rake adjustment motor, Driver seat height adjustment motor	386
6. Seat and steering column adjustment control unit with memory, Valve block 1 in driver seat, Valve block 2 in driver seat, Driver seat backrest adjustment motor, Compressor for multicontour driver seat	387
7. Onboard supply control unit	388
058 - Front passenger seat , (Q1J),(Q2J)	389-395
1. Front passenger seat , (Q1J),(Q2J)	389
2. Front passenger seat adjustment with memory control unit	390
3. Front passenger seat adjustment operating unit, Front passenger seat adjustment with memory control unit	391
4. Front passenger seat adjustment operating unit, Front passenger seat adjustment with memory control unit, Front passenger seat depth adjustment motor	392
5. Front passenger seat adjustment with memory control unit, Front passenger seat longitudinal adjustment motor, Front passenger seat rake adjustment motor, Front passenger seat height adjustment motor	393
6. Front passenger seat adjustment with memory control unit, Valve block 1 in front passenger seat, Valve block 2 in front passenger seat, Front passenger seat backrest adjustment motor, Compressor for multicontour front passenger seat	394
7. Onboard supply control unit	395
061 - Seat ventilation , (4D3),(4D5)	396-401
1. Seat ventilation , (4D3),(4D5)	396
2. Operating and display unit for rear air conditioning system, Remote-controlled air conditioning relay	397
3. Coupling point for front left seat, Coupling point for front right seat	398
4. Front left seat backrest fan 1	399
5. Front left seat cushion fan 1, Front right seat cushion fan 1	400
6. Front right seat backrest fan 1	401
062 - Interior lights , (QQ2)	402-415
1. Interior lights , (QQ2)	402
2. Driver vanity mirror contact switch, Front passenger vanity mirror contact switch, Front roof module, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror	403
3. Rear left reading light button, Rear right reading light button, Onboard supply control unit, Front roof module, Rear left interior light, Rear right interior light	404
4. Onboard supply control unit, Front luggage compartment light, Rear left footwell light, Rear right footwell light	405
5. Onboard supply control unit, Front left footwell light, Light 4 for dash panel background lighting	406
6. Front right footwell light, Light 1 for dash panel background lighting, Light 2 for dash panel background lighting, Light 3 for dash panel background lighting	407
7. Light 1 for front centre console background lighting, Light 2 for front centre console background lighting	408
8. Rear driver side door control unit. Light 1 for rear left door backaround lightina. Light for	409

rear driver side interior door handle illumination, Light for rear left door storage compartment illumination	
9. Rear driver side door control unit, Rear driver side entry light, Light for rear sill panel moulding background lighting, driver side	410
10. Rear passenger side door control unit, Light 1 for rear right door background lighting, Light for rear passenger side interior door handle illumination, Light for rear right door storage compartment illumination, Light for rear sill panel moulding background lighting, passenger side	411
11. Driver door control unit, Rear passenger side door control unit, Light for driver side interior door handle illumination, Light for left door storage compartment illumination, Rear passenger side entry light	412
12. Driver door control unit, Front passenger door control unit, Light 1 for front left door background lighting, Light for passenger side interior door handle illumination, Driver side entry light, Light for sill panel moulding background lighting, driver side	413
13. Front passenger door control unit, Light 1 for front right door background lighting, Light for right door storage compartment illumination, Light for sill panel moulding background lighting, front passenger side	414
14. Front passenger door control unit, Convenience system central control unit, Left luggage compartment light, Right luggage compartment light, Passenger side entry light	415
063 - Front seat heating , (4A3),(4A4)	416-421
1. Front seat heating , (4A3),(4A4)	416
2. Onboard supply control unit, Heated seat cushion for front left seat, Heater element for front left seat extension	417
3. Onboard supply control unit, Heated backrest for front left seat	418
4. Onboard supply control unit, Heated backrest for front right seat	419
5. Onboard supply control unit, Heater element with seat occupied recognition, front passenger side, Heated seat cushion for front right seat, Lateral support heater for front right seat, Heater element for front right seat extension	420
6. Operating and display unit for front air conditioning system, Button for left seat heating, Button for right seat heating, Onboard supply control unit, Seat occupied recognition control unit, Heater and air conditioning system control unit, Fuse holder O	421
064 - Rear seat heating , (4A4)	422-425
1. Rear seat heating , (4A4)	422
2. Operating and display unit for rear air conditioning system, Button for rear left seat heating, Button for rear right seat heating	423
3. Heated bench seat cushion for rear left seat, Heated backrest for rear left seat, Lateral support heater for rear left seat	424
4. Heated bench seat cushion for rear right seat, Heated backrest for rear right seat, Lateral support heater for rear right seat	425
065 - Headlights , (8IZ)	426-429
1. Headlights , (8IZ)	426
2. Output module 1 for right LED headlight, Onboard supply control unit, Front right headlight, Right headlight range control motor	427
3. Output module 1 for right LED headlight, Output module 1 for left LED headlight, Onboard supply control unit, Front left headlight, Front right headlight, Left headlight fan, Right headlight fan	428
4. Output module 1 for left LED headlight, Onboard supply control unit, Front left headlight, Left headlight range control motor	429
066 - Tail light clusters , (AV2)	430-433
1. Tail light clusters , (AV2)	430
2. Convenience system central control unit	431
3. Convenience system central control unit, Centre tail light cluster	432
4. Convenience system central control unit, Left tail light cluster, Right tail light cluster, Heated rear window	433
067 - Garage door opener , (VC2)	434-435
1. Garage door opener , (VC2)	434
2. Onboard supply control unit, Garage door operation control unit, Programming aerial for garage door opener	435
068 - Steering column adjustment , (2C7)	436-438
1. Steering column adjustment , (2C7)	436
2. Steering column adjustment switch, Onboard supply control unit, Control unit for electrically adjustable steering column	437
3. Control unit for electrically adjustable steering column, Steering column vertical adjustment motor, Steering column axial adjustment motor	438
069 - Electromechanical rear wheel steering , (0N5)	439-441
1. Electromechanical rear wheel steering , (0N5)	439
2. Rear wheel steering control unit, Rear three-phase current drive	440
3. Rear wheel steering sender 1. Rear wheel steering sender 2. Rear wheel steering control unit	441

070 - Assist systems , (JX1)	442-444
1. Assist systems , (JX1)	442
2. Front left radar sensor control unit for object detection	443
3. Front right radar sensor control unit for object detection, Driver assist systems control unit	444
071 - Overhead view camera , (KA6)	445-448
1. Overhead view camera , (KA6)	445
2. Driver assist systems control unit	446
3. Driver assist systems control unit, Front overhead view camera, Rear overhead view camera	447
4. Driver assist systems control unit, Driver side exterior mirror, Passenger side exterior mirror	448
072 - Lane change assist , (7Y1)	449-453
1. Lane change assist , (7Y1)	449
2. Lane change assist control unit 2	450
3. Lane change assist control unit, Lane change assist control unit 2	451
4. Lane change assist control unit, Rear driver side door control unit, Rear passenger side door control unit	452
5. Driver door control unit, Front passenger door control unit, Driver side exterior mirror, Passenger side exterior mirror	453
073 - Reversing camera (Rear Assist) , (KA2)	454-455
1. Reversing camera (Rear Assist) , (KA2)	454
2. Reversing camera system control unit, Control unit 1 for information electronics	455
074 - Tyre Pressure Monitoring System , (7K3),(7K4)	456-457
1. Tyre Pressure Monitoring System , (7K3),(7K4)	456
2. Tyre Pressure Monitoring System control unit	457
075 - Night vision system , (9R1)	458-459
1. Night vision system , (9R1)	458
2. Control unit for night vision system, Camera for night vision system	459
076 - Head-up display , (KS1)	460-461
1. Head-up display , (KS1)	460
2. Control unit for head-up display	461
077 - Sound system , (9VS)	462-469
1. Sound system , (9VS)	462
2. Control unit 1 for information electronics	463
3. Control unit 1 for information electronics, Front left treble loudspeaker 2, Front right treble loudspeaker 2, Front roof module	464
4. Control unit 1 for information electronics, Front left treble loudspeaker, Front right treble loudspeaker, Front left mid-range loudspeaker, Front right mid-range loudspeaker, Centre loudspeaker	465
5. Rear left treble loudspeaker, Rear left bass loudspeaker, Rear right treble loudspeaker, Rear right bass loudspeaker	466
6. Digital sound package control unit, Front left bass loudspeaker	467
7. Digital sound package control unit, Front right bass loudspeaker, Left effect loudspeaker, Right effect loudspeaker, Subwoofer, Dual subwoofer loudspeaker 1, Dual subwoofer loudspeaker 2	468
8. Digital sound package control unit, Emergency call module control unit and communication unit	469
078 - Communication , (7I4)	470-472
1. Communication , (7I4)	470
2. Data bus diagnostic interface, Interface control unit for telematics	471
3. Telephone and telematics control unit, Interface control unit for telematics, Aerial module for telephone and telematics, Aerial 1 on telephone and telematics control unit, Aerial 2 on telephone and telematics control unit, Aerial 3 on telephone and telematics control unit	472
079 - Communication, Japan , (ER5)	473-474
1. Communication, Japan , (ER5)	473
2. Chip card reader control unit, Control unit 1 for information electronics, Dedicated short-range communication aerial	474
080 - High-voltage battery charging , (ES6)	475-485
1. High-voltage battery charging , (ES6)	475
2. Charging unit 1 for high-voltage battery	476
3. Charging unit 1 for high-voltage battery, Actuator for high-voltage charging flap lock 1, Data bus diagnostic interface, LED module 2 for charging socket 1	477
4. Charging unit 1 for high-voltage battery, Actuator for high-voltage charging flap lock 2, LED module 2 for charging socket 2	478
5. Charging unit 1 for high-voltage battery, Module for battery charge selector buttons, Module 2 for battery charge selector buttons	479
6. Charging unit 1 for high-voltage battery, High-voltage battery charging socket 2	480
7. Charging unit 1 for high-voltage battery, Actuator for high-voltage charging socket lock 2, Temperature sender for charging socket 2, High-voltage battery charging socket 2	481
8. Charging unit 1 for high-voltage battery, Actuator for high-voltage charging socket lock 1, High-voltage battery charging socket 1	482

9. Charging unit 1 for high-voltage battery, High-voltage battery charging socket 1	483
10. Charging unit 1 for high-voltage battery, Power contactor with boost function	484
11. Power contactor with boost function	485
081 - High-voltage battery charging , (ES8)	486-495
1. High-voltage battery charging , (ES8)	486
2. Charging unit 1 for high-voltage battery	487
3. Charging unit 1 for high-voltage battery, Actuator for high-voltage charging flap lock 1, Data bus diagnostic interface, LED module 2 for charging socket 1	488
4. Charging unit 1 for high-voltage battery, Actuator for high-voltage charging flap lock 2, LED module 2 for charging socket 2	489
5. Charging unit 1 for high-voltage battery, Module for battery charge selector buttons, Module 2 for battery charge selector buttons, LED module for charging socket 1, LED module for charging socket 2	490
6. Charging unit 1 for high-voltage battery, High-voltage battery charging socket 2	491
7. Charging unit 1 for high-voltage battery, Actuator for high-voltage charging socket lock 2, High-voltage battery charging socket 1	492
8. Charging unit 1 for high-voltage battery, Blocking diode, High-voltage battery charging socket 1	493
9. Charging unit 1 for high-voltage battery, Power contactor with boost function	494
10. Power contactor with boost function	495
082 - High-voltage battery charging , (ES5)	496-505
1. High-voltage battery charging , (ES5)	496
2. Charging unit 1 for high-voltage battery	497
3. Charging unit 1 for high-voltage battery, Actuator for high-voltage charging flap lock 1, Data bus diagnostic interface, LED module 2 for charging socket 1	498
4. Charging unit 1 for high-voltage battery, Actuator for high-voltage charging flap lock 2, LED module 2 for charging socket 2	499
5. Charging unit 1 for high-voltage battery, Module for battery charge selector buttons, Module 2 for battery charge selector buttons, LED module for charging socket 1, LED module for charging socket 2	500
6. Charging unit 1 for high-voltage battery, High-voltage battery charging socket 2	501
7. Charging unit 1 for high-voltage battery, Actuator for high-voltage charging socket lock 2, Temperature sender for charging socket 2, High-voltage battery charging socket 2	502
8. Charging unit 1 for high-voltage battery, High-voltage battery charging socket 1	503
9. Charging unit 1 for high-voltage battery, Power contactor with boost function, High-voltage battery charging socket 1	504
10. Power contactor with boost function, High-voltage battery charging socket 1	505
083 - Electric drive system, motor control unit	506-514
1. Electric drive system, motor control unit	506
2. Engine/motor control unit	507
3. Accelerator pedal module, Engine/motor control unit	508
4. Gearbox oil temperature sender, Clutch position sender, Clutch jaw position sensor, Engine/motor control unit, Brake servo	509
5. Engine/motor control unit, Running gear control unit, Gear actuator	510
6. Parking lock solenoid, Gearbox auxiliary hydraulic pump	511
7. Selector lever	512
8. Selector lever, Gearbox speed sender, Driver assist systems control unit, Rear three-phase current drive	513
9. ABS control unit, Onboard supply control unit, Steering column electronics control unit, Data bus diagnostic interface	514
084 - Adaptive suspension	515-524
1. Adaptive suspension	515
2. ABS control unit, Convenience system central control unit, Engine/motor control unit, Running gear control unit	516
3. Running gear control unit, Air compressor for suspension control	517
4. Running gear control unit, Valve block for adaptive suspension	518
5. Rear left vehicle level sender, Rear right vehicle level sender, Running gear control unit	519
6. Front left vehicle level sender, Front right vehicle level sender, Running gear control unit, Rear left shock absorber damping adjustment valve, Rear right shock absorber damping adjustment valve	520
7. Rear right wheel acceleration sender, Rear right body acceleration sender, Running gear control unit, Rear right air spring module	521
8. Front left wheel acceleration sender, Front left body acceleration sender, Running gear control unit, Front left suspension strut module	522
9. Front right wheel acceleration sender, Front right body acceleration sender, Running gear control unit, Front right suspension strut module	523
10. Rear left wheel acceleration sender. Rear left body acceleration sender. Running gear control	524

unit, Rear left air spring module	
085 - Toll detection system , (9B1),(B1P)	525-526
1. Toll detection system , (9B1),(B1P)	525
2. Toll collection sender, Fuse holder O	526
801 - - Fitting locations: Earth points - 1	527-540
1. - Fitting locations: Earth points	527-540
1.1 Earth points in front part of vehicle	529-530
1.1.1 Front from left	529
1.1.2 Front from right	530
1.2 Earth points in middle part of vehicle	531-535
1.2.1 Front left of interior	532
1.2.2 Front right of interior	532
1.2.3 Rear interior	533
1.2.4 in left seat	534
1.2.5 in right seat	535
1.3 Earth points in rear part of vehicle	536-537
1.3.1 Left luggage compartment	536
1.3.2 Right of luggage compartment	537
1.4 Earth points in underbody	538-540
1.4.1 Front of underbody	538
1.4.2 Rear underbody	539-540
802 - -Fitting locations: Fuses - 1	541-579
1. -Fitting locations: Fuses	541-579
1.1 Fuse holder A -SA-	545-546
1.1.1 Fitting location fuse holder A -SA-	545
1.1.2 Fuse assignment on fuse holder A -SA-	546
1.2 Fuse holder B -SB-	547-548
1.2.1 Fitting location of fuse holder B -SB-	547
1.2.2 Fuse assignment on fuse holder B -SB-	548
1.3 Fuse holder C -SC-	549-550
1.3.1 Fitting location of fuse holder C -SC-	549
1.3.2 Fuse assignment, fuse holder C -SC-	550
1.4 Fuse holder D -SD-	551
1.4.1 Fitting location, fuse holder D -SD-	551
1.4.2 Fuse assignment on fuse holder D -SD-	552
1.5 Fuse holder F -SF-	552-553
1.5.1 Fitting location, fuse holder F -SF-	553
1.5.2 Fuse assignment on fuse holder F -SF-	554
1.6 Fuse holder G -SG-	554-555
1.6.1 Fitting location of fuse holder G -SG-	554
1.6.2 Fuse assignment on fuse holder G -SG-	555
1.7 Fuse holder H -SH-	556-557
1.7.1 Fitting location fuse holder H -SH-	556
1.7.2 Fuse assignment fuse holder H -SH-	557
1.8 Fuse holder K -SK-	558-559
1.8.1 Fitting location of fuse holder K -SK-	558
1.8.2 Fuse assignment of fuse holder K -SK-	559
1.9 Fuse holder L -SL-	560-561
1.9.1 Fitting location, fuse folder L -SL-	560
1.9.2 Fuse assignment, fuse holder L -SL-	561
1.10 Fuse holder M -SM-	562-563
1.10.1 Fitting location, fuse holder M -SM-	562-563
1.10.2 Fuse assignment, fuse holder M -SM-	564
1.11 Fuse holder O -SO-	564-566
1.11.1 Fitting location, fuse holder O -SO-, left-hand drive models	564
1.11.2 Fitting location, fuse holder O -SO-, right-hand drive models	565
1.11.3 Fuse assignment, fuse holder O -SO-	566
1.12 Fuse holder P -SP-	567-569
1.12.1 Fitting location, fuse holder P -SP-, left-hand drive models	567
1.12.2 Fitting location, fuse holder P -SP-, right-hand drive models	568
1.12.3 Fuse assignment, fuse holder P -SP-	569
1.13 Single fuses, relay and fuse carrier 1 -SR1-	570-571
1.13.1 Fitting location of single fuses, relay and fuse carrier 1 -SR1-	570-571
1.13.2 Fuse assignment of single fuses, relay and fuse carrier 1 -SR1-	572
1.14 Single fuses, relay and fuse carrier 2 -SR2-	572-573
1.14.1 Fitting location of single fuses. relay and fuse carrier 2 -SR2-	572-573

1.14.2 Fuse assignment of single fuses, relay and fuse carrier 2 -SR2-	574
1.15 Single fuses, relay and fuse carrier 4 -SR4-	574-575
1.15.1 Fitting location of single fuses, relay and fuse carrier 4 -SR4-	574
1.15.2 Fuse assignment of single fuses, relay and fuse carrier 4 -SR4-	575
1.16 Wiring junction -TV1-	576-579
1.16.1 Fitting location of wiring junction -TV1-	576
1.16.2 Fuse assignment, wiring junction -TV1-	577-579
803 - - Fitting locations: Relays - 1	580-584
1. - Fitting locations: Relays	580-584
1.1 Relay and fuse carrier 1 -SR1-	580
1.2 Relay and fuse carrier 2 -SR2-	581
1.3 Relay and fuse carrier 3 -SR3-	582
1.4 Relay and fuse carrier 4 -SR4-	583-584
804 - - Fitting locations: front part of vehicle - 1	585-600
1. - Fitting locations: front part of vehicle	585-600
1.1 Front, view from front	590
1.2 Front, view from left	591-595
1.2.1 Front, view from left, part 1	592-593
1.2.2 Front, view from left, part 2	594-595
1.3 Front, view from right	596-600
1.3.1 Front, view from right, part 1	596-597
1.3.2 Front, view from right, part 2	598-600
805 - - Fitting locations: middle part of vehicle - 1	601-660
1. - Fitting locations: middle part of vehicle	601-660
1.1 At front of interior	622-639
1.1.1 Front left of interior, LHD models	622
1.1.2 Front left of interior, RHD models	623
1.1.3 Left footwell, LHD models	624
1.1.4 Left footwell, right-hand drive models	625
1.1.5 Front right of interior, LHD models	626
1.1.6 Front right of interior, RHD models	627
1.1.7 Right footwell, left-hand drive models	628
1.1.8 Right footwell, RHD models	629
1.1.9 Dash panel, LHD models	630
1.1.10 Dash panel, RHD models	631
1.1.11 Steering wheel	632
1.1.12 Steering column	633
1.1.13 Front centre console	634
1.1.14 Left front seat, LHD models	635
1.1.15 Left front seat, RHD models	636
1.1.16 Right front seat, LHD models	637-638
1.1.17 Right front seat, RHD models	639
1.2 Rear interior	640-645
1.2.1 Rear interior, view from left, LHD models	640
1.2.2 Rear interior, view from left, RHD models	641
1.2.3 Rear interior, view of centre	642
1.2.4 Rear interior, view from right, LHD models	643
1.2.5 Rear interior, view from right, RHD models	644
1.2.6 Rear seats	645
1.3 Roof	646-647
1.4 Doors	648-655
1.4.1 Driver door, left-hand drive models	648
1.4.2 Driver door, right-hand drive models	649
1.4.3 Front passenger door, left-hand drive models	650
1.4.4 Front passenger door, right-hand drive models	651
1.4.5 Rear left door, LHD models	652
1.4.6 Rear left door, RHD models	653
1.4.7 Rear right door, LHD models	654
1.4.8 Rear right door, RHD models	655
1.5 Heater and air conditioning unit	656-658
1.5.1 Front heater and air conditioner unit, part 1	657
1.5.2 Front heater and air conditioner unit, part 2	657-658
1.6 Connector assignments	659-660
1.6.1 Connector assignment for onboard supply control unit -J519-	659-660
806 - - Fitting locations: rear part of vehicle - 1	661-668
1. - Fitting locations: rear part of vehicle	661-668

1.1 Rear lid	663
1.2 Rear bumper	663
1.3 Rear side, view from left	664
1.4 Rear side, view from right	665-666
1.5 Connector assignments	667-668
1.5.1 Connector assignment for rear lid power opening control unit -J938-	667-668
807 - -Fitting locations: Vehicle underbody - 1	669-680
1. -Fitting locations: vehicle underbody	669-680
1.1 Front of underbody	673
1.2 Rear underbody	674-675
1.3 Rear axle electric drive	676
1.4 Attachment parts of high-voltage battery 1 -AX2-	677
1.5 Battery modules of high-voltage battery 1 -AX2-	678-680
830 - -Connector views: parts with prefix A to D - 1	681-688
1. -Connector views: parts with prefix A to D	681-688
1.1 Battery -A-	681
1.1.1 2-pin connector -T2jf-	681
1.2 Voltage converter for 800 V, 400 V, 48 V, 12 V -A48-	681-683
1.2.1 5-pin connector -T5g-	682
1.2.2 5-pin connector -T5au-	682
1.2.3 12-pin connector -T12x-	683
1.3 High-voltage battery 1 -AX2-	684
1.3.1 4-pin connector -T4fe-	684
1.3.2 6-pin connector -T6o-	684
1.4 Charging unit 1 for high-voltage battery -AX4-	685-688
1.4.1 5-pin connector -T5bi-	685
1.4.2 8-pin connector -T8aa-	686
1.4.3 8-pin connector -T8ab-	687
1.4.4 60-pin connector -T60a-	687-688
831 - -Connector views: parts with prefix E - 1	689-723
1. -Connector views: parts with prefix E	689-723
1.1 Light switch -E1-	690
1.1.1 4-pin connector -T4n-	690
1.2 Driver side belt switch -E24-	691
1.2.1 2-pin connector -T2aj-	691
1.3 Front passenger side belt switch -E25-	691
1.3.1 2-pin connector -T2al-	691
1.4 Glove compartment light switch -E26-	692
1.4.1 3-pin connector -T3l-	692
1.5 Driver side volume regulator -E67-	693
1.5.1 6-pin connector -T6l-	693
1.6 Operating and display unit for front air conditioning system -E87-	694
1.6.1 12-pin connector -T12i-	694
1.7 Steering column adjustment switch -E167-	695
1.7.1 3-pin connector -T3k-	695
1.8 Key operated switch to deactivate front passenger side airbag -E224-	696
1.8.1 6-pin connector -T6h-	696
1.9 Rear lid remote release button -E233-	697
1.9.1 4-pin connector -T4p-	697
1.10 Rear lid handle release button -E234-	698
1.10.1 2-pin connector -T2au-	698
1.11 Operating and display unit for rear air conditioning system -E265-	699-700
1.11.1 3-pin connector -T3bn-	699
1.11.2 8-pin connector -T8n-	700
1.12 Driver side interior locking button for central locking system -E308-	701
1.12.1 4-pin connector -T4q-	701
1.13 Front passenger side interior locking button for central locking system -E309-	701
1.13.1 4-pin connector -T4r-	701
1.14 Selector lever -E313-	702-703
1.14.1 10-pin connector -T10o-	702
1.14.2 10-pin connector -T10y-	703
1.15 Entry and start authorisation button -E408-	704
1.15.1 6-pin connector -T6f-	704
1.16 Driver side operating unit for memory settings -E464-	704
1.16.1 5-pin connector -T5h-	704
1.17 Driver seat adjustment operating unit -E470-	705-706

1.17.1 12-pin connector -T12j-	705
1.17.2 15-pin connector -T15a-	706
1.18 Front passenger seat adjustment operating unit -E471-	707
1.18.1 12-pin connector -T12k-	707
1.18.2 15-pin connector -T15b-	707
1.19 Button for emergency luggage compartment release -E596-	708
1.19.1 6-pin connector -T6k-	708
1.20 Rear driver side interior locking button for central locking system -E717-	709
1.20.1 4-pin connector -T4s-	709
1.21 Rear passenger side interior locking button for central locking system -E718-	710
1.21.1 4-pin connector -T4hs-	710
1.22 Button for luggage compartment manual release, rear -E904-	711
1.22.1 6-pin connector -T6m-	711
1.23 Bonnet remote release button -E975-	712
1.23.1 6-pin connector -T6g-	712
1.24 Interior mirror -EX5-	713
1.24.1 8-pin connector -T8o-	713
1.25 Exterior mirror adjuster -EX11-	714
1.25.1 4-pin connector -T4t-	714
1.26 Centre switch module in dash panel -EX22-	715
1.26.1 20-pin connector -T20a-	715
1.27 Window regulator switch in front passenger door -EX27-	716
1.27.1 4-pin connector -T4o-	716
1.28 Module for battery charge selector buttons -EX32-	717
1.28.1 3-pin connector -T3m-	717
1.29 Operating unit for driver door window regulator -EX36-	718
1.29.1 10-pin connector -T10i-	718
1.30 Module 2 for battery charge selector buttons -EX40-	719
1.30.1 3-pin connector -T3n-	719
1.31 Operating unit for rear lid control -EX58-	720
1.31.1 6-pin connector -T6j-	720
1.32 Operating unit in rear door, front passenger side -EX60-	721
1.32.1 4-pin connector -T4ht-	721
1.33 Operating unit in rear driver side door -EX61-	722-723
1.33.1 4-pin connector -T4u-	722-723
832 - -Connector views: parts with prefix F - 1	724-734
1. -Connector views: parts with prefix F	724-734
1.1 Brake fluid level warning contact -F34-	724
1.1.1 2-pin connector -T2av-	724
1.2 Driver side vanity mirror contact switch -F147-	725
1.2.1 2-pin connector -T2as-	725
1.3 Front passenger side vanity mirror contact switch -F148-	725
1.3.1 2-pin connector -T2at-	725
1.4 Bonnet contact switch -F266-	726
1.4.1 2-pin connector -T2aw-	726
1.5 Belt switch for seat row 2, driver side -F390-	727
1.5.1 2-pin connector -T2ao-	727
1.6 Belt switch for seat row 2, middle -F391-	728
1.6.1 2-pin connector -T2ah-	728
1.7 Belt switch for seat row 2, passenger side -F392-	729
1.7.1 2-pin connector -T2aq-	729
1.8 Actuator for high-voltage charging flap lock 1 -F496-	730
1.8.1 4-pin connector -T4v-	730
1.9 Actuator for high-voltage charging flap lock 2 -F497-	731
1.9.1 4-pin connector -T4w-	731
1.10 Actuator for luggage compartment manual release, front -F564-	732
1.10.1 2-pin connector -T2ax-	732
1.11 Actuator for luggage compartment release, front -F573-	733-734
1.11.1 2-pin connector -T2ay-	733-734
833 - -Connector views: parts with prefix G - 1	735-827
1. -Connector views: parts with prefix G	735-827
1.1 Ambient temperature sensor -G17-	738
1.1.1 2-pin connector -T2bd-	738
1.2 Windscreen washer fluid level sender -G33-	739
1.2.1 2-pin connector -T2bp-	739
1.3 Front left brake pad wear sender -G34-	739

1.3.1 2-pin connector -T2br-	739
1.4 Front right brake pad wear sender -G35-	740
1.4.1 2-pin connector -T2ko-	740
1.5 Rear left brake pad wear sender -G36-	741
1.5.1 2-pin connector -T2bv-	741
1.6 Rear right brake pad wear sender -G37-	742
1.6.1 2-pin connector -T2kr-	742
1.7 Gearbox speed sender -G38-	743
1.7.1 2-pin connector -T2cl-	743
1.8 Rear right speed sensor -G44-	744
1.8.1 2-pin connector -T2kj-	744
1.9 Front right speed sensor -G45-	745
1.9.1 2-pin connector -T2kl-	745
1.10 Rear left speed sensor -G46-	746
1.10.1 2-pin connector -T2bz-	746
1.11 Front left speed sensor -G47-	747
1.11.1 2-pin connector -T2ca-	747
1.12 Dash panel temperature sensor -G56-	748
1.12.1 4-pin connector -T4cw-	748
1.13 Rear left vehicle level sender -G76-	749
1.13.1 3-pin connector -T3ak-	749
1.14 Rear right vehicle inclination sender -G77-	750
1.14.1 3-pin connector -T3al-	750
1.15 Front left vehicle level sender -G78-	751
1.15.1 3-pin connector -T3am-	751
1.16 Gearbox oil temperature sender -G93-	752
1.16.1 2-pin connector -T2de-	752
1.17 Sunlight penetration photosensor -G107-	753
1.17.1 4-pin connector -T4ad-	753
1.18 Seat occupied sensor on front passenger side -G128-	754
1.18.1 2-pin connector -T2bb-	754
1.19 Side airbag crash sensor on driver side -G179-	755
1.19.1 2-pin connector -T2co-	755
1.20 Side airbag crash sensor on front passenger side -G180-	756
1.20.1 2-pin connector -T2cp-	756
1.21 Rear left parking aid sender -G203-	757-758
1.21.1 3-pin connector -T3o-	757
1.21.2 3-pin connector -T3p-	758
1.22 Rear centre left parking aid sender -G204-	759
1.22.1 3-pin connector -T3q-	759
1.22.2 3-pin connector -T3r-	759
1.23 Rear centre right parking aid sender -G205-	760-761
1.23.1 3-pin connector -T3s-	760
1.23.2 3-pin connector -T3t-	761
1.24 Rear right parking aid sender -G206-	762
1.24.1 3-pin connector -T3u-	762
1.24.2 3-pin connector -T3v-	762
1.25 Front right parking aid sender -G252-	763-764
1.25.1 3-pin connector -T3x-	763
1.25.2 3-pin connector -T3y-	764
1.26 Front centre right parking aid sender -G253-	765
1.26.1 3-pin connector -T3z-	765
1.26.2 3-pin connector -T3aa-	765
1.27 Front centre left parking aid sender -G254-	766-767
1.27.1 3-pin connector -T3ab-	766
1.27.2 3-pin connector -T3ac-	767
1.28 Front left parking aid sender -G255-	768
1.28.1 3-pin connector -T3ad-	768
1.28.2 3-pin connector -T3ae-	768
1.29 Rear side airbag crash sensor on driver side -G256-	769
1.29.1 2-pin connector -T2be-	769
1.30 Rear side airbag crash sensor on front passenger side -G257-	770
1.30.1 2-pin connector -T2bg-	770
1.31 Left footwell vent temperature sender -G261-	771
1.31.1 2-pin connector -T2bi-	771
1.32 Right footwell vent temperature sender -G262-	772

1.32.1 2-pin connector -T2bj-	772
1.33 Front airbag crash sensor for driver side -G283-	773
1.33.1 2-pin connector -T2bk-	773
1.34 Front airbag crash sensor for front passenger side -G284-	774
1.34.1 2-pin connector -T2bm-	774
1.35 Front right vehicle level sender -G289-	775
1.35.1 3-pin connector -T3af-	775
1.36 Evaporator temperature sensor -G308-	776
1.36.1 2-pin connector -T2bo-	776
1.37 Front left wheel acceleration sender -G337-	777
1.37.1 2-pin connector -T2li-	777
1.38 Front right wheel acceleration sender -G338-	778
1.38.1 2-pin connector -T2lo-	778
1.39 Rear left wheel acceleration sender -G339-	779
1.39.1 2-pin connector -T2bq-	779
1.40 Rear right wheel acceleration sender -G340-	780
1.40.1 2-pin connector -T2lh-	780
1.41 Front left body acceleration sender -G341-	781
1.41.1 2-pin connector -T2bs-	781
1.42 Front right body acceleration sender -G342-	782
1.42.1 2-pin connector -T2bt-	782
1.43 Front left chest vent temperature sensor -G385-	783
1.43.1 2-pin connector -T2bw-	783
1.44 Front right chest vent temperature sensor -G386-	784
1.44.1 2-pin connector -T2bx-	784
1.45 Refrigerant pressure and temperature sender -G395-	785
1.45.1 4-pin connector -T4ae-	785
1.46 Rain and light sensor -G397-	786
1.46.1 3-pin connector -T3an-	786
1.47 Driver door exterior handle contact sensor -G415-	787
1.47.1 4-pin connector -T4af-	787
1.48 Front passenger door exterior handle contact sensor -G416-	788
1.48.1 4-pin connector -T4ag-	788
1.49 Contact sensor for rear left exterior door handle -G417-	789
1.49.1 4-pin connector -T4ah-	789
1.50 Contact sensor for rear right exterior door handle -G418-	790
1.50.1 4-pin connector -T4fq-	790
1.51 Toll collection sender -G459-	791
1.51.1 4-pin connector -T4hu-	791
1.52 Clutch position sender -G476-	792
1.52.1 4-pin connector -T4ai-	792
1.53 Front left sender for park assist steering on left side of vehicle -G568-	793
1.53.1 3-pin connector -T3ag-	793
1.54 Front right sender for park assist steering on right side of vehicle -G569-	794
1.54.1 3-pin connector -T3ah-	794
1.55 Potentiometer in left centre vent -G626-	795
1.55.1 5-pin connector -T5at-	795
1.56 Potentiometer in left side vent -G628-	796
1.56.1 5-pin connector -T5ar-	796
1.57 Potentiometer in right side vent -G629-	797
1.57.1 5-pin connector -T5as-	797
1.58 Vent temperature sender for rear left footwell -G637-	798
1.58.1 2-pin connector -T2cj-	798
1.59 Vent temperature sender for rear right footwell -G638-	799
1.59.1 2-pin connector -T2ck-	799
1.60 Rear left body acceleration sender -G699-	800
1.60.1 2-pin connector -T2cm-	800
1.61 Rear right body acceleration sender -G700-	801
1.61.1 2-pin connector -T2cn-	801
1.62 Rear left park assist steering sender -G716-	802
1.62.1 3-pin connector -T3ai-	802
1.63 Rear right park assist steering sender -G717-	803
1.63.1 3-pin connector -T3aj-	803
1.64 Battery temperature sender -G729-	804
1.64.1 4-pin connector -T4c-	804
1.65 Refrigerant pressure and temperature sender 2 -G826-	805

1.65.1 4-pin connector -T4ak-	805
1.66 Refrigerant pressure and temperature sender 3 -G827-	806
1.66.1 4-pin connector -T4am-	806
1.67 Coolant shortage indicator sender 2 -G837-	807
1.67.1 2-pin connector -T2cs-	807
1.68 Crash sensor for power and control electronics -G871-	808
1.68.1 2-pin connector -T2ct-	808
1.69 Coolant temperature sender 1 for high-voltage battery -G898-	809
1.69.1 2-pin connector -T2cu-	809
1.70 Coolant temperature sender 2 for high-voltage battery -G899-	810
1.70.1 2-pin connector -T2cw-	810
1.71 Coolant temperature sender 1 for thermal management -G902-	811
1.71.1 2-pin connector -T2da-	811
1.72 Coolant temperature sender 2 for thermal management -G903-	812
1.72.1 2-pin connector -T2df-	812
1.73 Coolant temperature sender 3 for thermal management -G904-	813
1.73.1 2-pin connector -T2cy-	813
1.74 Coolant temperature sender 4 for thermal management -G905-	814
1.74.1 2-pin connector -T2dd-	814
1.75 Coolant temperature sender 5 for thermal management -G906-	815
1.75.1 2-pin connector -T2db-	815
1.76 Coolant temperature sender 7 for thermal management -G908-	816
1.76.1 2-pin connector -T2dc-	816
1.77 Air conditioner sensor for fine particle concentration -G930-	817
1.77.1 3-pin connector -T3ao-	817
1.78 External air quality and air humidity sensor -G935-	818
1.78.1 3-pin connector -T3w-	818
1.79 Coolant temperature sender 8 for thermal management -G968-	819
1.79.1 2-pin connector -T2cz-	819
1.80 Coolant temperature sender before heat exchanger -G979-	820
1.80.1 4-pin connector -T4an-	820
1.81 Clutch jaw position sensor -G1016-	821
1.81.1 4-pin connector -T4ac-	821
1.82 Coolant temperature sender 9 for thermal management -G1017-	822
1.82.1 2-pin connector -T2az-	822
1.83 Side airbag crash sensor in B-pillar, driver side -G1101-	823
1.83.1 2-pin connector -T2cf-	823
1.84 Side airbag crash sensor in B-pillar, front passenger side -G1102-	824
1.84.1 2-pin connector -T2ch-	824
1.85 Crash sensor 2 for power and control electronics -G1113-	825
1.85.1 2-pin connector -T2ba-	825
1.86 Accelerator pedal module -GX2-	826-827
1.86.1 6-pin connector -T6n-	826-827
834 - -Connector views: parts with prefix H to I - 1	828-831
1. -Connector views: parts with prefix H to I	828-831
1.1 Treble horn -H2-	828
1.1.1 2-pin connector -T2dg-	828
1.2 Bass horn -H7-	829
1.2.1 2-pin connector -T2di-	829
1.3 Alarm horn -H12-	829
1.3.1 3-pin connector -T3ap-	829
1.4 Rear lid warning buzzer -H32-	830-831
1.4.1 2-pin connector -T2dh-	830-831
835 - -Connector views: parts with prefix J - 1	832-990
1. -Connector views: parts with prefix J	832-990
1.1 Heated rear window relay -J9-	835
1.1.1 9-pin connector -T9f-	835
1.2 Radiator fan relay -J26-	836
1.2.1 7-pin connector -T7b-	836
1.3 ABS control unit -J104-	837
1.3.1 46-pin connector -T46a-	837
1.4 Fresh air blower control unit -J126-	838
1.4.1 4-pin connector -T4dq-	838
1.5 Seat and steering column adjustment control unit with memory -J136-	839-842
1.5.1 4-pin connector -T4fj-	839
1.5.2 6-pin connector -T6an-	840

1.5.3 20-pin connector -T20m-	841
1.5.4 26-pin connector -T26b-	841
1.5.5 26-pin connector -T26e-	842
1.6 Adjustable rear spoiler control unit -J223-	843
1.6.1 5-pin connector -T5l-	843
1.6.2 12-pin connector -T12t-	843
1.7 Airbag control unit -J234-	844-845
1.7.1 20-pin connector -T20c-	844
1.7.2 142-pin connector -T142a-	845
1.8 Control unit in dash panel insert -J285-	846-847
1.8.1 2-pin connector -T2iy-	846
1.8.2 5-pin connector -T5bg-	847
1.8.3 18-pin connector -T18a-	847
1.9 Terminal 15 voltage supply relay -J329-	848
1.9.1 9-pin connector -T9a-	848
1.10 Driver door control unit -J386-	849-851
1.10.1 6-pin connector -T6q-	849
1.10.2 16-pin connector -T16g-	850
1.10.3 20-pin connector -T20f-	851
1.10.4 32-pin connector -T32e-	851
1.11 Front passenger door control unit -J387-	852-854
1.11.1 6-pin connector -T6r-	852
1.11.2 6-pin connector -T16h-	853
1.11.3 20-pin connector -T20g-	854
1.11.4 32-pin connector -T32f-	854
1.12 Convenience system central control unit -J393-	855-858
1.12.1 2-pin connector -T2ka-	855
1.12.2 17-pin connector -T17ad-	856
1.12.3 17-pin connector -T17af-	857
1.12.4 20-pin connector -T20n-	857
1.12.5 32-pin connector -T32d-	858
1.12.6 32-pin connector -T32g-	859
1.13 Adaptive cruise control unit -J428-	859
1.13.1 8-pin connector -T8p-	859
1.14 Power steering control unit -J500-	860-861
1.14.1 2-pin connector -T2dm-	860
1.14.2 6-pin connector -T6ah-	861
1.15 Tyre Pressure Monitoring System control unit -J502-	862
1.15.1 4-pin connector -T4ap-	862
1.16 Onboard supply control unit -J519-	862-864
1.16.1 54-pin connector -T54h-	863
1.16.2 73-pin connector -T73a-	863
1.16.3 73-pin connector -T73b-	864
1.17 Front passenger seat adjustment with memory control unit -J521-	865-867
1.17.1 4-pin connector -T4fi-	865
1.17.2 6-pin connector -T6am-	866
1.17.3 20-pin connector -T20l-	866
1.17.4 26-pin connector -T26a-	867
1.17.5 26-pin connector -T26d-	868
1.18 Digital sound package control unit -J525-	868
1.18.1 38-pin connector -T38a-	868
1.19 Telephone and telematics control unit -J526-	869-871
1.19.1 2-pin connector -T2ix-	869
1.19.2 2-pin connector -T2ji-	870
1.19.3 2-pin connector -T2jw-	871
1.19.4 12-pin connector -T12p-	871
1.20 Steering column electronics control unit -J527-	872
1.20.1 17-pin connector -T17ae-	872
1.21 Garage door operation control unit -J530-	873
1.21.1 5-pin connector -T5m-	873
1.22 Data bus diagnostic interface -J533-	874-875
1.22.1 54-pin connector -T54a-	874
1.22.2 54-pin connector -T54g-	875
1.23 Rear lid control unit -J605-	876
1.23.1 10-pin connector -T10r-	876
1.23.2 32-pin connector -T32c-	876

1.24 Engine control unit -J623-	877-878
1.24.1 4-pin connector -T4fl-	877
1.24.2 32-pin connector -T32a-	878
1.24.3 32-pin connector -T32b-	879
1.25 Axle differential lock control unit -J647-	879-880
1.25.1 9-pin connector -T9c-	879
1.25.2 12-pin connector -T12u-	880
1.26 Chip card reader control unit -J676-	881-882
1.26.1 2-pin connector -T2jg-	881
1.26.2 5-pin connector -T5av-	882
1.26.3 10-pin connector -T10h-	883
1.27 Display unit for front information display and operating unit control unit -J685-	883
1.27.1 9-pin connector -T9h-	883
1.28 Seat occupied recognition control unit -J706-	884
1.28.1 10-pin connector -T10p-	884
1.29 Onboard supply control unit relay -J722-	885
1.29.1 9-pin connector -T9d-	885
1.30 Lane change assist control unit -J769-	886
1.30.1 14-pin connector -T14ag-	886
1.31 Lane change assist control unit 2 -J770-	887
1.31.1 14-pin connector -T14ah-	887
1.32 Reversing camera system control unit -J772-	888-889
1.32.1 2-pin connector -T2iw-	888
1.32.2 8-pin connector -T8q-	889
1.33 Running gear control unit -J775-	890
1.33.1 81-pin connector -T81b-	890
1.34 Control unit 1 for information electronics -J794-	890-900
1.34.1 2-pin connector -T2kb-	891
1.34.2 2-pin connector -T2kc-	892
1.34.3 5-pin connector -T5bn-	892
1.34.4 5-pin connector -T5bo-	893
1.34.5 5-pin connector -T5bp-	894
1.34.6 5-pin connector -T5bq-	894
1.34.7 5-pin connector -T5br-	895
1.34.8 5-pin connector -T5bs-	896
1.34.9 8-pin connector -T8ad-	896
1.34.10 8-pin connector -T8af-	897
1.34.11 8-pin connector -T8ag-	898
1.34.12 8-pin connector -T8u-	898
1.34.13 12-pin connector -T12v-	899
1.34.14 12-pin connector -T12w-	900
1.34.15 12-pin connector -T12y-	900
1.35 Battery regulation control unit -J840-	901-902
1.35.1 3-pin connector -T3bz-	901
1.35.2 12-pin connector -T12ag-	902
1.36 Control unit for air conditioner compressor -J842-	903
1.36.1 5-pin connector -T5be-	903
1.36.2 8-pin connector -T8v-	903
1.37 Control unit for night vision system -J853-	904-905
1.37.1 5-pin connector -T5aw-	904
1.37.2 12-pin connector -T12o-	905
1.38 Control unit for electrically adjustable steering column -J866-	906
1.38.1 6-pin connector -T6t-	906
1.38.2 10-pin connector -T10aa-	906
1.39 Ioniser control unit -J897-	907-908
1.39.1 4-pin connector -T4ao-	907
1.39.2 4-pin connector -T4fd-	908
1.39.3 4-pin connector -T4fh-	909
1.40 Control unit for heads-up display -J898-	909
1.40.1 10-pin connector -T10q-	909
1.41 Rear driver side door control unit -J926-	910-912
1.41.1 6-pin connector -T6ao-	910
1.41.2 6-pin connector -T6s-	911
1.41.3 16-pin connector -T16e-	912
1.41.4 20-pin connector -T20h-	912
1.42 Rear passenger side door control unit -J927-	913-915

1.42.1 6-pin connector -T6as-	913
1.42.2 6-pin connector -T6at-	914
1.42.3 16-pin connector -T16f-	915
1.42.4 20-pin connector -T20p-	915
1.43 Rear lid power opening control unit -J938-	916-917
1.43.1 4-pin connector -T4aj-	916
1.43.2 4-pin connector -T4fr-	917
1.44 Emergency call module control unit and communication unit -J949-	918-920
1.44.1 2-pin connector -T2jy-	918
1.44.2 8-pin connector -T8ac-	919
1.44.3 8-pin connector -T8ae-	919
1.44.4 20-pin connector -T20e-	920
1.44.5 20-pin connector -T20k-	921
1.45 Heater and air conditioning system control unit -J979-	921-923
1.45.1 6-pin connector -T6al-	922
1.45.2 16-pin connector -T16a-	922
1.45.3 40-pin connector -T40d-	923
1.46 Battery module 1 -J991-	924
1.46.1 4-pin connector -T4gc-	924
1.46.2 4-pin connector -T4hm-	924
1.47 Battery module 2 -J992-	925-926
1.47.1 4-pin connector -T4gd-	925
1.47.2 4-pin connector -T4hn-	926
1.48 Battery module 3 -J993-	927
1.48.1 4-pin connector -T4ge-	927
1.48.2 4-pin connector -T4hp-	927
1.49 Battery module 4 -J994-	928
1.49.1 4-pin connector -T4gf-	928
1.50 Battery module 5 -J995-	929-930
1.50.1 4-pin connector -T4gg-	929
1.50.2 4-pin connector -T4hl-	930
1.51 Battery module 6 -J996-	931
1.51.1 4-pin connector -T4gh-	931
1.52 Battery module 7 -J997-	931-932
1.52.1 4-pin connector -T4gi-	932
1.52.2 4-pin connector -T4hr-	932
1.53 Battery module 8 -J998-	933-934
1.53.1 4-pin connector -T4gj-	933
1.53.2 4-pin connector -T4ho-	934
1.54 Battery module 9 -J999-	935
1.54.1 4-pin connector -T4gk-	935
1.54.2 4-pin connector -T4hq-	935
1.55 Battery module 10 -J1000-	936
1.55.1 4-pin connector -T4gl-	936
1.56 Battery module 11 -J1001-	937
1.56.1 4-pin connector -T4gm-	937
1.57 Battery module 12 -J1002-	938
1.57.1 4-pin connector -T4gn-	938
1.58 Rear wheel steering control unit -J1019-	939-940
1.58.1 2-pin connector -T2dj-	939
1.58.2 6-pin connector -T6aj-	940
1.59 Thermal management control unit -J1024-	941
1.59.1 40-pin connector -T40b-	941
1.60 Battery module 13 -J1045-	941
1.60.1 4-pin connector -T4go-	941
1.61 Battery module 14 -J1046-	942
1.61.1 4-pin connector -T4gp-	942
1.62 Battery module 15 -J1047-	943
1.62.1 4-pin connector -T4gq-	943
1.63 Battery module 16 -J1048-	944
1.63.1 4-pin connector -T4gr-	944
1.64 Battery module 17 -J1049-	945
1.64.1 4-pin connector -T4gs-	945
1.65 Battery module 18 -J1077-	946
1.65.1 4-pin connector -T4gt-	946
1.66 Battery module 19 -J1078-	947

1.66.1 4-pin connector -T4gu-	947
1.67 Battery module 20 -J1079-	948
1.67.1 4-pin connector -T4gv-	948
1.68 Battery module 21 -J1080-	949
1.68.1 4-pin connector -T4gw-	949
1.69 Battery module 22 -J1081-	950
1.69.1 4-pin connector -T4gx-	950
1.70 Battery module 23 -J1082-	951
1.70.1 4-pin connector -T4gy-	951
1.71 Battery module 24 -J1083-	952
1.71.1 4-pin connector -T4gz-	952
1.72 Battery module 25 -J1084-	953
1.72.1 4-pin connector -T4ha-	953
1.73 Battery module 26 -J1085-	954
1.73.1 4-pin connector -T4hb-	954
1.74 Front left radar sensor control unit for object detection -J1088-	955
1.74.1 10-pin connector -T10m-	955
1.75 Front right radar sensor control unit for object detection -J1089-	956
1.75.1 10-pin connector -T10n-	956
1.76 Driver assist systems control unit -J1121-	957-963
1.76.1 2-pin connector -T2ir-	957
1.76.2 2-pin connector -T2is-	958
1.76.3 2-pin connector -T2jh-	959
1.76.4 2-pin connector -T2jv-	960
1.76.5 2-pin connector -T2jx-	960
1.76.6 2-pin connector -T2jz-	961
1.76.7 5-pin connector -T5bl-	962
1.76.8 40-pin connector -T40c-	962
1.76.9 81-pin connector -T81a-	963
1.77 Battery module 27 -J1130-	964
1.77.1 4-pin connector -T4hc-	964
1.78 Adaptive suspension compressor electronics -J1135-	964-965
1.78.1 2-pin connector -T2hx-	965
1.78.2 2-pin connector -T2js-	965
1.79 Thermal management coolant pump relay -J1141-	966
1.79.1 5-pin connector -T5j-	966
1.80 Charger 1 for mobile devices -J1146-	967-968
1.80.1 2-pin connector -T2it-	967
1.80.2 6-pin connector -T6p-	968
1.81 Remote control air conditioning relay -J1164-	969
1.81.1 5-pin connector -T5k-	969
1.82 Engine sound generator control unit 2 -J1167-	969
1.82.1 12-pin connector -T12l-	969
1.83 Engine sound generator control unit 3 -J1177-	970
1.83.1 12-pin connector -T12m-	970
1.84 Power contactor with boost function -J1178-	971-978
1.84.1 1-pin connector -T1qb-	972
1.84.2 4-pin connector -T4fk-	972
1.84.3 4-pin connector -T4fn-	973
1.84.4 4-pin connector -T4fo-	974
1.84.5 4-pin connector -T4fx-	974
1.84.6 4-pin connector -T4fy-	975
1.84.7 5-pin connector -T5bj-	976
1.84.8 5-pin connector -T5bk-	976
1.84.9 5-pin connector -T5bm-	977
1.84.10 6-pin connector -T6ag-	978
1.84.11 12-pin connector -T12n-	978
1.85 Radiator fan 2 relay -J1180-	979
1.85.1 7-pin connector -T7a-	979
1.86 Control unit for radio-controlled parking -J1182-	980-981
1.86.1 2-pin connector -T2dl-	980
1.86.2 2-pin connector -T2iv-	981
1.86.3 6-pin connector -T6ak-	982
1.87 Battery module 28 -J1199-	982
1.87.1 4-pin connector -T4hd-	982
1.88 Battery module 29 -J1200-	983

1.88.1 4-pin connector -T4he-	983
1.89 Battery module 30 -J1201-	984
1.89.1 4-pin connector -T4hf-	984
1.90 Battery module 31 -J1202-	985
1.90.1 4-pin connector -T4hg-	985
1.91 Battery module 32 -J1203-	986
1.91.1 4-pin connector -T4hh-	986
1.92 Battery module 33 -J1204-	987
1.92.1 4-pin connector -T4hi-	987
1.93 Interface control unit for vehicle tracking -J1221-	988
1.93.1 20-pin connector -T20b-	988
1.94 Android operating system control unit -J1243-	989-990
1.94.1 9-pin connector -T9g-	989-990
836 - -Connector views: parts with prefix K to M - 1	991-1027
1. -Connector views: parts with prefix K to M	991-1027
1.1 Central locking SAFELock function warning lamp -K133-	992
1.1.1 2-pin connector -T2dq-	992
1.2 Front left footwell light -K268-	993
1.2.1 2-pin connector -T2dr-	993
1.2.2 4-pin connector -T4by-	993
1.3 Front right footwell light -K269-	994-995
1.3.1 2-pin connector -T2ds-	994
1.3.2 4-pin connector -T4bz-	995
1.4 Light 1 for front centre console ambient lighting -L193-	996
1.4.1 4-pin connector -T4ch-	996
1.5 Light 2 for front centre console ambient lighting -L194-	996
1.5.1 4-pin connector -T4ci-	996
1.6 Light 1 for front left door background lighting -L199-	997
1.6.1 4-pin connector -T4er-	997
1.7 Light 1 for front right door background lighting -L200-	998
1.7.1 4-pin connector -T4es-	998
1.8 Light 1 for rear left door ambient lighting -L201-	999
1.8.1 4-pin connector -T4cc-	999
1.9 Light 1 for rear right door ambient lighting -L202-	1000
1.9.1 4-pin connector -T4fz-	1000
1.10 Light for driver side interior door handle illumination -L219-	1001
1.10.1 2-pin connector -T2dv-	1001
1.11 Light for front passenger side interior door handle illumination -L220-	1002
1.11.1 2-pin connector -T2dw-	1002
1.12 Light for rear driver side interior door handle illumination -L221-	1003
1.12.1 2-pin connector -T2dt-	1003
1.13 Light for rear passenger side interior door handle illumination -L222-	1004
1.13.1 2-pin connector -T2lc-	1004
1.14 Light for left door storage compartment illumination -L255-	1005
1.14.1 4-pin connector -T4ca-	1005
1.15 Light for right door storage compartment illumination -L256-	1006
1.15.1 4-pin connector -T4cb-	1006
1.16 Light for rear left door storage compartment illumination -L257-	1007
1.16.1 4-pin connector -T4ce-	1007
1.17 Light for rear right door storage compartment illumination -L258-	1008
1.17.1 4-pin connector -T4ga-	1008
1.18 Light for exterior door handle illumination, driver side -L283-	1009
1.18.1 2-pin connector -T2dx-	1009
1.19 Light for exterior door handle illumination, front passenger side -L284-	1010
1.19.1 2-pin connector -T2dy-	1010
1.20 Light for rear driver side exterior door handle illumination -L285-	1011
1.20.1 2-pin connector -T2du-	1011
1.21 Light for rear passenger side exterior door handle illumination -L286-	1012
1.21.1 2-pin connector -T2lu-	1012
1.22 Light 1 for dashboard ambient lighting -L292-	1013
1.22.1 4-pin connector -T4cf-	1013
1.23 Light 2 for dashboard ambient lighting -L293-	1014
1.23.1 4-pin connector -T4cg-	1014
1.24 Light 3 for dashboard ambient lighting -L294-	1015
1.24.1 4-pin connector -T4cd-	1015
1.25 Light 4 for dashboard ambient lighting -L295-	1016

1.25.1 4-pin connector -T4cj-	1016
1.26 Front luggage compartment light -L325-	1017
1.26.1 2-pin connector -T2dz-	1017
1.27 LED module 2 for charging socket 1 -L330-	1018
1.27.1 2-pin connector -T2ea-	1018
1.28 LED module 2 for charging socket 2 -L335-	1019
1.28.1 2-pin connector -T2eb-	1019
1.29 Front left headlight -MX1-	1020
1.29.1 8-pin connector -T8r-	1020
1.30 Front right headlight -MX2-	1021
1.30.1 8-pin connector -T8s-	1021
1.31 Left tail light -MX3-	1022-1023
1.31.1 6-pin connector -T6w-	1022
1.31.2 6-pin connector -T6x-	1023
1.32 Right tail light -MX4-	1024
1.32.1 6-pin connector -T6y-	1024
1.32.2 6-pin connector -T6z-	1024
1.33 Centre rear tail light unit -MX13-	1025-1027
1.33.1 6-pin connector -T6u-	1025
1.33.2 6-pin connector -T6v-	1026-1027
837 - -Connector views: parts with prefix N - 1	1028-1071
1. -Connector views: parts with prefix N	1028-1071
1.1 Adaptive suspension drain valve -N111-	1029
1.1.1 3-pin connector -T3bo-	1029
1.2 Rear belt tensioner igniter on driver side -N196-	1030
1.2.1 2-pin connector -T2ew-	1030
1.3 Rear belt tensioner igniter on front passenger side -N197-	1030
1.3.1 2-pin connector -T2ey-	1030
1.4 Side airbag igniter on driver side -N199-	1031
1.4.1 3-pin connector -T3av-	1031
1.5 Side airbag igniter on front passenger side -N200-	1032
1.5.1 3-pin connector -T3aw-	1032
1.6 Rear side airbag igniter on driver side -N201-	1033
1.6.1 3-pin connector -T3ax-	1033
1.7 Rear side airbag igniter on front passenger side -N202-	1034
1.7.1 3-pin connector -T3az-	1034
1.8 Driver side curtain airbag igniter -N251-	1035
1.8.1 2-pin connector -T2fa-	1035
1.9 Front passenger side curtain airbag igniter -N252-	1036
1.9.1 2-pin connector -T2fc-	1036
1.10 Driver side knee airbag igniter -N295-	1037
1.10.1 3-pin connector -T3bb-	1037
1.11 Front passenger side knee airbag igniter -N296-	1038
1.11.1 3-pin connector -T3bd-	1038
1.12 Rear left shock absorber damping adjustment valve -N338-	1039
1.12.1 2-pin connector -T2fe-	1039
1.13 Rear right shock absorber damping adjustment valve -N339-	1040
1.13.1 2-pin connector -T2ff-	1040
1.14 Valve block 1 in driver seat -N475-	1041
1.14.1 4-pin connector -T4at-	1041
1.15 Valve block 2 in driver seat -N476-	1042
1.15.1 4-pin connector -T4aq-	1042
1.16 Valve block 1 in front passenger seat -N477-	1043
1.16.1 4-pin connector -T4as-	1043
1.17 Valve block 2 in front passenger seat -N478-	1044
1.17.1 4-pin connector -T4ar-	1044
1.18 Parking lock solenoid -N486-	1045
1.18.1 2-pin connector -T2fg-	1045
1.19 Coolant changeover valve 1 -N632-	1046
1.19.1 5-pin connector -T5am-	1046
1.20 Coolant changeover valve 2 -N633-	1047
1.20.1 5-pin connector -T5an-	1047
1.21 Expansion valve 2 for coolant -N637-	1048
1.21.1 4-pin connector -T4cx-	1048
1.22 Expansion valve 3 for coolant -N638-	1049
1.22.1 4-pin connector -T4cv-	1049

1.23 Refrigerant shut-off valve 2 -N640-	1050
1.23.1 4-pin connector -T4cz-	1050
1.24 Refrigerant shut-off valve 3 -N641-	1051
1.24.1 4-pin connector -T4da-	1051
1.25 Refrigerant shut-off valve 5 -N643-	1052
1.25.1 4-pin connector -T4db-	1052
1.26 Igniter 3 for high-voltage battery isolation -N813-	1053
1.26.1 2-pin connector -T2w-	1053
1.27 Front passenger airbag unit -NX3-	1054-1055
1.27.1 2-pin connector -T2jp-	1054
1.27.2 2-pin connector -T2ja-	1055
1.27.3 3-pin connector -T3bf-	1056
1.28 Brake servo -NX6-	1056-1057
1.28.1 4-pin connector -T4ff-	1056
1.28.2 26-pin connector -T26c-	1057
1.29 Valve block for adaptive suspension -NX7-	1058
1.29.1 10-pin connector -T10u-	1058
1.30 Front left seat belt -NX10-	1059-1060
1.30.1 2-pin connector -T2fo-	1059
1.30.2 2-pin connector -T2jj-	1060
1.30.3 5-pin connector -T5ax-	1061
1.31 Front right seat belt -NX11-	1061-1063
1.31.1 2-pin connector -T2jm-	1062
1.31.2 2-pin connector -T2fr-	1062
1.31.3 5-pin connector -T5ba-	1063
1.32 Air suspension module rear left -NX22-	1064
1.32.1 2-pin connector -T2fm-	1064
1.32.2 2-pin connector -T2iz-	1064
1.33 Air suspension module rear right -NX23-	1065-1066
1.33.1 2-pin connector -T2fn-	1065
1.33.2 2-pin connector -T2lf-	1066
1.34 Suspension strut module front left -NX24-	1067-1068
1.34.1 2-pin connector -T2lj-	1067
1.34.2 2-pin connector -T2fi-	1068
1.34.3 2-pin connector -T2fj-	1068
1.35 Suspension strut module front right -NX25-	1069-1071
1.35.1 2-pin connector -T2fl-	1069
1.35.2 2-pin connector -T2lk-	1070
1.35.3 2-pin connector -T2ll-	1071
839 - -Connector views: parts with prefix R - 1	1072-1132
1. -Connector views: parts with prefix R	1072-1132
1.1 Rear left treble loudspeaker -R14-	1073
1.1.1 2-pin connector -T2gd-	1073
1.2 Rear left bass loudspeaker -R15-	1074
1.2.1 2-pin connector -T2ge-	1074
1.3 Rear right treble loudspeaker -R16-	1075
1.3.1 2-pin connector -T2lm-	1075
1.4 Rear right bass loudspeaker -R17-	1076
1.4.1 2-pin connector -T2ln-	1076
1.5 Front left treble loudspeaker -R20-	1077-1078
1.5.1 2-pin connector -T2gi-	1077
1.5.2 2-pin connector -T2gj-	1078
1.6 Front left bass loudspeaker -R21-	1079
1.6.1 2-pin connector -T2gn-	1079
1.6.2 2-pin connector -T2go-	1079
1.7 Front right treble loudspeaker -R22-	1080-1081
1.7.1 2-pin connector -T2gq-	1080
1.7.2 2-pin connector -T2gr-	1081
1.8 Front right bass loudspeaker -R23-	1082
1.8.1 2-pin connector -T2gs-	1082
1.8.2 2-pin connector -T2gt-	1082
1.9 Aerial amplifier -R24-	1083-1085
1.9.1 4-pin connector -T4dd-	1083
1.9.2 4-pin connector -T4de-	1084
1.9.3 4-pin connector -T4df-	1085
1.9.4 4-pin connector -T4dc-	1085

1.10 GPS aerial -R50-	1086
1.10.1 2-pin connector -T2hl-	1086
1.11 Aerial amplifier for mobile telephone -R86-	1087-1090
1.11.1 2-pin connector -T2hm-	1087
1.11.2 2-pin connector -T2hn-	1088
1.11.3 2-pin connector -T2ho-	1089
1.11.4 2-pin connector -T2je-	1089
1.11.5 4-pin connector -T4fm-	1090
1.12 Front left mid-range loudspeaker -R103-	1091
1.12.1 2-pin connector -T2fu-	1091
1.12.2 2-pin connector -T2fv-	1091
1.13 Front right mid-range loudspeaker -R104-	1092-1093
1.13.1 2-pin connector -T2fw-	1092
1.13.2 2-pin connector -T2fx-	1093
1.14 Aerial amplifier 2 -R111-	1094-1095
1.14.1 2-pin connector -T2ga-	1094
1.14.2 2-pin connector -T2fz-	1095
1.14.3 4-pin connector -T4dg-	1095
1.15 Luggage compartment aerial for entry and start system -R137-	1096
1.15.1 2-pin connector -T2gb-	1096
1.16 Interior aerial 1 for entry and start system -R138-	1097
1.16.1 2-pin connector -T2gc-	1097
1.17 Parking aid loudspeaker -R169-	1098
1.17.1 2-pin connector -T2gg-	1098
1.18 Satellite tuner aerial -R172-	1099
1.18.1 2-pin connector -T2gh-	1099
1.19 Left aerial for entry and start authorisation -R200-	1100
1.19.1 2-pin connector -T2gk-	1100
1.20 Right aerial for entry and start authorisation -R201-	1101
1.20.1 2-pin connector -T2kn-	1101
1.21 Centre loudspeaker -R208-	1102
1.21.1 2-pin connector -T2gl-	1102
1.22 Left effect loudspeaker -R209-	1103
1.22.1 2-pin connector -T2gm-	1103
1.23 Right effect loudspeaker -R210-	1104
1.23.1 2-pin connector -T2gp-	1104
1.24 Subwoofer -R211-	1105
1.24.1 4-pin connector -T4dh-	1105
1.25 Camera for night vision system -R212-	1106
1.25.1 5-pin connector -T5r-	1106
1.26 Front left treble loudspeaker 2 -R220-	1107
1.26.1 2-pin connector -T2gz-	1107
1.27 Front right treble loudspeaker 2 -R221-	1108
1.27.1 2-pin connector -T2ha-	1108
1.28 Front camera for driver assist systems -R242-	1109-1110
1.28.1 2-pin connector -T2jc-	1109
1.28.2 4-pin connector -T4di-	1110
1.29 Front overhead view camera -R243-	1111
1.29.1 2-pin connector -T2gu-	1111
1.30 Rear overhead view camera -R246-	1111
1.30.1 2-pin connector -T2gv-	1111
1.31 Emergency call module aerial -R263-	1112
1.31.1 2-pin connector -T2hb-	1112
1.32 Dedicated short-range communication aerial -R269-	1113
1.32.1 2-pin connector -T2by-	1113
1.33 USB hub -R293-	1114-1115
1.33.1 5-pin connector -T5bd-	1114
1.33.2 5-pin connector -T5bh-	1115
1.33.3 6-pin connector -T6aa-	1116
1.34 Emergency call module aerial 2 -R322-	1116
1.34.1 2-pin connector -T2hc-	1116
1.35 Emergency call module aerial 3 -R323-	1117
1.35.1 2-pin connector -T2he-	1117
1.36 LTE aerial 3 -R330-	1118
1.36.1 2-pin connector -T2fy-	1118
1.37 Emeraencv call module loudspeaker -R335-	1119

1.37.1 2-pin connector -T2hp-	1119
1.38 Wireless data transfer aerial -R336-	1120
1.38.1 2-pin connector -T2gy-	1120
1.39 Actuator 3 for engine sound generator -R348-	1121
1.39.1 2-pin connector -T2hg-	1121
1.40 Actuator 4 for engine sound generator -R355-	1122
1.40.1 2-pin connector -T2hh-	1122
1.41 Mid-range loudspeaker with additional internal loudspeaker, rear left -R358-	1123
1.41.1 2-pin connector -T2hi-	1123
1.42 Mid-range loudspeaker with additional internal loudspeaker, rear right -R359-	1124
1.42.1 2-pin connector -T2ke-	1124
1.43 Aerial 3 for radio-controlled parking -R361-	1125
1.43.1 2-pin connector -T2hj-	1125
1.44 Aerial 4 for radio-controlled parking -R362-	1126
1.44.1 2-pin connector -T2hk-	1126
1.45 Wireless data transfer aerial 2 -R366-	1127
1.45.1 2-pin connector -T2hd-	1127
1.46 Front aerial for entry and start authorisation -R376-	1128
1.46.1 2-pin connector -T2gw-	1128
1.47 Emergency call module aerial 4 -R380-	1129
1.47.1 2-pin connector -T2hf-	1129
1.48 Telephone and telematics aerial module -RX23-	1130-1132
1.48.1 2-pin connector -T2gx-	1130
1.48.2 2-pin connector -T2jd-	1131
1.48.3 2-pin connector -T2jr-	1132
840 - -Connector views: parts with prefix S to U - 1	1133-1283
1. -Connector views: parts with prefix S to U	1133-1283
1.1 Fuse holder D -SD-	1134
1.1.1 24-pin connector -T24c-	1134
1.2 Fuse holder H -SH-	1135
1.2.1 24-pin connector -T24f-	1135
1.3 Fuse holder K -SK-	1136
1.3.1 24-pin connector -T24g-	1136
1.4 Coupling point on high-voltage battery -TAHV-	1137
1.4.1 22-pin connector -T22b-	1137
1.5 Coupling point at left on dash panel -TCPL-	1138-1144
1.5.1 2-pin connector -T2d-	1138
1.5.2 2-pin connector -T2e-	1139
1.5.3 17-pin connector -T17e-	1140
1.5.4 17-pin connector -T17i-	1141
1.5.5 17-pin connector -T17d-	1141
1.5.6 17-pin connector -T17h-	1142
1.5.7 17-pin connector -T17c-	1143
1.5.8 17-pin connector -T17g-	1143
1.5.9 17-pin connector -T17b-	1144
1.5.10 17-pin connector -T17f-	1145
1.6 Coupling point on dash panel, centre -TCPM-	1145-1153
1.6.1 2-pin connector -T2g-	1146
1.6.2 2-pin connector -T2f-	1146
1.6.3 5-pin connector -T5b-	1147
1.6.4 5-pin connector -T5a-	1148
1.6.5 17-pin connector -T17l-	1149
1.6.6 17-pin connector -T17j-	1149
1.6.7 17-pin connector -T17n-	1150
1.6.8 17-pin connector -T17p-	1151
1.6.9 17-pin connector -T17m-	1151
1.6.10 17-pin connector -T17q-	1152
1.6.11 17-pin connector -T17o-	1153
1.6.12 17-pin connector -T17k-	1153
1.7 Coupling point on dash panel, right -TCPR-	1154-1164
1.7.1 2-pin connector -T2k-	1155
1.7.2 2-pin connector -T2o-	1155
1.7.3 2-pin connector -T2h-	1156
1.7.4 2-pin connector -T2l-	1157
1.7.5 2-pin connector -T2j-	1157
1.7.6 2-pin connector -T2n-	1158

1.7.7 2-pin connector -T2i-	1159
1.7.8 2-pin connector -T2m-	1159
1.7.9 5-pin connector -T5c-	1160
1.7.10 5-pin connector -T5d-	1161
1.7.11 17-pin connector -T17w-	1161
1.7.12 17-pin connector -T17t-	1162
1.7.13 17-pin connector -T17r-	1163
1.7.14 17-pin connector -T17u-	1163
1.7.15 17-pin connector -T17s-	1164
1.7.16 17-pin connector -T17v-	1165
1.8 Coupling point on right C-pillar -TCR-	1165-1166
1.8.1 2-pin connector -T2p-	1165
1.8.2 2-pin connector -T2q-	1166
1.9 Coupling point for roof, centre -THM-	1167-1169
1.9.1 3-pin connector -T3c-	1167
1.9.2 3-pin connector -T3e-	1168
1.9.3 3-pin connector -T3d-	1169
1.9.4 3-pin connector -T3f-	1169
1.10 Coupling point in left of luggage compartment -THRL-	1170-1177
1.10.1 1-pin connector -T1jt-	1171
1.10.2 1-pin connector -T1ju-	1171
1.10.3 14-pin connector -T14e-	1172
1.10.4 14-pin connector -T14h-	1173
1.10.5 14-pin connector -T14ar-	1173
1.10.6 14-pin connector -T14c-	1174
1.10.7 14-pin connector -T14f-	1175
1.10.8 14-pin connector -T14d-	1175
1.10.9 14-pin connector -T14g-	1176
1.10.10 14-pin connector -T14ao-	1177
1.10.11 14-pin connector -T14aq-	1177
1.11 Coupling point in luggage compartment, centre -THRM-	1178-1181
1.11.1 17-pin connector -T17x-	1178
1.11.2 17-pin connector -T17aa-	1179
1.11.3 17-pin connector -T17y-	1180
1.11.4 17-pin connector -T17ab-	1180
1.11.5 17-pin connector -T17z-	1181
1.11.6 17-pin connector -T17ac-	1182
1.12 Coupling point in luggage compartment, right -THRR-	1182-1191
1.12.1 2-pin connector -T2s-	1183
1.12.2 2-pin connector -T2r-	1184
1.12.3 2-pin connector -T2lb-	1184
1.12.4 2-pin connector -T2mm-	1185
1.12.5 5-pin connector -T5e-	1186
1.12.6 5-pin connector -T5f-	1186
1.12.7 5-pin connector -T5cb-	1187
1.12.8 5-pin connector -T5cc-	1188
1.12.9 10-pin connector -T10c-	1188
1.12.10 10-pin connector -T10d-	1189
1.12.11 14-pin connector -T14i-	1190
1.12.12 14-pin connector -T14j-	1190
1.12.13 14-pin connector -T14as-	1191
1.12.14 14-pin connector -T14au-	1192
1.13 Coupling point 1 for high-voltage charging socket -THVL1-	1192-1194
1.13.1 10-pin connector -T10g-	1193
1.13.2 10-pin connector -T10ab-	1193
1.13.3 10-pin connector -T10b-	1194
1.13.4 10-pin connector -T10a-	1195
1.14 Coupling point 2 for high-voltage charging socket -THVL2-	1195-1196
1.14.1 8-pin connector -T8g-	1195
1.14.2 8-pin connector -T8a-	1196
1.15 Coupling point in high-voltage battery -TIHV-	1197-1199
1.15.1 4-pin connector -T4hj-	1197
1.15.2 4-pin connector -T4hk-	1198
1.15.3 6-pin connector -T6i-	1199
1.15.4 6-pin connector -T6ai-	1199
1.16 Coupling point in interior. below right -TIUR-	1200-1201

1.16.1 2-pin connector -T2t-	1200
1.16.2 2-pin connector -T2u-	1201
1.17 Coupling point 1 for steering -TLENK1-	1202
1.17.1 1-pin connector -T1jw-	1202
1.17.2 1-pin connector -T1jv-	1202
1.18 Coupling point on left in engine compartment -TML-	1203-1216
1.18.1 1-pin connector -T1ka-	1204
1.18.2 1-pin connector -T1ty-	1205
1.18.3 1-pin connector -T1kb-	1205
1.18.4 1-pin connector -T1jy-	1206
1.18.5 1-pin connector -T1kc-	1207
1.18.6 1-pin connector -T1aau-	1207
1.18.7 4-pin connector -T4e-	1208
1.18.8 4-pin connector -T4f-	1209
1.18.9 4-pin connector -T4g-	1209
1.18.10 8-pin connector -T8c-	1210
1.18.11 8-pin connector -T8b-	1211
1.18.12 10-pin connector -T10e-	1211
1.18.13 10-pin connector -T10f-	1212
1.18.14 14-pin connector -T14m-	1213
1.18.15 14-pin connector -T14q-	1213
1.18.16 14-pin connector -T14k-	1214
1.18.17 14-pin connector -T14n-	1215
1.18.18 14-pin connector -T14p-	1215
1.18.19 14-pin connector -T14l-	1216
1.19 Coupling point in engine compartment, right -TMR-	1217-1222
1.19.1 8-pin connector -T8d-	1217
1.19.2 8-pin connector -T8e-	1218
1.19.3 10-pin connector -T10af-	1218
1.19.4 10-pin connector -T10ag-	1219
1.19.5 14-pin connector -T14u-	1220
1.19.6 14-pin connector -T14v-	1220
1.19.7 14-pin connector -T14r-	1221
1.19.8 14-pin connector -T14s-	1222
1.19.9 14-pin connector -T14w-	1222
1.20 Coupling point 1 for low-voltage network of high-voltage battery -TNVBA1-	1223-1224
1.20.1 4-pin connector -T4c-	1223
1.20.2 4-pin connector -T4d-	1224
1.21 Coupling point for axle differential lock -TQS-	1225
1.21.1 8-pin connector -T8f-	1225
1.21.2 8-pin connector -T8at-	1225
1.22 Coupling point in rear left wheel housing wiring -TRAHL-	1226-1228
1.22.1 2-pin connector -T2b-	1226
1.22.2 2-pin connector -T2v-	1227
1.22.3 14-pin connector -T14x-	1228
1.22.4 14-pin connector -T14a-	1228
1.23 Coupling point in rear right wheel housing wiring -TRAHR-	1229-1231
1.23.1 2-pin connector -T2c-	1229
1.23.2 2-pin connector -T2lg-	1230
1.23.3 14-pin connector -T14b-	1231
1.23.4 14-pin connector -T14am-	1231
1.24 Coupling point in front left wheel housing wiring -TRAVL-	1232-1234
1.24.1 4-pin connector -T4a-	1232
1.24.2 4-pin connector -T4h-	1233
1.24.3 6-pin connector -T6a-	1234
1.24.4 6-pin connector -T6c-	1234
1.25 Coupling point in front right wheel housing wiring -TRAVR-	1235-1237
1.25.1 4-pin connector -T4b-	1235
1.25.2 4-pin connector -T4gb-	1236
1.25.3 6-pin connector -T6b-	1237
1.25.4 6-pin connector -T6aq-	1237
1.26 Coupling point for front passenger seat backrest -TSB-	1238-1241
1.26.1 3-pin connector -T3g-	1238
1.26.2 3-pin connector -T3h-	1239
1.26.3 12-pin connector -T12b-	1240
1.26.4 12-pin connector -T12d-	1240

1.26.5 12-pin connector -T12a-	1241
1.26.6 12-pin connector -T12c-	1242
1.27 Coupling point for driver seat backrest -TSF-	1242-1246
1.27.1 3-pin connector -T3i-	1243
1.27.2 3-pin connector -T3j-	1243
1.27.3 12-pin connector -T12f-	1244
1.27.4 12-pin connector -T12h-	1245
1.27.5 12-pin connector -T12e-	1245
1.27.6 12-pin connector -T12g-	1246
1.28 Coupling point on rear left bumper -TSFHL-	1247
1.28.1 14-pin connector -T14z-	1247
1.28.2 14-pin connector -T14y-	1247
1.29 Coupling point on front left bumper -TSFVL-	1248-1251
1.29.1 2-pin connector -T2x-	1248
1.29.2 2-pin connector -T2z-	1249
1.29.3 2-pin connector -T2aa-	1250
1.29.4 2-pin connector -T2y-	1250
1.29.5 14-pin connector -T14aa-	1251
1.29.6 14-pin connector -T14ab-	1252
1.30 Coupling point on front right bumper -TSFVR-	1252-1256
1.30.1 2-pin connector -T2ab-	1253
1.30.2 2-pin connector -T2ae-	1253
1.30.3 6-pin connector -T6e-	1254
1.30.4 6-pin connector -T6d-	1255
1.30.5 14-pin connector -T14ac-	1255
1.30.6 14-pin connector -T14ad-	1256
1.31 Coupling point for switching unit for high-voltage battery -TSHVB-	1257
1.31.1 20-pin connector -T20i-	1257
1.32 Coupling point for front left seat -TSVL-	1257-1259
1.32.1 4-pin connector -T4j-	1258
1.32.2 19-pin connector -T19a-	1258
1.32.3 19-pin connector -T19b-	1259
1.33 Coupling point for front right seat -TSVR-	1260-1261
1.33.1 4-pin connector -T4l-	1260
1.33.2 19-pin connector -T19c-	1261
1.33.3 19-pin connector -T19d-	1261
1.34 Coupling point for rear left door -TTHL-	1262-1263
1.34.1 25-pin connector -T25a-	1262
1.34.2 25-pin connector -T25b-	1263
1.35 Coupling point for rear right door -TTHR-	1264
1.35.1 25-pin connector -T25e-	1264
1.35.2 25-pin connector -T25c-	1264
1.36 Coupling point in rear left door -TTIHL-	1265-1266
1.36.1 8-pin connector -T8i-	1265
1.36.2 8-pin connector -T8h-	1266
1.37 Coupling point in rear right door -TTIHR-	1267-1268
1.37.1 8-pin connector -T8ao-	1267
1.37.2 8-pin connector -T8ah-	1268
1.37.3 8-pin connector -T8ap-	1268
1.38 Coupling point in front left door -TTIVL-	1269-1270
1.38.1 2-pin connector -T2af-	1269
1.38.2 8-pin connector -T8k-	1270
1.38.3 8-pin connector -T8j-	1271
1.39 Coupling point in front right door -TTIVR-	1271-1273
1.39.1 2-pin connector -T2ag-	1272
1.39.2 8-pin connector -T8m-	1272
1.39.3 8-pin connector -T8l-	1273
1.40 Coupling point for front left door -TTVL-	1274
1.40.1 21-pin connector -T21a-	1274
1.40.2 21-pin connector -T21b-	1274
1.41 Coupling point for front right door -TTVR-	1275-1276
1.41.1 21-pin connector -T21c-	1275
1.41.2 21-pin connector -T21d-	1276
1.42 Maintenance connector for high-voltage system -TW-	1277
1.42.1 4-pin connector -T4dk-	1277
1.43 12 V socket -U5-	1277

1.43.1 3-pin connector -T3bh-	1277
1.44 12 V socket 2 -U18-	1278
1.44.1 3-pin connector -T3bi-	1278
1.45 Diagnostic connection -U31-	1279
1.45.1 16-pin connector -T16d-	1279
1.46 USB charging socket 2 -U38-	1280
1.46.1 4-pin connector -T4hv-	1280
1.47 USB connection 1 -U41-	1281-1283
1.47.1 4-pin connector -T4fg-	1281
1.47.2 5-pin connector -T5s-	1282-1283
841 - -Connector views: parts with prefix V - 1	1284-1358
1. -Connector views: parts with prefix V	1284-1358
1.1 Washer pump -V5-	1286
1.1.1 2-pin connector -T2hv-	1286
1.2 Headlight washer system pump -V11-	1287
1.2.1 2-pin connector -T2hw-	1287
1.3 Driver seat longitudinal adjustment motor -V28-	1288
1.3.1 5-pin connector -T5x-	1288
1.4 Front passenger seat longitudinal adjustment motor -V31-	1289
1.4.1 5-pin connector -T5aa-	1289
1.5 Driver seat backrest adjustment motor -V45-	1290
1.5.1 5-pin connector -T5ab-	1290
1.6 Front passenger seat backrest adjustment motor -V46-	1291
1.6.1 5-pin connector -T5ac-	1291
1.7 Defroster flap control motor -V107-	1292
1.7.1 4-pin connector -T4dl-	1292
1.8 Left footwell flap control motor -V108-	1293
1.8.1 4-pin connector -T4dn-	1293
1.9 Right footwell flap control motor -V109-	1294
1.9.1 4-pin connector -T4do-	1294
1.10 Air recirculation flap control motor -V113-	1295
1.10.1 4-pin connector -T4dp-	1295
1.11 Steering column vertical adjustment motor -V123-	1296
1.11.1 4-pin connector -T4fv-	1296
1.12 Steering column axial adjustment motor -V124-	1297
1.12.1 4-pin connector -T4fw-	1297
1.13 Driver side window regulator motor -V147-	1298
1.13.1 2-pin connector -T2hq-	1298
1.14 Front passenger side window regulator motor -V148-	1299
1.14.1 2-pin connector -T2hr-	1299
1.15 Left temperature flap control motor -V158-	1300
1.15.1 4-pin connector -T4eg-	1300
1.16 Right temperature flap control motor -V159-	1301
1.16.1 4-pin connector -T4eh-	1301
1.17 Indirect ventilation flap control motor -V213-	1302
1.17.1 4-pin connector -T4dr-	1302
1.18 Front left chest vent control motor -V237-	1303
1.18.1 4-pin connector -T4ds-	1303
1.19 Front right chest vent control motor -V238-	1304
1.19.1 4-pin connector -T4dt-	1304
1.20 Rear left air quantity flap control motor -V239-	1305
1.20.1 4-pin connector -T4du-	1305
1.21 Rear right air quantity flap control motor -V240-	1306
1.21.1 4-pin connector -T4dv-	1306
1.22 Driver seat rake adjustment motor -V243-	1307
1.22.1 5-pin connector -T5ad-	1307
1.23 Front passenger seat rake adjustment motor -V244-	1308
1.23.1 5-pin connector -T5af-	1308
1.24 Driver seat height adjustment motor -V245-	1309
1.24.1 5-pin connector -T5ah-	1309
1.25 Front passenger seat height adjustment motor -V246-	1310
1.25.1 5-pin connector -T5aj-	1310
1.26 Driver seat depth adjustment motor -V256-	1311
1.26.1 5-pin connector -T5v-	1311
1.27 Front passenger seat depth adjustment motor -V257-	1312
1.27.1 5-pin connector -T5w-	1312

1.28 Left parking brake motor -V282-	1313
1.28.1 4-pin connector -T4dw-	1313
1.29 Right parking brake motor -V283-	1314
1.29.1 4-pin connector -T4fp-	1314
1.30 Left side vent control motor -V299-	1315
1.30.1 4-pin connector -T4dy-	1315
1.31 Right side vent control motor -V300-	1316
1.31.1 4-pin connector -T4dz-	1316
1.32 Rear left temperature flap control motor -V313-	1317
1.32.1 4-pin connector -T4ea-	1317
1.33 Rear right temperature flap control motor -V314-	1318
1.33.1 4-pin connector -T4eb-	1318
1.34 Control motor for left footwell temperature flap -V411-	1319
1.34.1 4-pin connector -T4ec-	1319
1.35 Right footwell temperature flap control motor -V412-	1320
1.35.1 4-pin connector -T4ed-	1320
1.36 Fresh air flap control motor -V438-	1321
1.36.1 4-pin connector -T4el-	1321
1.37 Compressor for multicontour driver seat -V439-	1322
1.37.1 2-pin connector -T2ht-	1322
1.38 Compressor for multicontour front passenger seat -V440-	1323
1.38.1 2-pin connector -T2hu-	1323
1.39 Rear driver side window regulator motor -V471-	1324
1.39.1 2-pin connector -T2hs-	1324
1.40 Rear passenger side window regulator motor -V472-	1325
1.40.1 2-pin connector -T2lv-	1325
1.41 Front left seat backrest fan 1 -V512-	1326
1.41.1 6-pin connector -T6ab-	1326
1.42 Front left seat cushion fan 1 -V514-	1327
1.42.1 6-pin connector -T6ac-	1327
1.43 Front right seat backrest fan 1 -V516-	1328
1.43.1 6-pin connector -T6ad-	1328
1.44 Front right seat cushion fan 1 -V518-	1329
1.44.1 6-pin connector -T6ae-	1329
1.45 Radiator blind control motor -V544-	1330
1.45.1 4-pin connector -T4ee-	1330
1.46 Radiator blind control motor 2 -V550-	1331
1.46.1 4-pin connector -T4ef-	1331
1.47 Gearbox auxiliary hydraulic pump -V552-	1332
1.47.1 5-pin connector -T5al-	1332
1.48 Coolant pump for high-voltage battery -V590-	1333
1.48.1 3-pin connector -T3bl-	1333
1.49 Rear left air distribution control motor -V593-	1334
1.49.1 4-pin connector -T4ei-	1334
1.50 Rear right air distribution control motor -V594-	1335
1.50.1 4-pin connector -T4ej-	1335
1.51 Thermal management coolant pump 2 -V618-	1336
1.51.1 3-pin connector -T3bj-	1336
1.52 Thermal management coolant pump 4 -V620-	1337
1.52.1 3-pin connector -T3bk-	1337
1.53 Changeover and mixing valve for thermal management -V650-	1338
1.53.1 5-pin connector -T5p-	1338
1.54 Changeover and mixing valve 2 for thermal management -V651-	1339
1.54.1 5-pin connector -T5q-	1339
1.55 Changeover and mixing valve 4 for thermal management -V653-	1340
1.55.1 5-pin connector -T5ao-	1340
1.56 Changeover and mixing valve 7 for thermal management -V656-	1341
1.56.1 5-pin connector -T5aq-	1341
1.57 Power latching for rear lid -VX16-	1342
1.57.1 6-pin connector -T6af-	1342
1.58 Driver door lock unit -VX21-	1343
1.58.1 10-pin connector -T10j-	1343
1.59 Front passenger door lock unit -VX22-	1344
1.59.1 10-pin connector -T10k-	1344
1.60 Rear lid lock unit -VX25-	1345
1.60.1 5-pin connector -T5i-	1345

1.61 Radiator fan -VX57-	1346
1.61.1 4-pin connector -T4ek-	1346
1.62 Windscreen wiper -VX58-	1347
1.62.1 4-pin connector -T4em-	1347
1.63 Gear actuator -VX65-	1348
1.63.1 11-pin connector -T11b-	1348
1.64 Rear lid drive unit -VX69-	1349
1.64.1 10-pin connector -T10w-	1349
1.65 Drive unit for rear spoiler adjustment -VX82-	1350
1.65.1 8-pin connector -T8x-	1350
1.66 Rear door lock unit, driver side -VX83-	1351
1.66.1 10-pin connector -T10l-	1351
1.67 Rear door lock unit, front passenger side -VX84-	1352
1.67.1 10-pin connector -T10ac-	1352
1.68 Three-phase drive front -VX89-	1353-1354
1.68.1 4-pin connector -T4fb-	1353
1.68.2 14-pin connector -T14ae-	1354
1.69 Three-phase drive rear -VX90-	1355
1.69.1 4-pin connector -T4fc-	1355
1.69.2 14-pin connector -T14af-	1355
1.70 Axle differential lock -VX100-	1356
1.70.1 11-pin connector -T11a-	1356
1.71 Radiator fan 2 -VX103-	1357-1358
1.71.1 4-pin connector -T4dx-	1357-1358
842 - -Connector views: parts with prefix W to Z - 1	1359-1397
1. -Connector views: parts with prefix W to Z	1359-1397
1.1 Glove compartment light -W6-	1360
1.1.1 2-pin connector -T2il-	1360
1.2 Front passenger side illuminated vanity mirror -W14-	1361
1.2.1 2-pin connector -T2if-	1361
1.3 Left boot light -W18-	1361
1.3.1 2-pin connector -T2ig-	1361
1.4 Driver side illuminated vanity mirror -W20-	1362
1.4.1 2-pin connector -T2ih-	1362
1.5 Right boot light -W35-	1363
1.5.1 2-pin connector -T2ii-	1363
1.6 Rear left footwell light -W45-	1364-1365
1.6.1 2-pin connector -T2ij-	1364
1.6.2 4-pin connector -T4en-	1365
1.7 Rear right footwell light -W46-	1366
1.7.1 2-pin connector -T2ik-	1366
1.7.2 4-pin connector -T4eo-	1366
1.8 Rear left interior light -W47-	1367
1.8.1 4-pin connector -T4ep-	1367
1.9 Rear right interior light -W48-	1368
1.9.1 4-pin connector -T4eq-	1368
1.10 Rear driver side entry light -W83-	1369
1.10.1 2-pin connector -T2ie-	1369
1.11 Rear passenger side entry light -W84-	1370
1.11.1 2-pin connector -T2lw-	1370
1.12 Driver side entry light -W92-	1371
1.12.1 2-pin connector -T2ic-	1371
1.13 Front passenger side entry light -W93-	1372
1.13.1 2-pin connector -T2id-	1372
1.14 Light for driver side sill panel moulding ambient lighting -W102-	1373
1.14.1 2-pin connector -T2hy-	1373
1.15 Light for sill panel moulding ambient lighting, front passenger side -W103-	1374
1.15.1 2-pin connector -T2hz-	1374
1.16 Light for rear sill panel moulding ambient lighting, front passenger side -W104-	1375
1.16.1 2-pin connector -T2ib-	1375
1.17 Light for rear sill panel moulding ambient lighting, driver side -W105-	1376
1.17.1 2-pin connector -T2ia-	1376
1.18 Front roof module -WX3-	1377-1378
1.18.1 10-pin connector -T10x-	1377
1.18.2 10-pin connector -T10z-	1378
1.19 Heated rear window -Z1-	1379-1380

1.19.1 1-pin connector -T1oi-	1379
1.19.2 1-pin connector -T1nf-	1380
1.19.3 2-pin connector -T2jt-	1380
1.20 Heated bench seat cushion for rear left seat -Z10-	1381
1.20.1 4-pin connector -T4et-	1381
1.21 heated backrest for rear left seat -Z11-	1382
1.21.1 4-pin connector -T4eu-	1382
1.22 Heated bench seat cushion for rear right seat -Z12-	1383
1.22.1 4-pin connector -T4ex-	1383
1.23 Heated backrest for rear right seat -Z13-	1384
1.23.1 4-pin connector -T4ey-	1384
1.24 Heated seat cushion for front left seat -Z45-	1385
1.24.1 4-pin connector -T4ez-	1385
1.25 Heated seat cushion for front right seat -Z46-	1386
1.25.1 4-pin connector -T4fa-	1386
1.26 Windscreen heater for front sensors -Z113-	1387
1.26.1 2-pin connector -T2im-	1387
1.27 Front left heated seat backrest -Z116-	1388
1.27.1 4-pin connector -T4ev-	1388
1.28 Front right heated seat backrest -Z117-	1389
1.28.1 4-pin connector -T4ew-	1389
1.29 Lateral support heater for rear left seat -Z123-	1390
1.29.1 2-pin connector -T2in-	1390
1.30 Lateral support heater for rear right seat -Z124-	1391
1.30.1 2-pin connector -T2io-	1391
1.31 Heater element for front left seat extension -Z168-	1392
1.31.1 2-pin connector -T2ip-	1392
1.32 Heater element for front right seat extension -Z169-	1393
1.32.1 2-pin connector -T2iq-	1393
1.33 High-voltage heater (linear) -Z189-	1394-1395
1.33.1 1-pin connector -T1pg-	1394
1.33.2 5-pin connector -T5bf-	1395
1.33.3 8-pin connector -T8y-	1396
1.34 Heating element with seat occupied recognition, front passenger side -ZX14-	1396-1397
1.34.1 8-pin connector -T8z-	1396-1397