

## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety precautions</b>	<b>1</b>
1.1 Safety information	1
<b>2 Repair instructions</b>	<b>2</b>
2.1 Repair instructions	2
<b>3 Electrical components</b>	<b>3</b>
3.1 Starting diagnosis	3
<b>4 Identification</b>	<b>4</b>
4.1 Identification of transmission unit	4
<b>5 Technical data</b>	<b>5</b>
5.1 Capacities	5
<b>34 - Controls, housing</b>	<b>6</b>
<b>1 Safety precautions</b>	<b>6</b>
1.1 Safety information	6
<b>2 Selector mechanism</b>	<b>7</b>
2.1 Exploded view - selector mechanism	7
2.2 Assembly overview - gear actuator	7
2.3 Removing and installing selector mechanism	8
2.4 Removing and installing gear actuator VX65	9
2.5 Renewing selector shaft oil seal	10
<b>3 Removing and installing transmission unit</b>	<b>12</b>
3.1 Removing transmission unit	12
<b>4 Gear oil</b>	<b>13</b>
4.1 Draining and filling gear oil	13
<b>5 Gear oil circuit</b>	<b>15</b>
5.1 Exploded view - gear oil circuit	15
5.2 Removing and installing gear oil cooler	16
5.3 Removing and installing gear oil pump	16
<b>39 - Final drive - differential</b>	<b>18</b>
<b>1 Safety precautions</b>	<b>18</b>
1.1 Safety information	18
<b>2 Oil seals</b>	<b>19</b>
2.1 Assembly overview - oil seals	19
2.2 Renewing right oil seal	19
2.3 Renewing left oil seal	20
2.4 Renewing input shaft oil seal	21
<b>3 Differential</b>	<b>23</b>
3.1 Removing and installing stub shaft (left-side)	23
<b>4 Transmission unit control system</b>	<b>24</b>
4.1 Overview of fitting locations - transmission unit control system	24
4.2 Removing and installing speed sender G38	24
4.3 Removing and installing clutch jaw position sensor G1016	26
4.4 Removing and installing clutch position sender G476	26
4.5 Removing and installing gearbox oil temperature sender G93	28
<b>5 Components of differential lock</b>	<b>29</b>
5.1 Assembly overview - components of differential lock	29
5.2 Removing and installing axle differential lock VX100	29
5.3 Removing and installing axle differential lock control unit J647	31
5.4 Renewing bevel box for axle differential lock	31