

Contents

00 - Technical data	1
1 Safety and repair instructions	1
1.1 Safety information	1
1.2 Repair instructions	1
2 Identification	2
2.1 PR number and type of brake system	2
3 Technical data	3
3.1 Technical data for brakes	3
4 Brake test	4
4.1 Checking vehicles on roller dynamometer	4
4.2 Checking electromechanical parking brake	4
5 Electrical components	6
5.1 Starting diagnosis	6
6 Checking brake discs	7
6.1 Checking brake discs - steel brakes	7
45 - Anti-lock brake system	11
1 Safety and repair instructions	11
1.1 Safety information	11
1.2 Repair instructions	11
2 Overview of fitting locations	12
2.1 Overview of fitting locations - ABS/ESP	12
3 Sensors	14
3.1 Assembly overview - speed sensors on front axle	14
3.2 Assembly overview - speed sensors on rear axle	14
3.3 Removing and installing front wheel speed sensor G45/G47	15
3.4 Removing and installing rear wheel speed sensor G44/G46	16
3.5 Checking ABS sensor ring	17
46 - Brakes - mechanism	19
1 Safety and repair instructions	19
1.1 Safety information	19
1.2 Repair instructions	19
2 Front brakes	20
2.1 Assembly overview - six-piston brakes, 18"	20
2.2 Assembly overview - six-piston brakes, 19"	23
2.3 Removing and installing brake pads - 18"	25
2.4 Removing and installing brake pads - 19"	30
2.5 Removing and installing brake caliper	35
2.6 Renewing brake caliper	37
2.7 Removing and installing brake disc	40
2.8 Removing and installing splash plate	40
2.9 Removing and installing pad wear indicator wire - 18"	41
2.10 Removing and installing pad wear indicator wire - 19"	43
3 Rear brakes	46
3.1 Assembly overview - rear brakes	46
3.2 Removing and installing brake pads	48
3.3 Removing and installing brake caliper	52
3.4 Renewing brake caliper	54
3.5 Removing and installing brake carrier	57
3.6 Removing and installing brake disc	58



3.7	Removing and installing splash plate	59
3.8	Removing and installing pad wear indicator wire	60
4	Parking brake	63
4.1	Assembly overview - parking brake	63
4.2	Removing and installing parking brake motor V282/V283	63
4.3	Releasing parking brake manually	65
5	Brake pedal	67
5.1	Assembly overview - brake pedal	67
5.2	Removing and installing mounting bracket	68
5.3	Separating brake pedal from brake pressure unit	70
5.4	Connecting brake pedal to brake pressure unit	71
5.5	Removing and installing brake pedal	72
47	Brakes - hydraulics	74
1	Safety and repair instructions	74
1.1	Safety information	74
1.2	Repair instructions	74
2	Front brake caliper	75
2.1	Assembly overview - front brake caliper	75
2.2	Removing and installing brake caliper piston	75
3	Rear brake caliper	79
3.1	Assembly overview - rear brake caliper	79
3.2	Removing and installing brake caliper piston	79
4	Brake pressure unit	84
4.1	Assembly overview - brake pressure unit	84
4.2	Removing and installing brake pressure unit	84
4.3	Removing and installing brake fluid reservoir	89
5	Hydraulic system	92
5.1	Bleeding hydraulic system	92
5.2	Leak test	95