

Contents

00 - Technical data	1
1 Safety and repair instructions	1
1.1 Safety information	1
1.2 Repair instructions	1
2 Electrical components	2
2.1 Starting diagnosis	2
40 - Front suspension	5
1 Safety and repair instructions	5
1.1 Safety information	5
1.2 Repair instructions	5
2 Front axle	6
2.1 Overview of fitting locations - front axle	6
3 Subframe	7
3.1 Assembly overview - subframe	7
3.2 Fixing subframe in position	10
3.3 Lowering subframe	13
3.4 Removing and installing subframe with front motor and steering rack	16
3.5 Removing and installing underbody guard	23
3.6 Removing and installing subframe cross brace	24
4 Anti-roll bar	26
4.1 Assembly overview - anti-roll bar	26
4.2 Removing and installing anti-roll bar	26
4.3 Removing and installing coupling rod	27
5 Suspension strut, upper suspension links	30
5.1 Assembly overview - suspension strut, upper suspension links	30
5.2 Assembly overview - strut brace	32
5.3 Removing and installing suspension strut	32
5.4 Removing and installing upper suspension links	35
5.5 Renewing bush for upper suspension link	36
5.6 Charging suspension strut	37
5.7 Removing and installing shock absorber fork	39
5.8 Removing and installing strut brace	41
6 Lower suspension links, swivel joint	43
6.1 Assembly overview - lower suspension links, swivel joint	43
6.2 Removing and installing track control link	45
6.3 Removing and installing guide link	48
6.4 Renewing bush for track control link	49
6.5 Removing and installing swivel joint	53
6.6 Removing and installing bonded rubber bush for guide link	53
7 Wheel bearings	56
7.1 Assembly overview - wheel bearing	56
7.2 Removing and installing wheel bearing housing	56
7.3 Removing and installing wheel bearing unit	58
7.4 Servicing wheel bearing unit	60
7.5 Lifting suspension to unladen position	64
8 Drive shaft	66
8.1 Assembly overview - drive shaft	66
8.2 Removing and installing drive shaft	68
8.3 Loosening and tightening nut/bolt securing drive shaft	69
8.4 Dismantling and assembling drive shaft	71
8.5 Servicing constant velocity joint	76



8.6	Checking outer constant velocity joint	77
8.7	Grease quantity and type	79
8.8	Tensioning clamp for boot	79
42	Rear suspension	81
1	Safety and repair instructions	81
1.1	Safety information	81
1.2	Repair instructions	81
2	Rear axle	82
2.1	Overview of fitting locations - rear axle	82
3	Subframe	83
3.1	Assembly overview - subframe	83
3.2	Fixing subframe in position	83
3.3	Lowering subframe	89
3.4	Removing and installing subframe	93
3.5	Servicing subframe	104
4	Anti-roll bar	112
4.1	Assembly overview - anti-roll bar	112
4.2	Removing and installing anti-roll bar	112
4.3	Removing and installing coupling rod	115
5	Suspension links, track rod	116
5.1	Assembly overview - transverse links	116
5.2	Removing and installing upper transverse links	117
5.3	Removing and installing wind deflector	122
5.4	Removing and installing lower transverse link (rear) - vehicles with motor codes EASA, EASB	124
5.5	Removing and installing lower transverse link (rear) - vehicles with motor code EAVA	128
5.6	Removing and installing track rod	130
6	Suspension strut/shock absorber, spring	133
6.1	Assembly overview - suspension strut/shock absorber, spring	133
6.2	Assembly overview - shock absorber	133
6.3	Removing and installing shock absorber	134
6.4	Servicing shock absorber	136
6.5	Removing and installing spring - vehicles with motor codes EASA, EASB	137
6.6	Removing and installing spring - vehicles with motor code EAVA	140
6.7	Pressing in auxiliary spring	142
7	Wheel bearing, trailing arm	144
7.1	Assembly overview - wheel bearing	144
7.2	Removing and installing wheel bearing housing	144
7.3	Removing and installing wheel bearing unit	147
7.4	Servicing wheel bearing unit	149
7.5	Lifting suspension to unladen position	153
8	Drive shaft	155
8.1	Assembly overview - drive shaft	155
8.2	Removing and installing drive shaft - vehicles with motor codes EASA, EASB	157
8.3	Removing and installing drive shaft - vehicles with motor code EAVA	158
8.4	Loosening and tightening nut/bolt securing drive shaft	159
8.5	Dismantling and assembling drive shaft	161
8.6	Checking outer constant velocity joint	167
8.7	Checking inner constant velocity joint	167
8.8	Tightening clamp for boot	170
8.9	Grease quantity and type	171
43	Self-levelling suspension	172
1	Safety and repair instructions	172

1.1	Safety information	172
1.2	Repair instructions	172
2	Electronic damping control	173
2.1	Overview of fitting locations - electronic damping control	173
2.2	Removing and installing running gear control unit J775	173
3	Vehicle level senders	176
3.1	Assembly overview - front vehicle level senders	176
3.2	Assembly overview - rear vehicle level senders	176
3.3	Removing and installing front vehicle level sender G78/G289	177
3.4	Removing and installing rear vehicle level sender G76/G77	179
4	Air suspension	180
4.1	Overview of fitting locations - electrical components	180
4.2	Overview of fitting locations - air suspension	180
4.3	Assembly overview - air pipes	181
4.4	Assembly overview - air supply unit	182
4.5	Checking air suspension for leaks	184
4.6	Removing and installing adaptive suspension compressor electronics J1135	186
4.7	Repairing air lines	186
4.8	Renewing connection piece	188
4.9	Removing and installing air supply unit	190
4.10	Removing and installing filter	192
4.11	Removing and installing solenoid valve block	193
4.12	Removing and installing accumulator	194
44	Wheels, tyres, vehicle geometry	196
1	Safety and repair instructions	196
1.1	Safety information	196
1.2	Repair instructions	196
2	Wheel alignment	197
2.1	Notes on wheel alignment	197
2.2	Test requirements	197
2.3	Preparations	198
2.4	Wheel alignment specifications	199
2.5	Wheel alignment procedure	200
2.6	When does wheel alignment have to be checked?	201
2.7	Explanatory notes on production control numbers (PR numbers)	203
2.8	Wheel runout compensation	203
2.9	Checking maximum steering angle	203
2.10	Adjusting camber at rear wheels	204
2.11	Adjusting toe setting at rear wheels	205
2.12	Centralising camber at front wheels	205
2.13	Adjusting toe setting at front wheels	207
3	Wheels, tyres	209
3.1	Assembly overview - wheel	209
3.2	Removing and installing wheel	211
3.3	Cleaning contact surfaces on rim	213
3.4	Positioning anti-theft wheel bolts - steel wheels	214
4	Tyre Pressure Loss Indicator / Tyre Pressure Monitoring System	215
4.1	Assembly overview - tyre pressure sensor	215
4.2	Removing and installing Tyre Pressure Monitoring System control unit J502	216
4.3	Removing and installing tyre pressure sensor	216
48	Steering	219
1	Safety and repair instructions	219
1.1	Safety information	219



1.2	Repair instructions	219
2	Steering wheel	220
2.1	Assembly overview - steering wheel	220
2.2	Removing and installing steering wheel	222
3	Steering column	223
3.1	Assembly overview - steering column	223
3.2	Removing and installing steering column	224
3.3	Removing and installing intermediate steering shaft	227
3.4	Removing and installing control unit for electronic steering column lock J764	230
3.5	Removing and installing control unit for electrically adjustable steering column J866	231
4	Steering rack	233
4.1	Assembly overview - steering rack	233
4.2	Assembly overview - track rods	233
4.3	Removing and installing steering rack	235
4.4	Removing and installing boot	238
4.5	Removing and installing track rod	239
4.6	Removing and installing track rod ball joint	240
4.7	Tightening clamp	242