

Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety information	1
2 Repair instructions	2
2.1 Repair instructions	2
3 Electrical components	3
3.1 Starting diagnosis	3
98 - Assist systems	7
1 Safety and repair instructions	7
1.1 Safety information	7
1.2 Repair instructions	7
2 Fitting locations	8
2.1 Overview of fitting locations - senders, sensors and control units in front section of vehicle	8
2.2 Overview of fitting locations - senders, sensors and control units in front section of vehicle	10
2.3 Overview of fitting locations - senders, sensors and control units in centre section of vehicle	12
2.4 Overview of fitting locations - senders, sensors and control units in rear section of vehicle	14
3 Senders/sensors/control units	17
3.1 Removing and installing front parking aid senders G252/G253/G254/G255	17
3.2 Removing and installing rear parking aid senders G203/G204/G205/G206	18
3.3 Removing and installing front park assist steering senders G568/G569	19
3.4 Removing and installing rear park assist steering senders G716/G717	19
3.5 Removing and installing parking aid loudspeaker R169	20
3.6 Removing and installing adaptive cruise control unit J428	21
3.7 Removing and installing adaptive cruise control unit J428	23
3.8 Removing and installing retaining plate for adaptive cruise control unit J428	24
3.9 Renewing clip on adaptive cruise control unit J428	26
3.10 Removing and installing heater element for adaptive cruise control radar sensor Z185	28
3.11 Removing and installing reversing camera system control unit J772 - KA2	29
3.12 Removing and installing lane change assist control unit J769/J770 7Y1	30
3.13 Removing and installing control unit for night vision system J853 - 9R1	31
3.14 Removing and installing radar sensor control unit for object detection J1088/J1089 - JX1	33
3.15 Removing and installing radar sensor control unit for object detection J1088/J1089 - JX1	35
3.16 Assembly overview - driver assist systems control unit	37
3.17 Removing and installing driver assist systems control unit J1121	37
3.18 Removing and installing control unit for laser distance control J1122	39
3.19 Removing and installing lane change assist warning lamp in exterior mirror K233/K234 - 7Y1	43
3.20 Removing and installing reversing camera R189 - KA2	43
3.21 Removing and installing camera for night vision system R212 - 9R1	45
3.22 Removing and installing front camera for driver assist systems R242	47
3.23 Removing and installing front overhead view camera R243	49
3.24 Removing and installing right/left overhead view camera R244/R245 - analogue exterior mirror	50
3.25 Removing and installing right/left overhead view camera R244/R245 - digital exterior mirror	52
3.26 Removing and installing rear overhead view camera R246	53
4 Calibration requirements	55
4.1 Calibration requirements	55
5 Adaptive cruise control	56
5.1 Layout - adaptive cruise control	56
5.2 Assembly overview - adaptive cruise control	56



5.3	Assembly overview - adaptive cruise control	58
5.4	Adjusting adaptive cruise control	62
6	Parking aid/park assist steering/autonomous parking	76
6.1	Layout - parking aid/park assist steering/autonomous parking	76
7	Front corner radar	78
7.1	Layout - front corner radar	78
7.2	Assembly overview - front corner radar	78
7.3	Calibrating front corner radar	80
8	Front camera for driver assist systems	84
8.1	Layout - front camera for driver assist systems	84
8.2	Assembly overview - front camera for driver assist systems	84
8.3	Calibrating front camera for driver assist systems - static calibration (setting up calibration stand)	85
9	Night vision system	93
9.1	Layout - night vision system	93
9.2	Assembly overview - control unit for night vision system	93
9.3	Assembly overview - camera for night vision system	94
9.4	Calibrating night vision system	95
10	Reversing camera system	105
10.1	Layout - reversing camera system	105
10.2	Calibrating reversing camera system	105
11	Lane change assist	111
11.1	Layout - lane change assist	111
11.2	Assembly overview - lane change assist	111
11.3	Calibrating lane change assist	113
12	Overhead view camera	120
12.1	Layout - overhead view camera	120
12.2	Assembly overview - overhead view camera	120
12.3	Calibrating overhead view camera	121