

Contents

00	Technical data	1
1	Safety precautions	1
1.1	Safety precautions when working on the high-voltage system	1
1.2	Safety precautions when working in the vicinity of high-voltage components	2
2	Repair instructions	3
2.1	Rules for cleanliness	3
2.2	Identification plates	3
2.3	Use of impact wrenches	3
2.4	Additional repair instructions for work on electric drive	4
3	Assessing high-voltage system risk level	5
93	Electric drive systems	6
1	Safety precautions	6
2	Warning labels	7
2.1	Checking warning labels	7
3	High-voltage battery unit	9
3.1	Exploded view - high-voltage battery	9
3.2	Exploded view - switching unit for high-voltage battery SX6	15
3.3	Determining mean cell voltage	17
3.4	Charging and discharging battery modules	19
3.5	Checking high-voltage battery for leaks	20
3.6	Removing and installing high-voltage battery 1 AX2	37
3.7	Lifting high-voltage battery 1 AX2	62
3.8	Removing and installing underbody guard for high-voltage battery	66
3.9	Removing and installing battery regulation control unit J840	72
3.10	Removing and installing switching unit for high-voltage battery SX6	72
4	High-voltage battery components	80
4.1	Exploded view - high-voltage battery	80
4.2	Exploded view - high-voltage battery (level 2)	90
4.3	Overview of fitting locations - battery modules	92
4.4	Overview of fitting locations - battery connectors	96
4.5	Overview of fitting locations - battery modules control units	99
4.6	Inspecting and classifying high-voltage battery 1 AX2	101
4.7	Marking battery modules, battery connectors and control units	103
4.8	Handling replacement bolts for cover for battery housing	103
4.9	Removing and installing cover for battery housing	104
4.10	Removing and installing battery housing (level 2)	125
4.11	Renewing battery housing	139
4.12	Removing battery module	158
4.13	Installing battery module	172
4.14	Removing and installing battery modules control units	181
4.15	Provisional energisation of high-voltage battery	182