

## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety precautions when working on the high-voltage system	1
1.2 Safety precautions when working in the vicinity of high-voltage components	2
1.3 Safety precautions when working on vehicles with start/stop system	2
1.4 Safety precautions when using testers and measuring instruments during a road test	3
<b>2 Repair instructions</b>	<b>4</b>
2.1 Rules for cleanliness	4
2.2 General notes	4
2.3 Contact corrosion	5
2.4 ESD (electrostatic discharge) workplace	5
2.5 Routing and attachment of pipes, hoses and wiring	5
2.6 Identification plates	5
2.7 Use of impact wrenches	6
<b>3 Electrical components</b>	<b>7</b>
3.1 Starting diagnosis	7
<b>91 - Communication</b>	<b>11</b>
<b>1 Safety information</b>	<b>11</b>
<b>2 Infotainment system</b>	<b>12</b>
2.1 Layout - infotainment system	12
2.2 Overview of fitting locations - infotainment system	18
2.3 Removing and installing infotainment system display	19
2.4 Removing and installing control unit 1 for information electronics J794	21
2.5 Removing and installing driver side volume regulator E67	23
<b>3 Sound system</b>	<b>24</b>
3.1 Layout - sound system	24
3.2 Overview of fitting locations - sound system	32
3.3 Removing and installing digital sound package control unit/amplifier	36
3.4 Removing and installing rear treble loudspeakers R14 / R16	38
3.5 Removing and installing front treble loudspeakers R20 / R22	39
3.6 Removing and installing front treble loudspeakers 2 R220 / R221	39
3.7 Removing and installing front mid-range loudspeakers R103 / R104 - 9VS	40
3.8 Removing and installing front mid-range loudspeakers 2 R276 / R277 - 9VS	40
3.9 Removing and installing rear bass loudspeakers R15 / R17	41
3.10 Removing and installing front bass loudspeakers R21 / R23	42
3.11 Removing and installing subwoofer R211	43
3.12 Removing and installing effect loudspeakers	44
3.13 Removing and installing centre loudspeaker	45
3.14 Removing and installing internal microphone R74	46
<b>4 Aerial systems</b>	<b>47</b>
4.1 Layout - aerial systems	47
4.2 Overview of fitting locations - aerial systems	52
4.3 Removing and installing aerial amplifier	60
4.4 Removing and installing window aerial suppression filter C18	63
4.5 Removing and installing roof aerial	64
4.6 Removing and installing GPS aerial	64
4.7 Removing and installing LTE aerials	65
4.8 Removing and installing satellite tuner aerial R172	66
4.9 Removing and installing digital radio aerial R183	66
4.10 Removing and installing emergency call module aerials	66
4.11 Removing and installing bumper aerials	67

4.12	Removing and installing traffic data aerial	68
4.13	Removing and installing dedicated short-range communication aerial R269	70
4.14	Removing and installing internal vehicle communication aerial R364	70
4.15	Removing and installing wireless data transfer aerial R336	71
4.16	Removing and installing wireless data transfer aerial 2 R366	71
4.17	Removing and installing near field communication aerial R350	72
4.18	Removing and installing near field communication aerial 2 R351	72
4.19	Removing and installing near field communication control unit 2 J1170	73
4.20	Removing and installing roof aerial control unit JX3	73
<b>5</b>	<b>Radio</b>	<b>74</b>
5.1	Layout - radio	74
5.2	Overview of fitting locations - radio	74
5.3	Removing and installing radio	74
5.4	Removing and installing digital radio/satellite radio	74
<b>6</b>	<b>DVD/CD changer</b>	<b>75</b>
6.1	Removing and installing DVD player R7	75
<b>7</b>	<b>Telephone system</b>	<b>77</b>
7.1	Layout - telephone	77
7.2	Overview of fitting locations - telephone system	89
7.3	Assembly overview - microphone unit	91
7.4	Removing and installing front microphone R140 / R141	92
7.5	Removing and installing aerial amplifier for mobile telephone R86	93
7.6	Removing and installing telephone bracket	95
<b>8</b>	<b>Navigation system</b>	<b>97</b>
8.1	Layout - navigation system	97
8.2	Overview of fitting locations - navigation system	97
8.3	Removing and installing control unit for navigation system	97
8.4	Removing and installing chip card reader control unit	97
<b>9</b>	<b>TV system</b>	<b>99</b>
9.1	Layout - TV system	99
9.2	Overview of fitting locations - TV system	102
9.3	Removing and installing TV tuner	103
9.4	Removing and installing TV card reader	105
<b>10</b>	<b>Reversing camera system</b>	<b>106</b>
<b>11</b>	<b>Multifunction steering wheel</b>	<b>107</b>
11.1	Layout - multifunction steering wheel	107
11.2	Assembly overview - multi-function steering wheel	107
11.3	Removing and installing multifunction buttons in steering wheel E441 / E440	109
11.4	Removing and installing paddle E756 / E755	110
<b>12</b>	<b>Voice control system</b>	<b>112</b>
12.1	Layout - voice control system	112
12.2	Removing and installing voice control system	112
<b>13</b>	<b>Connection for external multimedia devices</b>	<b>113</b>
13.1	Layout - external multimedia devices	113
13.2	Removing and installing connection for external multimedia devices	114
13.3	Removing and installing USB connection 1 U41	115
13.4	Removing and installing control unit with Android operating system J1243	115
<b>14</b>	<b>Night vision system</b>	<b>117</b>
<b>15</b>	<b>Overhead view camera</b>	<b>118</b>
<b>16</b>	<b>Online services</b>	<b>119</b>
16.1	Layout - online services	119
16.2	Overview of fitting locations - mobile online services	121
16.3	Removing and installing emergency call module control unit and communication unit J949	124

16.4	Removing and installing emergency battery, telematics A16 .....	125
16.5	Removing and installing loudspeaker for emergency call module R335 .....	127
16.6	Removing and installing interface control unit for telematics J1221 .....	128
16.7	Removing and installing telephone and telematics control unit J526 .....	128
16.8	Removing and installing data transmission aerials .....	129