

Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety information	1
2 Repair instructions	2
2.1 Repair instructions	2
3 Electrical components	3
3.1 Starting diagnosis	3
68 - Interior equipment	5
1 Safety and repair instructions	5
1.1 Safety information	5
2 Storage compartments/covers/trim panels	6
2.1 Overview of fitting locations - storage compartments/covers/trim panels	6
2.2 Assembly overview - dash panel cover (driver side)	7
2.3 Assembly overview - steering column trim	8
2.4 Assembly overview - glove compartment	9
2.5 Removing and installing dash panel cover (driver side)	11
2.6 Removing and installing dash panel cover storage compartment on driver side	12
2.7 Removing and installing footwell cover (driver side)	12
2.8 Removing and installing upper steering column trim	15
2.9 Removing and installing lower steering column trim	16
2.10 Removing and installing glove compartment opening mechanism	18
2.11 Removing and installing lock cylinder for glove compartment opening mechanism	19
2.12 Removing and installing glove compartment	20
3 Equipment	24
3.1 Assembly overview - net partition	24
3.2 Assembly overview - sun visors	24
3.3 Removing and installing grab handle	25
3.4 Removing and installing sun visor	27
3.5 Removing and installing sun visor centre mount	28
3.6 Removing and installing retainer for net partition	29
4 Centre console	31
4.1 Assembly overview - centre console	31
4.2 Removing and installing centre console trim (rear)	35
4.3 Removing and installing trim for centre console insert	37
4.4 Removing and installing centre console insert	39
4.5 Removing and installing centre console carrier	41
4.6 Removing and installing front centre console storage compartment	43
4.7 Removing and installing centre console trim	45
4.8 Removing and installing front centre console footwell trim	49
4.9 Removing and installing centre console	50
4.10 Removing and installing trim panel for centre console	52
4.11 Removing and installing cup holder	54
4.12 Removing and installing vent in rear centre console	55
4.13 Removing and installing brackets for centre console	55
5 Front centre armrest	58
5.1 Assembly overview - front centre armrest	58
5.2 Removing and installing upper part of centre armrest	58
5.3 Removing and installing cover for centre armrest	59
6 Interior mirror	62
6.1 Assembly overview - interior mirror	62
6.2 Removing and installing interior mirror	62



69 - Passenger protection	66
1 Safety information	66
1.1 Safety information	66
2 Seat belts	67
2.1 Overview of fitting locations - seat belts and anchorage points	67
2.2 Assembly overview - front three-point seat belt	69
2.3 Assembly overview - rear outer three-point seat belt	71
2.4 Assembly overview - rear centre three-point seat belt	72
2.5 Assembly overview - front belt buckle	73
2.6 Assembly overview - rear belt buckle	74
2.7 Removing and installing front three-point seat belt	75
2.8 Removing and installing rear three-point seat belt	82
2.9 Removing and installing front belt guide	90
2.10 Removing and installing rear belt guide	91
2.11 Removing and installing front belt end fitting	95
2.12 Removing and installing rear outer belt end fitting	98
2.13 Removing and installing belt height adjuster	99
2.14 Removing and installing front belt buckle	101
2.15 Removing and installing rear belt buckle	102
3 Child seat anchors	105
3.1 Assembly overview - front child seat anchors	105
3.2 Assembly overview - rear child seat anchors	105
3.3 Removing and installing front child seat anchor	106
3.4 Removing and installing rear child seat anchor	108
3.5 Removing and installing guide for child seat anchor (bottom)	109
3.6 Removing and installing cover for child seat anchor	109
4 Airbag system	111
4.1 Overview of fitting locations - airbag system	111
5 Airbag control unit	114
5.1 Assembly overview - airbag control unit	114
5.2 Removing and installing airbag control unit J234	114
6 Driver airbag	118
6.1 Assembly overview - driver airbag	118
6.2 Removing and installing airbag unit with igniters	118
6.3 Renewing connector at airbag	124
7 Front passenger airbag	126
7.1 Assembly overview - front passenger airbag	126
7.2 Removing and installing front passenger airbag unit with igniters	128
7.3 Removing and installing key-operated switch to deactivate airbag on front passenger side	131
8 Side airbags	134
8.1 Assembly overview - front side airbag	134
8.2 Assembly overview - rear side airbag	134
8.3 Removing and installing front side airbag with igniter	135
8.4 Removing and installing rear side airbag with igniter	138
8.5 Removing and installing wire for front side airbag	142
9 Curtain airbags	146
9.1 Assembly overview - curtain airbag	146
9.2 Removing and installing curtain airbag with igniter	146
10 Knee airbags	151
10.1 Assembly overview - knee airbag	151
10.2 Removing and installing knee airbag with igniter	151
11 Crash sensors for airbags	158
11.1 Overview of fitting locations - crash sensors for airbags	158

11.2	Removing and installing front airbag crash sensor for driver side G283	160
11.3	Removing and installing front side airbag crash sensor G179/G180	162
11.4	Removing and installing rear side airbag crash sensor G256/G257	165
11.5	Removing and installing crash sensor for side airbag in B-pillar G1101/G1102	167
11.6	Removing and installing crash sensor for rear-end collision G572	170
12	Seat position sensor	173
12.1	Assembly overview - seat position sensor	173
12.2	Removing and installing seat position sensor	173
13	Belt-fastened recognition system	177
13.1	Assembly overview - seat occupied sensor	177
13.2	Removing and installing seat occupied sensor on front passenger side G128	177
13.3	Removing and installing rear seat occupied sensor G177/G178/G1010	178
14	Seat occupied recognition system	180
14.1	Overview of fitting locations - seat occupied recognition system	180
14.2	Removing and installing seat occupied sensor	181
70	Trim, insulation	184
1	Safety information	184
1.1	Safety information	184
2	Front door trim	185
2.1	Assembly overview - front door trim	185
2.2	Removing and installing mid-range loudspeaker trim	187
2.3	Removing and installing trim panel	187
2.4	Removing and installing front door trim	188
2.5	Removing and installing front door puller	192
2.6	Removing and installing interior door handle	194
2.7	Removing and installing window frame trim	195
3	Rear door trim	197
3.1	Assembly overview - rear door trim	197
3.2	Removing and installing treble loudspeaker trim	199
3.3	Removing and installing trim panel	200
3.4	Removing and installing rear door trim	201
3.5	Removing and installing rear door puller	203
3.6	Removing and installing window frame trim	205
3.7	Removing and installing interior door handle	207
3.8	Removing and installing sun blind for door window	208
3.9	Removing and installing retainer for sun blind	209
4	Dash panel	211
4.1	Assembly overview - dash panel	211
4.2	Removing and installing dash panel cover (side)	213
4.3	Removing and installing centre dash panel cover	215
4.4	Removing and installing trim for dash panel insert	216
4.5	Removing and installing loudspeaker trim	218
4.6	Removing and installing trim panel for dash panel	219
4.7	Removing and installing support bracket for dash panel trim	225
4.8	Removing and installing dash panel	227
4.9	Removing and installing cover for dash panel/head-up display	233
4.10	Removing and installing loudspeaker mounting	234
4.11	Removing and installing outer dash panel vent	234
4.12	Removing and installing centre vent	237
4.13	Removing and installing front centre defroster vent	239
5	Dash panel cross member	240
5.1	Assembly overview - dash panel cross member	240
5.2	Removing and installing dash panel cross member	243
5.3	Removing and installing support for knee bolster	249



6	Passenger compartment trim panels	251
6.1	Overview of fitting locations - passenger compartment trim panels	251
6.2	Assembly overview - sill panel moulding	251
6.3	Assembly overview - A-pillar trim	252
6.4	Assembly overview - B-pillar trim	253
6.5	Assembly overview - C-pillar trim, e-tron	254
6.6	Assembly overview - C-pillar trim, e-tron Sportback	255
6.7	Assembly overview - D-pillar trim, e-tron	256
6.8	Assembly overview - D-pillar trim, e-tron Sportback	257
6.9	Assembly overview - foot rest and floor covering	258
6.10	Removing and installing sill panel moulding	260
6.11	Removing and installing upper A-pillar trim	261
6.12	Removing and installing lower A-pillar trim	264
6.13	Removing and installing lower B-pillar trim	266
6.14	Removing and installing upper B-pillar trim	268
6.15	Removing and installing upper C-pillar trim	270
6.16	Removing and installing lower C-pillar trim	273
6.17	Removing and installing D-pillar trim	274
6.18	Removing and installing foot rest	279
6.19	Removing and installing floor covering	281
7	Luggage compartment trim panels	284
7.1	Overview of fitting locations - luggage compartment trim panels	284
7.2	Assembly overview - luggage compartment (front)	284
7.3	Assembly overview - luggage compartment side trim, e-tron	285
7.4	Assembly overview - luggage compartment side trim, e-tron Sportback	286
7.5	Assembly overview - luggage compartment floor	287
7.6	Assembly overview - lower rear lid trim	288
7.7	Removing and installing lower rear lid trim	290
7.8	Removing and installing grip for rear luggage compartment floor	292
7.9	Removing and installing side rear lid trim	293
7.10	Removing and installing front luggage compartment pan	294
7.11	Removing and installing rear lid trim (top)	296
7.12	Removing and installing luggage compartment side trim	297
7.13	Removing and installing lock carrier trim	300
7.14	Removing and installing fastening ring	300
7.15	Removing and installing luggage compartment floor	301
7.16	Removing and installing gap cover	303
7.17	Removing and installing lining for spare wheel well	303
8	Roof trim panels	305
8.1	Assembly overview - moulded headliner	305
8.2	Removing and installing moulded headliner	307
8.3	Lowering moulded headliner	308
8.4	Lowering moulded headliner for removal of roof aerial	313
8.5	Removing and installing roof reinforcement	317
72	Seat frames	321
1	Safety information	321
1.1	Safety information	321
2	Front seats	322
2.1	Overview of fitting locations - electrical and electronic components	322
2.2	Assembly overview - front seat	325
2.3	Assembly overview - front seat backrest	325
2.4	Assembly overview - head restraint	327
2.5	Assembly overview - seat pan	328
2.6	Removing and installing front seat	334

2.7	Attaching front seat to seat repair stand	341
2.8	Removing and installing front seat backrest	342
2.9	Removing and installing backrest cover panel - standard seat/sports seat	344
2.10	Removing and installing backrest cover panel - convenience seat	345
2.11	Removing and installing spring mat	348
2.12	Removing and installing backrest adjuster	348
2.13	Removing and installing lumbar support adjustment motor V125/V126/V129/V130	349
2.14	Removing and installing seat frame trim	350
2.15	Removing and installing bracket for seat frame trim/control unit/compressor	357
2.16	Removing and installing seat rail cover	359
2.17	Removing and installing seat height adjuster - manual seat adjustment	361
2.18	Removing and installing seat longitudinal adjustment handle - manual seat adjustment	363
2.19	Removing and installing seat rake adjuster - manual seat adjustment	364
2.20	Removing and installing seat rake adjuster - electric seat adjustment	365
2.21	Removing and installing trim for seat depth adjuster - sports seat/super sports seat	366
2.22	Removing and installing carrier for seat depth adjuster - convenience seat	367
2.23	Removing and installing seat depth adjuster - manual seat adjustment	369
2.24	Removing and installing seat depth adjuster - electric seat adjustment	371
2.25	Removing and installing bracket for fire extinguisher	373
2.26	Connecting and disconnecting modular wiring	374
2.27	Removing and installing driver seat longitudinal adjustment motor V28	375
2.28	Removing and installing seat adjustment operating unit E470/E471 - electric seat adjustment	378
2.29	Removing and installing switch/switch module for front seat	379
2.30	Removing and installing control module for seat functions - electric seat adjustment	380
2.31	Removing and installing front seat fans	382
2.32	Removing and installing head restraint	384
2.33	Removing and installing head restraint guide	386
2.34	Removing and installing carrier for multimedia system display unit	387
3	Rear seats	390
3.1	Assembly overview - bench seat/individual seats	390
3.2	Assembly overview - rear seat backrest	390
3.3	Assembly overview - centre armrest	391
3.4	Assembly overview - locking mechanism	392
3.5	Assembly overview - head restraint and head restraint guide	393
3.6	Removing and installing bench seat/individual seats	394
3.7	Removing and installing rear seat backrest	398
3.8	Removing and installing backrest with load-through hatch	400
3.9	Removing and installing trim for locking mechanism	401
3.10	Removing and installing locking mechanism for rear seat backrest	403
3.11	Removing and installing backrest remote release mechanism	404
3.12	Removing and installing bracket for backrest remote release mechanism	406
3.13	Removing and installing outer bearing sleeve	408
3.14	Removing and installing inner pivot pin	409
3.15	Removing and installing trim for backrest with load-through hatch	409
3.16	Removing and installing centre armrest	410
3.17	Removing and installing cup holder	411
3.18	Removing and installing centre mount	412
3.19	Removing and installing head restraint	413
3.20	Removing and installing head restraint guide	414
4	Front seat pneumatic system	417
4.1	Connection diagram - pneumatic system	417
4.2	Assembly overview - pneumatic system	417
4.3	Checking pneumatic system	419
4.4	Severing and connecting pneumatic lines	424
4.5	Servicing pneumatic lines	425



4.6	Removing and installing module carrier with lumbar support air cushions, valve block and backrest bolster adjusters	425
4.7	Removing and installing air cushion for seat bolster adjustment	427
4.8	Removing and installing massage mat	429
4.9	Removing and installing valve block for massage function	430
4.10	Removing and installing compressor for pneumatic system	431
74	Seat - padding, covers	433
1	Safety information	433
1.1	Safety information	433
2	Covers and padding on front seats	434
2.1	Assembly overview - seat pan cover and padding	434
2.2	Assembly overview - backrest cover and padding	436
2.3	Assembly overview - seat heater elements	437
2.4	Removing and installing seat pan cover and padding - standard seat	439
2.5	Removing and installing seat pan cover and padding - sports seat/super sports seat	441
2.6	Removing and installing seat pan cover and padding - convenience seat	446
2.7	Separating seat pan cover and padding	451
2.8	Removing and installing backrest cover and padding - standard seat/sports seat	453
2.9	Removing and installing backrest cover and padding - super sports seat	455
2.10	Removing and installing backrest cover and padding - convenience seat	458
2.11	Separating backrest cover and padding	460
2.12	Removing and installing seat heater element Z6/Z8	461
2.13	Removing and installing seat bolster heating element	463
2.14	Removing and installing seat depth adjuster heater element	464
2.15	Removing and installing backrest heater element Z7/Z9	465
3	Covers and padding on rear seats	468
3.1	Assembly overview - cover and padding	468
3.2	Assembly overview - seat heater elements	470
3.3	Removing and installing cover and padding for rear bench seat	470
3.4	Removing and installing cover and padding for rear seat backrest	472
3.5	Removing and installing intermediate padding - backrest with load-through hatch	475
3.6	Separating cover and padding for rear bench seat	477
3.7	Separating cover and padding for rear seat backrest	478
3.8	Removing and installing side padding	479
3.9	Removing and installing seat heater element	481
3.10	Removing and installing backrest heater element	482