

## Contents

<b>00</b>	<b>Technical data</b>	<b>1</b>
1	<b>Safety information</b>	1
1.1	Safety precautions when working in the vicinity of high-voltage components	1
1.2	Checking child seat anchors following an accident	1
2	<b>Repair instructions</b>	2
2.1	Routing and attachment of pipes, hoses and wiring	2
2.2	Contact corrosion	2
2.3	Secure threaded connections	2
2.4	Identification plates	2
2.5	Impact wrenches	2
<b>72</b>	<b>Seat frames</b>	<b>4</b>
1	<b>Safety information</b>	4
2	<b>Front seats</b>	5
2.1	Assembly overview - front seat	5
2.2	Assembly overview - seat pan	6
2.3	Assembly overview - front seat backrest	12
2.4	Assembly overview - head restraint	14
2.5	Overview of fitting locations - electrical and electronic components	15
2.6	Removing and installing front seat	18
2.7	Attaching front seat to seat repair stand	26
2.8	Dismantling and assembling seat pan	27
2.9	Removing and installing seat height adjuster	42
2.10	Removing and installing seat longitudinal adjuster	43
2.11	Removing and installing seat rake adjuster	46
2.12	Removing and installing seat depth adjuster	47
2.13	Removing and installing backrest adjuster	50
2.14	Removing and installing front seat backrest	51
2.15	Removing and installing backrest cover panel	54
2.16	Removing and installing lumbar support adjustment motor V125/V126/V129/V130	58
2.17	Removing and installing seat adjustment operating unit E470/E471	59
2.18	Removing and installing switch/switch module for front seat	61
2.19	Removing and installing control unit for seat functions	61
2.20	Removing and installing front seat fans	62
2.21	Removing and installing head restraint	65
2.22	Removing and installing head restraint guide	67
2.23	Removing and installing carrier for multimedia system display unit	68
3	<b>Rear seats</b>	70
3.1	Assembly overview - bench seat/individual seats	70
3.2	Assembly overview - rear seat backrest	71
3.3	Assembly overview - centre armrest	72
3.4	Assembly overview - locking mechanism	73
3.5	Assembly overview - head restraint and head restraint guide	74
3.6	Removing and installing bench seat/individual seats	75
3.7	Removing and installing rear seat backrest	79
3.8	Removing and installing backrest with load-through hatch	80
3.9	Removing and installing trim for locking mechanism	81
3.10	Removing and installing locking mechanism for rear seat backrest	82
3.11	Removing and installing backrest remote release mechanism	84
3.12	Removing and installing bracket for backrest remote release mechanism	85
3.13	Removing and installing outer bearing sleeve	87
3.14	Removing and installing inner pivot pin	87
3.15	Removing and installing trim for backrest with load-through hatch	88



3.16	Removing and installing centre armrest .....	89
3.17	Removing and installing centre bracket .....	90
3.18	Removing and installing head restraint .....	91
3.19	Removing and installing head restraint guide .....	93
<b>4</b>	<b>Front seat pneumatic system .....</b>	<b>96</b>
4.1	Connection diagram - pneumatic system, convenience seat .....	96
4.2	Assembly overview - pneumatic system .....	97
4.3	Checking pneumatic system .....	99
4.4	Severing and connecting pneumatic lines .....	104
4.5	Servicing pneumatic lines .....	105
4.6	Removing and installing lumbar support with air cushions - module with valve block and backrest bolster adjusters .....	106
4.7	Removing and installing air cushion for seat bolster adjustment .....	108
4.8	Removing and installing massage mat .....	109
4.9	Removing and installing valve block for massage function .....	110
4.10	Removing and installing compressor for pneumatic system .....	111
<b>74</b>	<b>Seat - padding, covers .....</b>	<b>113</b>
<b>1</b>	<b>Safety information .....</b>	<b>113</b>
<b>2</b>	<b>Covers and padding on front seats .....</b>	<b>114</b>
2.1	Assembly overview - seat pan cover and padding .....	114
2.2	Assembly overview - backrest cover and padding .....	116
2.3	Assembly overview - seat heater elements .....	118
2.4	Removing and installing seat pan cover and padding .....	120
2.5	Separating seat pan cover and padding .....	131
2.6	Removing and installing backrest cover and padding .....	132
2.7	Separating backrest cover and padding .....	139
2.8	Removing and installing seat heater element Z6/Z8 .....	140
2.9	Removing and installing seat bolster heater element .....	142
2.10	Removing and installing seat depth adjuster heater element .....	143
2.11	Removing and installing backrest heater element Z7/Z9 .....	143
<b>3</b>	<b>Covers and padding on rear seats .....</b>	<b>146</b>
3.1	Assembly overview - cover and padding .....	146
3.2	Assembly overview - seat heater elements .....	148
3.3	Removing and installing cover and padding .....	149
3.4	Removing and installing intermediate padding - backrest with load-through hatch .....	153
3.5	Detaching cover from padding .....	155
3.6	Removing and installing side padding .....	156
3.7	Removing and installing seat heater element .....	158
3.8	Removing and installing backrest heater element .....	158