

## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety information	1
<b>2 Repair instructions</b>	<b>2</b>
2.1 Repair instructions	2
<b>3 Identification</b>	<b>3</b>
3.1 Identification of transmission unit OMB	3
3.2 Identification of transmission unit OMC	3
<b>4 Technical data</b>	<b>5</b>
4.1 Capacities	5
<b>34 - Controls, housing</b>	<b>6</b>
<b>1 Safety and repair instructions</b>	<b>6</b>
1.1 Safety information	6
1.2 Repair instructions	6
<b>2 Selector mechanism</b>	<b>7</b>
2.1 Assembly overview - selector mechanism	7
2.2 Removing and installing selector mechanism	7
2.3 Checking selector mechanism	8
<b>3 Removing and installing transmission unit</b>	<b>12</b>
3.1 Removing transmission unit	12
3.2 Separating motor and transmission unit - OMB	12
3.3 Separating motor and transmission unit - OMC	14
3.4 Assembling motor and transmission unit - transmission unit OMB	15
3.5 Assembling motor and transmission unit - transmission unit OMC	25
<b>4 Gear oil</b>	<b>36</b>
4.1 Checking gear oil level	36
4.2 Draining and filling gear oil	36
<b>5 Dismantling and assembling transmission unit</b>	<b>39</b>
5.1 Assembly overview - transmission unit OMB	39
5.2 Assembly overview - transmission unit OMC	40
5.3 Removing and installing deflector ring - OMC	42
<b>39 - Final drive - differential</b>	<b>44</b>
<b>1 Safety and repair instructions</b>	<b>44</b>
1.1 Safety information	44
1.2 Repair instructions	44
<b>2 Oil seals</b>	<b>45</b>
2.1 Overview of fitting locations - oil seals, OMB	45
2.2 Overview of fitting locations - oil seals, OMC	45
2.3 Renewing left flange shaft oil seal - OMB	46
2.4 Renewing left flange shaft oil seal - OMC	48
2.5 Renewing right flange shaft oil seal - OMC	50
2.6 Renewing oil seal for rotor shaft in motor - OMB	50
2.7 Renewing oil seal for rotor shaft in transmission unit - OMB	51
2.8 Renewing oil seal for rotor shaft in motor - OMC	53
<b>3 Differential</b>	<b>55</b>
3.1 Assembly overview - differential, OMB	55
3.2 Removing and installing left flange shaft - OMB	55
3.3 Removing and installing right flange shaft - OMB	57
3.4 Removing and installing roller bearing for left flange shaft - OMB	58



3.5 Renewing locking plate and ball bearing for flange shaft ..... 60