

001 - Electric drive system for front axle , EASA,EASB,EAVA,EAWA,EAUA,EATA,EDEA	1-5
1. Electric drive system for front axle , EASA,EASB,EAVA,EAWA,EAUA,EATA,EDEA	1
2. Data bus diagnostic interface, Electric drive control unit for front axle	2
3. Coolant temperature sender for front three-phase current drive, Electric drive control unit for front axle, Front three-phase current drive, Electric drive motor for front axle	3
4. High-voltage battery 1, Electric drive control unit for front axle, Front three-phase current drive	4
5. High-voltage battery 1, Power steering control unit, Electric drive control unit for front axle	5
002 - Electric drive system for rear axle , EASA,EASB,EAWA,EDEA	6-9
1. Electric drive system for rear axle , EASA,EASB,EAWA,EDEA	6
2. Data bus diagnostic interface, Electric drive control unit for rear axle	7
3. Coolant temperature sender for rear three-phase current drive, Electric drive control unit for rear axle, Rear three-phase current drive, Electric drive motor for rear axle	8
4. High-voltage battery 1, Electric drive control unit for rear axle	9
003 - Electric drive system	10-15
1. Electric drive system	10
2. Accelerator pedal module, Steering column electronics control unit, Engine/motor control unit	11
3. ABS control unit, Convenience system central control unit, Engine/motor control unit	12
4. Engine/motor control unit, Engine sound generator control unit, Actuator 1 for engine sound generator	13
5. Selector lever, Selector lever position sender, Data bus diagnostic interface, Selector lever position display	14
6. Selector lever, Parking lock button, Data bus diagnostic interface	15
004 - Fuse assignment	16-50
1. Fuse assignment	16
2. Battery, Battery monitor control unit, Wiring junction	17
3. Wiring junction	18
4. Wiring junction, Terminal 30 wiring junction	19
5. Thermal management coolant pump relay, High-voltage battery coolant pump relay, Fuse holder E	20
6. Fuse holder E	21
7. Fuse holder E, Relay and fuse carrier 1	22
8. Fuse holder J	23
9. Fuse holder J	24
10. Fuse holder J	25
11. Low heat output relay, High heat output relay, Relay and fuse carrier 2	26
12. Relay and fuse carrier 3	27
13. Fuse holder A, Relay and fuse carrier 3	28
14. Fuse holder A	29
15. Fuse holder B	30
16. Fuse holder B	31
17. Fuse holder B	32
18. Fuse holder B	33
19. Fuse holder C	34
20. Fuse holder C	35
21. Fuse holder C	36
22. Terminal 15 voltage supply relay, Fuse holder D	37
23. Fuse holder D	38
24. Fuse holder D	39
25. Fuse holder D, Fuse holder F	40
26. Fuse holder F	41
27. Fuse holder F	42
28. Fuse holder F	43
29. Heated rear window relay, Relay and fuse carrier 4	44
30. Remote-controlled air conditioning relay, Fuse holder H	45
31. Fuse holder H	46
32. Fuse holder H	47
33. Fuse holder M	48
34. Fuse holder M	49
35. Fuse holder M	50
005 - Convenience system	51-62
1. Convenience system	51
2. Onboard supply control unit	52
3. Onboard supply control unit, Data bus diagnostic interface	53
4. Bonnet contact switch, Bonnet contact switch 2, Onboard supply control unit, Data bus diagnostic interface, Front luggage compartment light	54
5. Coolant shortage indicator sender. Windscreen washer fluid level sender. Onboard supply control	55

unit	
6. Glove compartment light switch, Onboard supply control unit, Front left footwell illumination bulb, Front right footwell illumination bulb, Glove compartment light	56
7. Onboard supply control unit, Light 1 for front centre console background lighting, Light 2 for front centre console background lighting, Light 1 for centre console contour lighting, Light 2 for centre console contour lighting	57
8. Light 2 for dash panel contour lighting, Light 3 for dash panel contour lighting, Light 1 for dash panel background lighting	58
9. Light 1 for dash panel contour lighting, Light 2 for dash panel background lighting	59
10. Convenience system central control unit	60
11. Suppression capacitor, Rear lid handle release button, Glass breakage sensor for rear window, Convenience system central control unit, High-level brake light bulb, Rear lid light	61
12. Anti-theft alarm sensor, Alarm horn, Convenience system central control unit, Left luggage compartment light, Right luggage compartment light	62
006 - Airbag systems for LHD vehicles , (4UE),(4UF)	63-77
1. Airbag systems for LHD vehicles , (4UE),(4UF)	63
2. High-voltage battery 1, Airbag control unit	64
3. Airbag control unit, Igniter 3 for high-voltage battery isolation	65
4. Airbag control unit, Convenience system central control unit, Onboard supply control unit, Steering column electronics control unit, Airbag igniter on driver side, Igniter for exhaust valve for driver airbag	66
5. Key-operated switch to deactivate airbag on front passenger side, Airbag control unit, Front passenger airbag unit, Front roof module	67
6. Driver side belt switch, Driver side seat position sensor, Seat occupied sensor on driver side, Airbag control unit	68
7. Front passenger side belt switch, Seat occupied sensor on front passenger side, Front passenger side seat position sensor, Airbag control unit, Side airbag igniter on driver side, Coupling point for seat, driver side	69
8. Rear seat occupied sensor on passenger side, Airbag control unit, Side airbag igniter on front passenger side, Coupling point for rear seat	70
9. Twin belt buckle, Rear seat occupied sensor on driver side, Rear seat occupied sensor, centre, Airbag control unit, Coupling point for rear seat	71
10. Passenger side belt buckle, seat row 2, Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on passenger side, Front airbag crash sensor for driver side, Front airbag crash sensor for front passenger side, Airbag control unit	72
11. Crash sensor for rear-end collision, Airbag control unit, Rear side airbag igniter on driver side, Rear side airbag igniter on passenger side, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter, Igniter for driver side seat belt tensioner 2, Igniter for front passenger side seat belt tensioner 2	73
12. Airbag control unit, Control unit for rear left belt tensioner, Control unit for rear right belt tensioner	74
13. Airbag control unit, Front left seat belt, Driver seat belt tensioner igniter 1	75
14. Airbag control unit, Front right seat belt, Front passenger seat belt tensioner igniter 1	76
15. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Crash sensor for side airbag in B-pillar, driver side, Crash sensor for side airbag in B-pillar, passenger side, Airbag control unit	77
007 - Brake system	78-85
1. Brake system	78
2. Brake pedal position sender, ABS control unit, ABS control unit fuse 1	79
3. Rear right speed sensor, Rear left speed sensor, ABS control unit, Left parking brake motor, Right parking brake motor	80
4. Front right speed sensor, Front left speed sensor, ABS control unit	81
5. Parking brake button, ABS control unit	82
6. Centre switch module in dash panel, Button for TCS and electronic stabilisation program, ABS control unit, Onboard supply control unit, Fuse holder A	83
7. Data bus diagnostic interface, Parking lock actuator	84
8. Front left brake pad wear sender, Front right brake pad wear sender, Rear right brake pad wear sender	85
008 - Data bus network	86-110
1. Data bus network	86
2. Data bus diagnostic interface	87
3. Data bus diagnostic interface, Diagnostic connection	88
4. Interior mirror, Tyre Pressure Monitoring System control unit, Data bus diagnostic interface, Engine/motor control unit, Lane change assist control unit, Lane change assist control unit 2, Parking lock actuator	89
5. Data bus diagnostic interface. Reversing camera system control unit. Control unit for night	90

vision system, Engine sound generator control unit, Roof aerial	
6. Selector lever, Control unit in dash panel insert, Data bus diagnostic interface, Control unit 1 for information electronics	91
7. Control unit in dash panel insert, Data bus diagnostic interface, Control unit for electronic steering column lock, Control unit for head-up display, Light 3 for dash panel contour lighting	92
8. Sliding sunroof adjustment control unit, Data bus diagnostic interface, Light 1 for dash panel background lighting	93
9. Charging unit 1 for high-voltage battery, Trailer detector control unit, Data bus diagnostic interface, Rear lid control unit	94
10. Voltage converter, Telephone and telematics control unit, Data bus diagnostic interface, Battery regulation control unit, Interface control unit for telematics	95
11. Data bus diagnostic interface, Thermal management control unit, High-voltage heater 2 (PTC) control unit, Coupling point in engine compartment, right	96
12. Steering column electronics control unit, Data bus diagnostic interface, Emergency call module control unit and communication unit	97
13. Onboard supply control unit, Driver assist systems control unit, Control unit for projection modules in matrix headlights, Front left headlight	98
14. Rain and light sensor, Wiper motor control unit, Onboard supply control unit, Garage door operation control unit, Windscreen washer pump control unit, Front right headlight, Front roof module	99
15. Operating and display unit for rear air conditioning system, Onboard supply control unit, Light 1 for front centre console background lighting, Light 2 for front centre console background lighting, Light 1 for centre console contour lighting, Light 2 for centre console contour lighting	100
16. Light switch, Air quality sensor, Fresh air blower control unit, Onboard supply control unit, Control unit for electrically adjustable steering column, Ioniser control unit, Control unit for fragrance diffuser system	101
17. Switch module 1 in centre console, Convenience system central control unit, Near field communication control unit 2, Left tail light cluster, Right tail light cluster, Centre tail light cluster	102
18. Anti-theft alarm sensor, Alarm horn, Airbag control unit, Convenience system central control unit	103
19. Airbag control unit, Control unit for rear left belt tensioner, Control unit for rear right belt tensioner, Front left seat belt, Front right seat belt	104
20. Driver side volume regulator, Display unit for front information display and operating unit control unit, Display unit 2 for front information display and operating unit control unit, Charging unit 1 for mobile devices	105
21. High-voltage battery 1, Running gear control unit, Adaptive suspension compressor electronics	106
22. Refrigerant pressure and temperature sender, Control unit for air conditioner compressor, Refrigerant shut-off valve 2, Radiator blind control motor	107
23. High-voltage heater (PTC) control unit, Coolant changeover valve 1, Coolant changeover valve 2, Coolant changeover valve 3, Coolant changeover valve 4, Refrigerant expansion valve 2, Drive unit for charging socket 2 cover	108
24. Driver door control unit, Rear driver side door control unit, Digital exterior mirror control unit 2, Near field communication control unit	109
25. Front passenger door control unit, Rear passenger side door control unit, Digital exterior mirror control unit 1	110
009 - Parking aid (PDC) , (7X2)	111-115
1. Parking aid (PDC) , (7X2)	111
2. Onboard supply control unit, Parking aid loudspeaker	112
3. Front right parking aid sender, Front centre right parking aid sender, Front centre left parking aid sender, Front left parking aid sender, Onboard supply control unit	113
4. Rear left parking aid sender, Rear centre left parking aid sender, Rear centre right parking aid sender, Rear right parking aid sender, Onboard supply control unit	114
5. Switch module 1 in centre console, Onboard supply control unit	115
010 - Data bus network (FlexRay bus)	116-122
1. Data bus network (FlexRay bus)	116
2. Data bus diagnostic interface, Running gear control unit, Driver assist systems control unit	117
3. Airbag control unit, Data bus diagnostic interface, Lane change assist control unit, Lane change assist control unit 2, Driver assist systems control unit	118
4. ABS control unit, Power steering control unit, Data bus diagnostic interface, Engine/motor control unit, Control unit for laser distance control	119
5. Steering column electronics control unit, Data bus diagnostic interface, Electric drive control unit for rear axle	120
6. Data bus diagnostic interface, Electric drive control unit for front axle	121
7. Adaptive cruise control unit, Front left radar sensor control unit for object detection, Front right radar sensor control unit for object detection	122

011 - Infotainment MOST bus	123-125
1. Infotainment MOST bus	123
2. Control unit in dash panel insert, Control unit 1 for information electronics, Control unit for head-up display	124
3. Control unit in dash panel insert, Digital sound package control unit, Control unit 1 for information electronics, Control unit for head-up display, TV tuner	125
012 - Steering column electronics	126-131
1. Steering column electronics	126
2. Steering column electronics control unit, Data bus diagnostic interface, Driver assist systems control unit	127
3. Lane departure warning button, Steering column electronics control unit, Airbag igniter on driver side, Igniter for exhaust valve for driver airbag, Heated steering wheel	128
4. Horn plate, Multifunction steering wheel control unit, Steering column electronics control unit, Control unit for steering wheel contact detection	129
5. Multifunction buttons on left in steering wheel, Steering wheel heater button, Downshift paddle, Heated steering wheel sender, Multifunction steering wheel control unit, Control unit for steering wheel contact detection	130
6. Upshift paddle, Multifunction steering wheel control unit	131
013 - Dash panel insert	132-134
1. Dash panel insert	132
2. Control unit in dash panel insert, Data bus diagnostic interface	133
3. Control unit in dash panel insert, Control unit for night vision system, Control unit for head-up display	134
014 - Light switch	135-136
1. Light switch	135
2. Light switch	136
015 - Centre console switches	137-139
1. Centre console switches	137
2. Centre switch module in dash panel, Onboard supply control unit	138
3. Centre switch module in dash panel, Switch module 1 in centre console, Driver assist systems control unit	139
016 - Adaptive suspension	140-145
1. Adaptive suspension	140
2. Convenience system central control unit, Running gear control unit, Front left shock absorber damping adjustment valve, Front right shock absorber damping adjustment valve	141
3. Running gear control unit, Adaptive suspension compressor electronics, Adaptive suspension drain valve, Rear left shock absorber damping adjustment valve, Rear right shock absorber damping adjustment valve, Adaptive suspension compressor motor	142
4. Running gear control unit, Valve block for adaptive suspension	143
5. Rear left vehicle level sender, Rear right vehicle level sender, Front left vehicle level sender, Front right vehicle level sender, Data bus diagnostic interface, Running gear control unit	144
6. Steering column electronics control unit, Running gear control unit, Driver assist systems control unit	145
017 - Cigarette lighter and 12 V sockets	146-148
1. Cigarette lighter and 12 V sockets	146
2. Onboard supply control unit, Cigarette lighter, 12 V socket, Rear cigarette lighter	147
3. 12 V socket 3	148
018 - Driver door , (L0L)	149-163
1. Driver door , (L0L)	149
2. Driver door control unit, Light for sill panel moulding background lighting, driver side	150
3. Driver door control unit, Driver assist systems control unit	151
4. Driver door control unit, Light for exterior door handle illumination, driver side, Driver door lock unit, Driver door power latching motor	152
5. Operating unit for window regulator in driver door, Driver door control unit, Driver side window regulator motor	153
6. Exterior mirror adjuster, Operating unit for window regulator in driver door, Driver door control unit	154
7. Exterior mirror adjuster, Rear lid remote release button, Driver side interior locking button for central locking system, Driver door control unit	155
8. Button for deactivating interior monitoring and vehicle inclination sensor, Driver door control unit, Central locking SAFELOCK function warning lamp, Light for driver side interior door handle illumination, Driver side entry light, Exit warning lamp, driver side	156
9. Driver operating unit for memory settings, Driver door control unit, Light for driver door background lighting	157
10. Driver door control unit, Light for front left door contour lighting, Light for left door storage compartment illumination. Driver side exterior mirror	158

11. Driver door control unit, Driver side exterior mirror	159
12. Driver door control unit, Digital exterior mirror control unit 2, Driver side exterior mirror	160
13. Onboard supply control unit, Data bus diagnostic interface, Digital exterior mirror control unit 2	161
14. Onboard supply control unit, Data bus diagnostic interface	162
15. Front passenger door control unit, Rear driver side door control unit, Rear passenger side door control unit, Digital exterior mirror control unit 1	163
019 - Front passenger door , (L0L)	164-175
1. Front passenger door , (L0L)	164
2. Front passenger door control unit, Light for sill panel moulding background lighting, front passenger side	165
3. Front passenger door control unit, Driver assist systems control unit, Light for exterior door handle illumination, front passenger side	166
4. Front passenger door control unit, Front passenger door lock unit, Front passenger side window regulator motor, Front passenger door power latching motor	167
5. Window regulator switch in front passenger door, Front passenger side interior locking button for central locking system, Front passenger operating unit for memory settings, Front passenger door control unit	168
6. Front passenger door control unit, Light for passenger side interior door handle illumination, Light for passenger door background lighting, Passenger side entry light, Exit warning lamp, front passenger side	169
7. Front passenger door control unit, Light for passenger side door contour lighting, Light for right door storage compartment illumination, Passenger side exterior mirror	170
8. Front passenger door control unit, Passenger side exterior mirror	171
9. Front passenger door control unit, Digital exterior mirror control unit 1, Passenger side exterior mirror	172
10. Onboard supply control unit, Data bus diagnostic interface, Digital exterior mirror control unit 1	173
11. Onboard supply control unit, Data bus diagnostic interface	174
12. Rear driver side door control unit, Rear passenger side door control unit, Digital exterior mirror control unit 2	175
020 - Rear left door , (L0L)	176-181
1. Rear left door , (L0L)	176
2. Onboard supply control unit, Rear driver side door control unit, Light for rear sill panel moulding background lighting, driver side	177
3. Rear driver side door control unit, Rear door lock unit, driver side, Rear door power latching motor, driver side	178
4. Operating unit in rear door, driver side, Rear driver side interior locking button for central locking system, Rear driver side door control unit, Light for rear exterior door handle illumination, driver side, Rear driver side window regulator motor	179
5. Rear driver side door control unit, Light 1 for rear left door background lighting, Light for rear driver side interior door handle illumination, Rear driver side entry light, Rear exit warning lamp, driver side	180
6. Light for rear left door contour lighting	181
021 - Rear right door , (L0L)	182-187
1. Rear right door , (L0L)	182
2. Rear passenger side door control unit, Light for rear sill panel moulding background lighting, passenger side	183
3. Rear passenger side door control unit, Rear door lock unit, passenger side, Rear door power latching motor, passenger side	184
4. Operating unit in rear door, passenger side, Rear passenger side interior locking button for central locking system, Rear passenger side door control unit, Light for rear exterior door handle illumination, passenger side, Rear passenger side window regulator motor	185
5. Rear passenger side door control unit, Light 1 for rear right door background lighting, Light for rear passenger side interior door handle illumination, Rear passenger side entry light, Rear exit warning lamp, passenger side	186
6. Light for rear right door contour lighting	187
022 - Emergency call module , (IW1),(IW3),(IW5),(IW6)	188-191
1. Emergency call module , (IW1),(IW3),(IW5),(IW6)	188
2. Airbag control unit, Convenience system central control unit, Data bus diagnostic interface, Emergency call module control unit and communication unit	189
3. Control unit 1 for information electronics, Emergency call module control unit and communication unit, Microphone unit in front roof module, Wiring screen	190
4. Emergency call module control unit and communication unit, Roof aerial, Emergency call module aerial, Loudspeaker for emergency call module	191
023 - Driver seat . (L0L).(Q1A)	192-197

1. Driver seat , (L0L),(Q1A)	192
2. Control unit for seat and steering column adjustment with memory function, Rear left footwell light	193
3. Driver seat adjustment operating unit, Longitudinal adjustment sender for driver seat, Control unit for seat and steering column adjustment with memory function, Driver seat longitudinal adjustment motor, Driver seat height adjustment motor	194
4. Control unit for seat and steering column adjustment with memory function, Driver seat rake adjustment motor	195
5. Control unit for seat and steering column adjustment with memory function, Driver seat backrest adjustment motor	196
6. Driver seat lumbar support adjustment switch, Onboard supply control unit, Data bus diagnostic interface, Lumbar support for driver seat	197
024 - Front passenger seat , (L0L),(Q1A)	198-202
1. Front passenger seat , (L0L),(Q1A)	198
2. Front passenger seat adjustment operating unit, Airbag control unit, Emergency call module control unit and communication unit, Rear right footwell light	199
3. Front passenger seat adjustment operating unit, Front passenger seat longitudinal adjustment motor, Front passenger seat backrest adjustment motor, Front passenger seat rake adjustment motor, Front passenger seat height adjustment motor	200
4. Front passenger seat lumbar support adjustment switch, Lumbar support for front passenger seat	201
5. Onboard supply control unit, Coupling point for front passenger seat backrest	202
025 - Front camera for driver assist systems , (QK1)	203-206
1. Front camera for driver assist systems , (QK1)	203
2. Driver assist systems control unit, Front camera for driver assist systems, Windscreen heater for front sensors	204
3. Data bus diagnostic interface, Running gear control unit, Driver assist systems control unit	205
4. Data bus diagnostic interface, Control unit 1 for information electronics	206
026 - Sound system , (8RM),(9VD)	207-211
1. Sound system , (8RM),(9VD)	207
2. Control unit 1 for information electronics, Subwoofer	208
3. Control unit 1 for information electronics, Front left treble loudspeaker, Front left bass loudspeaker	209
4. Control unit 1 for information electronics, Front right treble loudspeaker, Front right bass loudspeaker, Centre loudspeaker	210
5. Control unit 1 for information electronics, Rear left treble loudspeaker, Rear left bass loudspeaker, Rear right treble loudspeaker, Rear right bass loudspeaker	211
027 - Window wash/wipe system, heated washer jets, headlight washer system , (9PA)	212-215
1. Window wash/wipe system, heated washer jets, headlight washer system , (9PA)	212
2. Rain and light sensor, Onboard supply control unit, Rear window washer pump	213
3. Wiper motor control unit, Onboard supply control unit, Headlight washer system pump, Left washer jet heater element, Right washer jet heater element	214
4. Convenience system central control unit, Windscreen washer pump control unit, Washer pump, Rear window wiper motor	215
028 - Roof modules	216-218
1. Roof modules	216
2. Front roof module	217
3. Front roof module	218
029 - MMI (information electronics 1) , (I8T)	219-232
1. MMI (information electronics 1) , (I8T)	219
2. Data bus diagnostic interface, Control unit 1 for information electronics, Fuse holder C, Fuse holder F, Fuse holder M	220
3. Driver side volume regulator, Data bus diagnostic interface, Control unit 1 for information electronics	221
4. Control unit 1 for information electronics, Microphone unit in front roof module	222
5. Onboard supply control unit, Control unit 1 for information electronics, USB hub, Internal vehicle communication aerial, USB connection 1	223
6. Control unit 1 for information electronics, Driver assist systems control unit, Roof aerial, USB hub, USB connection 1	224
7. Control unit 1 for information electronics, Roof aerial	225
8. Control unit 1 for information electronics, Aerial amplifier 2, LTE aerial 2	226
9. Control unit 1 for information electronics, Aerial amplifier, Aerial amplifier 3, LTE aerial 1	227
10. Control unit in dash panel insert, Control unit 1 for information electronics, Control unit for head-up display	228
11. Chip card reader control unit, Reversing camera system control unit, Control unit 1 for information electronics	229
12. Chip card reader control unit. Control unit 1 for information electronics. Traffic data aerial.	230

Dedicated short-range communication aerial	
13. Display unit for front information display and operating unit control unit, Display unit 2 for front information display and operating unit control unit	231
14. Digital sound package control unit, Display unit for front information display and operating unit control unit, Display unit 2 for front information display and operating unit control unit, TV tuner	232
030 - Dual tone horn	233-234
1. Dual tone horn	233
2. Treble horn, Bass horn, Onboard supply control unit	234
031 - Illuminated vanity mirrors	235-236
1. Illuminated vanity mirrors	235
2. Driver vanity mirror contact switch, Front passenger vanity mirror contact switch, Onboard supply control unit, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror	236
032 - Air conditioning system , (9AK)	237-243
1. Air conditioning system , (9AK)	237
2. Fresh air blower control unit, Onboard supply control unit	238
3. Ambient temperature sensor, Potentiometer in left centre dash panel vent, Potentiometer in left side vent, Potentiometer in right side vent, Onboard supply control unit, Central rear vent illumination bulb	239
4. Dash panel temperature sensor, Air quality sensor, Front left chest vent temperature sensor, Front right chest vent temperature sensor, Onboard supply control unit	240
5. Left footwell vent temperature sender, Right footwell vent temperature sender, Evaporator output temperature sender, Onboard supply control unit, Air recirculation flap control motor, Fresh air flap control motor	241
6. Onboard supply control unit, Defroster flap control motor, Right centre vent control motor, Right temperature flap control motor, Rear air distribution flap control motor	242
7. Onboard supply control unit, Defroster flap control motor, Left centre vent control motor, Rear temperature flap control motor, Left temperature flap control motor	243
033 - LED headlights , (8IY)	244-251
1. LED headlights , (8IY)	244
2. Onboard supply control unit, Driver assist systems control unit	245
3. Output module 1 for left LED headlight, Onboard supply control unit, Left LED module for daytime running light and side light, Front left headlight	246
4. Output module 1 for left LED headlight, Onboard supply control unit, Left LED module for daytime running light and side light, Front left headlight, Left headlight dipped beam bulb, Left headlight main beam bulb, Left static cornering light, Front left dynamic turn signal, Left headlight range control motor	247
5. Output module 1 for left LED headlight, Onboard supply control unit, LED module for daytime running light and side light, Front left headlight	248
6. Output module 1 for right LED headlight, Onboard supply control unit, Front right headlight	249
7. Output module 1 for right LED headlight, Right LED module for daytime running light and side light, Front right headlight, Right headlight dipped beam bulb, Right headlight main beam bulb, Right static cornering light, Front right dynamic turn signal, Right headlight range control motor	250
8. Output module 1 for right LED headlight, Right LED module for daytime running light and side light, Front right headlight	251
034 - Thermal management	252-261
1. Thermal management	252
2. Thermal management coolant pump relay, Fuse holder E	253
3. Thermal management control unit, Fuse holder E, Refrigerant shut-off valve, Thermal management coolant pump 2	254
4. Refrigerant pressure and temperature sender, Refrigerant pressure and temperature sender 2, Thermal management control unit	255
5. Control unit for air conditioner compressor, Thermal management control unit, Radiator blind control motor, Radiator blind control motor 2	256
6. Thermal management control unit, Refrigerant expansion valve 2	257
7. Thermal management control unit, Coolant changeover valve 1, Coolant changeover valve 2, Coolant changeover valve 3, Coolant changeover valve 4, Thermal management coolant pump 4	258
8. Coolant temperature sender 1 for thermal management, Coolant temperature sender 2 for thermal management, Coolant temperature sender 5 for thermal management, Coolant temperature sender 6 for thermal management, Coolant temperature sender 8 for thermal management, Data bus diagnostic interface, Thermal management control unit	259
9. Thermal management control unit, Radiator fan	260
10. Refrigerant shut-off valve 2, Refrigerant shut-off valve 3, Refrigerant shut-off valve 4, Refrigerant shut-off valve 5	261
035 - High-voltage system	262-276
1. High-voltage system	262

2. Fuse holder B, Fuse holder E, Fuse holder J, Fuse holder M, Terminal 30 wiring junction	263
3. Coolant temperature sender 1 for high-voltage battery, Battery regulation control unit, High-voltage battery coolant pump relay, Coolant pump for high-voltage battery	264
4. Voltage converter, Data bus diagnostic interface, Battery regulation control unit, Interface control unit for telematics	265
5. Charging unit 1 for high-voltage battery, Voltage converter, Battery regulation control unit	266
6. Coolant temperature sender 2 for high-voltage battery, Battery regulation control unit	267
7. Battery regulation control unit, Coupling point for electrical air conditioner compressor	268
8. High-voltage heater (PTC) control unit, High-voltage heater (PTC)	269
9. High-voltage heater 2 (PTC) control unit, High-voltage heater 2 (PTC)	270
10. Control unit for air conditioner compressor, Thermal management control unit, Electrical air conditioner compressor	271
11. High-voltage battery 1, Control unit for air conditioner compressor, Switching unit for high-voltage battery	272
12. High-voltage battery 1, Battery isolator switch, Switching unit for high-voltage battery	273
13. High-voltage battery 1, Electric drive control unit for front axle, Electric drive control unit for rear axle, Switching unit for high-voltage battery	274
14. High-voltage battery 1, Switching unit for high-voltage battery, Maintenance connector for high-voltage system	275
15. High-voltage battery 1, Airbag control unit, Switching unit for high-voltage battery	276
036 - Automatic anti-dazzle interior mirror, rain sensor	277-278
1. Automatic anti-dazzle interior mirror, rain sensor	277
2. Interior mirror, Humidity sender, Rain and light sensor, Light sensor, Onboard supply control unit, Data bus diagnostic interface	278
037 - Parking aid (PDC) , (7X5),(9X9),(KA0),(KA2)	279-284
1. Parking aid (PDC) , (7X5),(9X9),(KA0),(KA2)	279
2. Onboard supply control unit, Parking aid loudspeaker	280
3. Front right parking aid sender, Front centre right parking aid sender, Front centre left parking aid sender, Front left parking aid sender, Onboard supply control unit	281
4. Rear left parking aid sender, Rear centre left parking aid sender, Front left sender for park assist steering on left side of vehicle, Front right sender for park assist steering on right side of vehicle, Onboard supply control unit	282
5. Rear centre right parking aid sender, Rear right parking aid sender, Rear left park assist steering sender, Rear right park assist steering sender, Onboard supply control unit	283
6. Switch module 1 in centre console, Onboard supply control unit	284
038 - Parking aid (PDC) , (KA6)	285-289
1. Parking aid (PDC) , (KA6)	285
2. Driver assist systems control unit, Parking aid loudspeaker	286
3. Front right parking aid sender, Front centre right parking aid sender, Front centre left parking aid sender, Front left parking aid sender, Driver assist systems control unit	287
4. Front left sender for park assist steering on left side of vehicle, Front right sender for park assist steering on right side of vehicle, Rear left park assist steering sender, Rear right park assist steering sender, Driver assist systems control unit	288
5. Rear left parking aid sender, Rear centre left parking aid sender, Rear centre right parking aid sender, Rear right parking aid sender, Driver assist systems control unit	289
039 - Overhead view camera , (KA6)	290-294
1. Overhead view camera , (KA6)	290
2. Switch module 1 in centre console, Onboard supply control unit, Driver assist systems control unit	291
3. Driver assist systems control unit, Front overhead view camera, Left overhead view camera, Right overhead view camera	292
4. Control unit in dash panel insert, Control unit 1 for information electronics, Driver assist systems control unit, Rear overhead view camera	293
5. Roof aerial	294
040 - Trailer coupling , (5C0)	295-297
1. Trailer coupling , (5C0)	295
2. Trailer detector control unit, Convenience system central control unit, Data bus diagnostic interface	296
3. Trailer detector control unit, Towing bracket	297
041 - Head-up display , (KS1)	298-300
1. Head-up display , (KS1)	298
2. Data bus diagnostic interface, Control unit for head-up display	299
3. Control unit in dash panel insert, Control unit 1 for information electronics, Control unit for head-up display	300
042 - Garage door opener , (VC2)	301-302
1. Garage door opener . (VC2)	301

2. Onboard supply control unit, Garage door operation control unit, Programming aerial for garage door opener	302
043 - Reversing camera (Rear Assist) , (KA2)	303-304
1. Reversing camera (Rear Assist) , (KA2)	303
2. Reversing camera system control unit, Reversing camera	304
044 - Electromechanical steering	305-307
1. Electromechanical steering	305
2. Convenience system central control unit, Power steering control unit, Active steering fuse	306
3. Steering moment sender, Power steering control unit, Data bus diagnostic interface, Electric drive control unit for front axle	307
045 - Entry and start authorisation , (2F0)	308-313
1. Entry and start authorisation , (2F0)	308
2. Convenience system central control unit, Luggage compartment aerial for entry and start system, Interior aerial 1 for entry and start system, Front aerial for entry and start authorisation	309
3. Entry and start authorisation button, Convenience system central control unit, Onboard supply control unit	310
4. Contact sensor for front left exterior door handle, Contact sensor for front right exterior door handle, Convenience system central control unit	311
5. Contact sensor for rear left exterior door handle, Contact sensor for rear right exterior door handle, Convenience system central control unit, Left aerial for entry and start authorisation, Right aerial for entry and start authorisation	312
6. Convenience system central control unit, Data bus diagnostic interface, Control unit for electronic steering column lock	313
046 - Steering column adjustment , (2C7)	314-315
1. Steering column adjustment , (2C7)	314
2. Steering column adjustment switch, Onboard supply control unit, Control unit for electrically adjustable steering column	315
047 - Lane change assist , (7Y1)	316-318
1. Lane change assist , (7Y1)	316
2. Data bus diagnostic interface, Lane change assist control unit	317
3. Airbag control unit, Lane change assist control unit, Lane change assist control unit 2	318
048 - Tyre Pressure Monitoring System , (7K3)	319-320
1. Tyre Pressure Monitoring System , (7K3)	319
2. Tyre Pressure Monitoring System control unit, Data bus diagnostic interface	320
049 - LED headlights , (8IV)	321-329
1. LED headlights , (8IV)	321
2. Onboard supply control unit, Control unit for projection modules in matrix headlights	322
3. Onboard supply control unit, Driver assist systems control unit, Control unit for projection modules in matrix headlights	323
4. Output module 1 for left LED headlight, Onboard supply control unit, Left LED module for daytime running light and side light, Front left headlight	324
5. Output module 1 for left LED headlight, Onboard supply control unit, Left LED module for daytime running light and side light, Front left headlight, Front left turn signal bulb, Left headlight main beam bulb, Front left side marker bulb, Left static cornering light, Front left dynamic turn signal, Left headlight range control motor	325
6. Output module 1 for left LED headlight, Onboard supply control unit, Projection module for left matrix headlight, LED module for daytime running light and side light, Front left headlight	326
7. Output module 1 for right LED headlight, Onboard supply control unit, Right LED module for daytime running light and side light, Front right headlight	327
8. Output module 1 for right LED headlight, Onboard supply control unit, Right LED module for daytime running light and side light, Front right headlight, Front right turn signal bulb, Right headlight main beam bulb, Front right side marker bulb, Right static cornering light, Front right dynamic turn signal, Right headlight range control motor	328
9. Output module 1 for right LED headlight, Onboard supply control unit, Projection module for right matrix headlight, Front right headlight	329
050 - Night vision system , (9R1)	330-332
1. Night vision system , (9R1)	330
2. Control unit in dash panel insert, Data bus diagnostic interface, Control unit for night vision system	331
3. Control unit for night vision system, Camera for night vision system	332
051 - Window wash/wipe system, heated washer jets, headlight washer system , (9PF)	333-336
1. Window wash/wipe system, heated washer jets, headlight washer system , (9PF)	333
2. Rain and light sensor, Onboard supply control unit, Headlight washer system pump, Rear window washer pump	334
3. Wiper motor control unit, Onboard supply control unit, Windscreen washer pump control unit, Washer pump. Heater element 1. in driver side wiper arm. Heater element 1. in passenger side wiper	335

arm	
4. Convenience system central control unit, Rear window wiper motor	336
052 - Tail light clusters with LEDs , (AV0),(AV1),(AV4)	337-340
1. Tail light clusters with LEDs , (AV0),(AV1),(AV4)	337
2. Convenience system central control unit	338
3. Convenience system central control unit, Left tail light cluster, Centre tail light cluster	339
4. Convenience system central control unit, Rear left fog light bulb, Rear right fog light bulb, Right tail light cluster	340
053 - Tail light clusters with LEDs, only models with US equipment , (AV2)	341-344
1. Tail light clusters with LEDs, only models with US equipment , (AV2)	341
2. Convenience system central control unit	342
3. Convenience system central control unit, Left tail light cluster, Centre tail light cluster	343
4. Convenience system central control unit, Rear left fog light bulb, Right tail light cluster	344
054 - Entry and start authorisation , (2F1)	345-352
1. Entry and start authorisation , (2F1)	345
2. Convenience system central control unit	346
3. Entry and start authorisation button, Convenience system central control unit, Data bus diagnostic interface	347
4. Convenience system central control unit, Near field communication control unit	348
5. Contact sensor for front left exterior door handle, Contact sensor for front right exterior door handle, Convenience system central control unit	349
6. Contact sensor for rear left exterior door handle, Convenience system central control unit, Left aerial for entry and start authorisation, Right aerial for entry and start authorisation	350
7. Convenience system central control unit, Near field communication control unit 2, Luggage compartment aerial for entry and start system, Interior aerial 1 for entry and start system, Front aerial for entry and start authorisation	351
8. Control unit for electronic steering column lock, Charging unit 1 for mobile devices, Near field communication control unit 2	352
055 - Digital TV tuner , (Q0A),(Q0B),(QU1),(QV1)	353-357
1. Digital TV tuner , (Q0A),(Q0B),(QU1),(QV1)	353
2. Digital sound package control unit, TV tuner, TV card reader	354
3. Control unit in dash panel insert, Digital sound package control unit, Control unit 1 for information electronics, Control unit for head-up display, TV tuner	355
4. Aerial amplifier, TV tuner, Aerial amplifier 2	356
5. TV tuner, Aerial amplifier 3 for TV	357
056 - Adaptive cruise control , (8T3),(8T8)	358-360
1. Adaptive cruise control , (8T3),(8T8)	358
2. ABS control unit, Adaptive cruise control unit, Data bus diagnostic interface, Control unit for laser distance control	359
3. Adaptive cruise control unit, Heater element for adaptive cruise control radar sensor	360
057 - Auxiliary heater , (7E1)	361-362
1. Auxiliary heater , (7E1)	361
2. Low heat output relay, High heat output relay, Onboard supply control unit, Auxiliary air heating fuse, Auxiliary air heater element	362
058 - Communication , (AV4)	363-365
1. Communication , (AV4)	363
2. Battery regulation control unit, Interface control unit for telematics	364
3. Telephone and telematics control unit, Interface control unit for telematics, Aerial module for telephone and telematics	365
059 - Electrically operated rear lid , (4E7)	366-370
1. Electrically operated rear lid , (4E7)	366
2. Operating unit for rear lid control, Rear lid control unit, Power latching for rear lid	367
3. Rear lid control unit, Rear lid drive unit, Rear lid drive unit 2	368
4. Rear lid warning buzzer, Convenience system central control unit, Rear lid control unit, Rear lid lock unit	369
5. Rear lid power opening sender, Rear lid power opening sender 2, Rear lid power opening control unit	370
060 - Assist systems , (JX1)	371-373
1. Assist systems , (JX1)	371
2. Data bus diagnostic interface, Front left radar sensor control unit for object detection, Front right radar sensor control unit for object detection	372
3. Front right radar sensor control unit for object detection, Driver assist systems control unit	373
061 - High-voltage battery charging , (EK1)	374-375
1. High-voltage battery charging , (EK1)	374
2. Data bus diagnostic interface, Coupling point in interior, centre, Coupling point in engine compartment. right	375

062 - Toll detection system , (9B1)	376-377
1. Toll detection system , (9B1)	376
2. Toll collection sender	377
063 - Driver seat , (L0L),(Q2J)	378-384
1. Driver seat , (L0L),(Q2J)	378
2. Control unit for seat and steering column adjustment with memory function, Rear left footwell light	379
3. Driver seat adjustment operating unit, Control unit for seat and steering column adjustment with memory function, Driver seat longitudinal adjustment motor, Driver seat height adjustment motor	380
4. Switch module for driver seat, Control unit for seat and steering column adjustment with memory function, Driver seat rake adjustment motor, Driver seat depth adjustment motor	381
5. Control unit for seat and steering column adjustment with memory function, Valve block 1 in driver seat, Valve block 2 in driver seat, Compressor for multicontour driver seat	382
6. Control unit for seat and steering column adjustment with memory function, Driver seat backrest adjustment motor	383
7. Onboard supply control unit, Data bus diagnostic interface	384
064 - Front passenger seat , (L0L),(Q2J)	385-391
1. Front passenger seat , (L0L),(Q2J)	385
2. Control unit for front passenger seat adjustment with memory function, Rear right footwell light	386
3. Front passenger seat adjustment operating unit, Control unit for front passenger seat adjustment with memory function, Front passenger seat longitudinal adjustment motor, Front passenger seat height adjustment motor	387
4. Switch module for front passenger seat, Control unit for front passenger seat adjustment with memory function, Front passenger seat rake adjustment motor, Front passenger seat depth adjustment motor	388
5. Control unit for front passenger seat adjustment with memory function, Valve block 1 in front passenger seat, Valve block 2 in front passenger seat, Compressor for multicontour front passenger seat	389
6. Control unit for front passenger seat adjustment with memory function, Front passenger seat backrest adjustment motor	390
7. Onboard supply control unit, Data bus diagnostic interface	391
065 - Mobile telephone systems , (9ZE),(9ZV),(9ZX)	392-396
1. Mobile telephone systems , (9ZE),(9ZV),(9ZX)	392
2. Control unit 1 for information electronics, Microphone unit in front roof module	393
3. Control unit 1 for information electronics, Aerial amplifier for mobile telephone, Microphone unit in front roof module	394
4. Aerial amplifier for mobile telephone, Roof aerial	395
5. Charging unit 1 for mobile devices, Near field communication control unit 2, LTE aerial 3	396
066 - CD changer , (7D5)	397-398
1. CD changer , (7D5)	397
2. Onboard supply control unit, Control unit 1 for information electronics, DVD player	398
067 - Air conditioning system , (9AQ)	399-412
1. Air conditioning system , (9AQ)	399
2. Fresh air blower control unit, Onboard supply control unit, Fresh air blower	400
3. Onboard supply control unit, Ioniser control unit, Control unit for fragrance diffuser system	401
4. Dash panel temperature sensor, Front left chest vent temperature sensor, Front right chest vent temperature sensor, Air conditioner sensor for fine particle concentration, Onboard supply control unit	402
5. Potentiometer in left centre dash panel vent, Potentiometer in left side vent, Onboard supply control unit	403
6. Potentiometer in right side vent, Onboard supply control unit, Right B-pillar and footwell shut-off flap control motor, Left B-pillar and footwell shut-off flap control motor	404
7. Left footwell vent temperature sender, Right footwell vent temperature sender, Evaporator output temperature sender, External air quality and air humidity sensor, Onboard supply control unit	405
8. Onboard supply control unit, Air recirculation flap control motor, Right temperature flap control motor, Fresh air flap control motor, Rear right air distribution control motor	406
9. Onboard supply control unit, Right footwell flap control motor, Rear right air quantity flap control motor, Right side vent control motor	407
10. Onboard supply control unit, Defroster flap control motor, Left centre vent control motor, Right centre vent control motor, Left temperature flap control motor	408
11. Onboard supply control unit, Left footwell flap control motor, Left temperature flap control motor, Rear left air quantity flap control motor, Left side vent control motor	409
12. Ambient temperature sensor, Rear left chest vent temperature sender, Rear right chest vent temperature sender, Onboard supply control unit, Rear left air distribution control motor	410
13. Potentiometer in rear left chest vent, Potentiometer in rear right chest vent, Vent temperature sender for rear left footwell. Vent temperature sender for rear right footwell. Onboard supply	411

control unit, Rear left vent illumination bulb, Rear right vent illumination bulb	
14. Operating and display unit for rear air conditioning system	412
068 - Sound system , (9VS)	413-419
1. Sound system , (9VS)	413
2. Control unit in dash panel insert, Digital sound package control unit, Control unit 1 for information electronics, TV tuner, Digital sound package fuse	414
3. Digital sound package control unit, Front left treble loudspeaker, Front right treble loudspeaker, Microphone unit in front roof module, Centre loudspeaker	415
4. Digital sound package control unit, Front left bass loudspeaker, Front left mid-range loudspeaker	416
5. Digital sound package control unit, Front right bass loudspeaker, Front right mid-range loudspeaker	417
6. Digital sound package control unit, Rear left treble loudspeaker, Rear left bass loudspeaker, Rear right treble loudspeaker, Rear right bass loudspeaker	418
7. Digital sound package control unit, Left effect loudspeaker, Right effect loudspeaker, Subwoofer, Front left mid-range loudspeaker 2, Front right mid-range loudspeaker 2	419
069 - Heated rear window	420-422
1. Heated rear window	420
2. Window aerial suppression filter, Suppression capacitor for heated rear window, Heated rear window relay, Convenience system central control unit	421
3. Suppression capacitor 2 for heated rear window, Centre switch module in dash panel, Heated rear window button, Onboard supply control unit, Rear window, Heated rear window	422
070 - Multimedia system , (9WQ)	423-424
1. Multimedia system , (9WQ)	423
2. Coupling point for seat, driver side, Coupling point for seat, passenger side	424
071 - Driver seat , (L0L),(Q4Q),(Q1D)	425-430
1. Driver seat , (L0L),(Q4Q),(Q1D)	425
2. Control unit for seat and steering column adjustment with memory function, Rear left footwell light	426
3. Driver seat adjustment operating unit, Control unit for seat and steering column adjustment with memory function	427
4. Control unit for seat and steering column adjustment with memory function, Driver seat longitudinal adjustment motor, Driver seat rake adjustment motor, Driver seat height adjustment motor	428
5. Driver seat lumbar support adjustment switch, Control unit for seat and steering column adjustment with memory function, Lumbar support for driver seat, Driver seat backrest adjustment motor	429
6. Onboard supply control unit, Data bus diagnostic interface	430
072 - Front passenger seat , (L0L),(Q4Q),(Q1D)	431-434
1. Front passenger seat , (L0L),(Q4Q),(Q1D)	431
2. Front passenger seat adjustment operating unit, Airbag control unit, Emergency call module control unit and communication unit, Rear right footwell light	432
3. Front passenger seat lumbar support adjustment switch, Front passenger seat adjustment operating unit, Lumbar support for front passenger seat, Front passenger seat longitudinal adjustment motor, Front passenger seat backrest adjustment motor, Front passenger seat rake adjustment motor, Front passenger seat height adjustment motor	433
4. Front passenger seat lumbar support adjustment switch, Onboard supply control unit	434
073 - Panoramic sliding sunroof , (3FU)	435-438
1. Panoramic sliding sunroof , (3FU)	435
2. Sliding sunroof adjustment control unit, Onboard supply control unit, Data bus diagnostic interface	436
3. Sliding sunroof adjustment control unit, Sliding sunroof motor, Sunroof roller blind motor	437
4. Sunroof button, Button 1 for roof roller blind, Sliding sunroof adjustment control unit	438
074 - Adjustable lumbar support , (3L3)	439-442
1. Adjustable lumbar support , (3L3)	439
2. Driver seat lumbar support adjustment switch, Lumbar support for driver seat, Rear left footwell light	440
3. Front passenger seat lumbar support adjustment switch, Lumbar support for front passenger seat, Rear right footwell light	441
4. Onboard supply control unit	442
075 - Front seat heating , (L0L),(Q1A)	443-448
1. Front seat heating , (L0L),(Q1A)	443
2. Onboard supply control unit	444
3. Onboard supply control unit, Data bus diagnostic interface, Control unit 1 for information electronics	445
4. Display unit for front information display and operating unit control unit, Control unit 1 for information electronics. Heated seat cushion for driver seat	446

5. Heated backrest for driver seat, Heated seat cushion for front passenger seat, Driver seat bolster heater	447
6. Heated seat cushion for front passenger seat, Heated backrest for front passenger seat, Front passenger seat bolster heater	448
076 - Front seat heating , (L0L),(Q1D),(Q4Q),(Q2J)	449-453
1. Front seat heating , (L0L),(Q1D),(Q4Q),(Q2J)	449
2. Onboard supply control unit	450
3. Onboard supply control unit, Data bus diagnostic interface, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics	451
4. Heated seat cushion for driver seat, Heated backrest for driver seat, Driver seat bolster heater, Heated seat extension for driver seat	452
5. Heated seat cushion for front passenger seat, Heated backrest for front passenger seat, Front passenger seat bolster heater, Heated seat extension for front passenger seat	453
077 - Rear seat heating , (4A4)	454-457
1. Rear seat heating , (4A4)	454
2. Operating and display unit for rear air conditioning system	455
3. Heated bench seat cushion for rear left seat, Heated backrest for rear left seat	456
4. Heated bench seat cushion for rear right seat, Heated backrest for rear right seat	457
078 - High-voltage battery system	458-510
1. High-voltage battery system	458
2. Battery module 1, Battery modules control unit	459
3. Battery module 1, Battery module 2, Battery modules control unit	460
4. Battery module 2, Battery module 3, Battery modules control unit	461
5. Battery module 3, Battery modules control unit	462
6. Battery module 4, Battery modules control unit 2	463
7. Battery module 4, Battery module 5, Battery modules control unit 2	464
8. Battery module 5, Battery module 6, Battery modules control unit 2	465
9. Battery module 6, Battery modules control unit 2	466
10. Battery module 7, Battery modules control unit 3	467
11. Battery module 7, Battery module 8, Battery modules control unit 3	468
12. Battery module 8, Battery module 9, Battery modules control unit 3	469
13. Battery module 9, Battery modules control unit 3	470
14. Battery module 10, Battery modules control unit 4	471
15. Battery module 10, Battery module 11, Battery modules control unit 4	472
16. Battery module 11, Battery module 12, Battery modules control unit 4	473
17. Battery module 12, Battery modules control unit 4	474
18. Battery module 13, Battery modules control unit 5	475
19. Battery module 13, Battery module 14, Battery modules control unit 5	476
20. Battery module 14, Battery module 15, Battery modules control unit 5	477
21. Battery module 15, Battery modules control unit 5	478
22. Battery module 16, Battery modules control unit 6	479
23. Battery module 16, Battery module 17, Battery modules control unit 6	480
24. Battery module 17, Battery module 18, Battery modules control unit 6	481
25. Battery module 18, Battery modules control unit 6	482
26. Battery module 19, Battery modules control unit 7	483
27. Battery module 19, Battery module 20, Battery modules control unit 7	484
28. Battery module 20, Battery module 21, Battery modules control unit 7	485
29. Battery module 21, Battery modules control unit 7	486
30. Battery modules control unit 7	487
31. Battery module 22, Battery modules control unit 8	488
32. Battery module 22, Battery module 23, Battery modules control unit 8	489
33. Battery module 23, Battery module 24, Battery modules control unit 8	490
34. Battery module 24, Battery modules control unit 8	491
35. Battery module 25, Battery modules control unit 9	492
36. Battery module 25, Battery module 26, Battery modules control unit 9	493
37. Battery module 26, Battery module 27, Battery modules control unit 9	494
38. Battery module 27, Battery modules control unit 9	495
39. Battery module 28, Battery modules control unit 10	496
40. Battery module 28, Battery module 29, Battery modules control unit 10	497
41. Battery module 29, Battery module 30, Battery modules control unit 10	498
42. Battery module 30, Battery modules control unit 10	499
43. Battery module 31, Battery modules control unit 11	500
44. Battery module 31, Battery module 32, Battery modules control unit 11	501
45. Battery module 32, Battery module 33, Battery modules control unit 11	502
46. Battery module 33, Battery modules control unit 11	503
47. Battery module 34, Battery modules control unit 12	504

48. Battery module 34, Battery module 35, Battery modules control unit 12	505
49. Battery module 35, Battery module 36, Battery modules control unit 12	506
50. Battery module 36, Battery modules control unit 12, Coupling point 1 for low-voltage network of high-voltage battery	507
51. Coupling point 1 for low-voltage network of high-voltage battery	508
52. Coupling point on high-voltage battery, Coupling point 1 for low-voltage network of high-voltage battery, Coupling point 1 for high-voltage battery regulation	509
53. Igniter 3 for high-voltage battery isolation, Coupling point on high-voltage battery, Coupling point 1 for high-voltage battery regulation	510
079 - Charging sockets for high-voltage system , (ES7)	511-523
1. Charging sockets for high-voltage system , (ES7)	511
2. Charging unit 1 for high-voltage battery, Drive unit for charging socket 1 cover	512
3. Charging unit 1 for high-voltage battery, Drive unit for charging socket 1 cover	513
4. Charging unit 1 for high-voltage battery, Actuator for high-voltage charging socket lock 1, High-voltage battery charging socket 1	514
5. Charging unit 1 for high-voltage battery, High-voltage battery charging socket 1	515
6. Charging unit 1 for high-voltage battery, Drive unit for charging socket 2 cover	516
7. Charging unit 1 for high-voltage battery, Drive unit for charging socket 2 cover	517
8. Charging unit 1 for high-voltage battery, Actuator for high-voltage charging socket lock 2, High-voltage battery charging socket 2	518
9. Charging unit 1 for high-voltage battery, High-voltage charge current distributor, High-voltage battery charging socket 2	519
10. Charging unit 1 for high-voltage battery, Charging unit 2 for high-voltage battery, Data bus diagnostic interface, High-voltage charge current distributor	520
11. Charging unit 2 for high-voltage battery	521
12. High-voltage battery 1, Contactless high-voltage battery charging unit	522
13. High-voltage battery 1	523
080 - Airbag systems for RHD vehicles , (LOR)	524-538
1. Airbag systems for RHD vehicles , (LOR)	524
2. High-voltage battery 1, Airbag control unit	525
3. Airbag control unit, Data bus diagnostic interface, Emergency call module control unit and communication unit, Igniter 3 for high-voltage battery isolation	526
4. Key-operated switch to deactivate airbag on front passenger side, Airbag control unit, Convenience system central control unit, Onboard supply control unit, Steering column electronics control unit, Airbag igniter on driver side, Igniter for exhaust valve for driver airbag, Diagnostic connection, Front roof module	527
5. Driver side belt switch, Driver side seat position sensor, Seat occupied sensor on driver side, Airbag control unit, Front passenger airbag unit	528
6. Front passenger side belt switch, Seat occupied sensor on front passenger side, Front passenger side seat position sensor, Airbag control unit, Side airbag igniter on driver side	529
7. Airbag control unit, Seat occupied recognition control unit, Side airbag igniter on front passenger side	530
8. Rear seat occupied sensor on driver side, Rear seat occupied sensor on passenger side, Rear seat occupied sensor, centre, Airbag control unit	531
9. Twin belt buckle, Passenger side belt buckle, seat row 2, Airbag control unit	532
10. Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on passenger side, Front airbag crash sensor for driver side, Front airbag crash sensor for front passenger side, Crash sensor for rear-end collision, Airbag control unit, Driver side knee airbag igniter, Front passenger side knee airbag igniter	533
11. Airbag control unit, Rear side airbag igniter on driver side, Rear side airbag igniter on passenger side, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter, Igniter for driver side seat belt tensioner 2, Igniter for front passenger side seat belt tensioner 2	534
12. Airbag control unit, Control unit for rear left belt tensioner, Control unit for rear right belt tensioner	535
13. Airbag control unit, Front left seat belt, Front passenger seat belt tensioner igniter 1	536
14. Airbag control unit, Front right seat belt, Driver seat belt tensioner igniter 1	537
15. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Crash sensor for side airbag in B-pillar, driver side, Crash sensor for side airbag in B-pillar, passenger side, Airbag control unit	538
081 - Driver door , (LOR)	539-553
1. Driver door , (LOR)	539
2. Driver door control unit, Driver assist systems control unit	540
3. Driver door control unit, Light for sill panel moulding background lighting, driver side	541
4. Driver door control unit, Light for exterior door handle illumination, driver side, Driver door lock unit. Driver door power latching motor	542

5. Operating unit for window regulator in driver door, Driver door control unit, Driver side window regulator motor	543
6. Exterior mirror adjuster, Operating unit for window regulator in driver door, Driver door control unit	544
7. Exterior mirror adjuster, Rear lid remote release button, Driver side interior locking button for central locking system, Driver door control unit	545
8. Button for deactivating interior monitoring and vehicle inclination sensor, Driver door control unit, Central locking SAFELOCK function warning lamp, Light for driver side interior door handle illumination, Driver side entry light, Exit warning lamp, driver side	546
9. Driver operating unit for memory settings, Driver door control unit, Light for driver door background lighting	547
10. Driver door control unit, Light for front right door contour lighting, Light for right door storage compartment illumination, Driver side exterior mirror	548
11. Driver door control unit, Driver side exterior mirror	549
12. Driver door control unit, Digital exterior mirror control unit 1, Driver side exterior mirror	550
13. Onboard supply control unit, Data bus diagnostic interface, Digital exterior mirror control unit 1	551
14. Onboard supply control unit, Data bus diagnostic interface	552
15. Front passenger door control unit, Rear driver side door control unit, Rear passenger side door control unit, Digital exterior mirror control unit 2	553
082 - Front passenger door , (LOR)	554-566
1. Front passenger door , (LOR)	554
2. Front passenger door control unit, Driver assist systems control unit	555
3. Front passenger door control unit, Light for sill panel moulding background lighting, front passenger side	556
4. Front passenger door control unit, Light for exterior door handle illumination, front passenger side, Front passenger door lock unit, Front passenger door power latching motor	557
5. Window regulator switch in front passenger door, Front passenger side interior locking button for central locking system, Front passenger door control unit, Front passenger side window regulator motor	558
6. Front passenger operating unit for memory settings, Front passenger door control unit, Light for passenger side interior door handle illumination, Passenger side entry light, Exit warning lamp, front passenger side	559
7. Front passenger door control unit, Light for passenger side door contour lighting, Light for passenger door background lighting	560
8. Front passenger door control unit, Light for left door storage compartment illumination, Passenger side exterior mirror	561
9. Front passenger door control unit, Passenger side exterior mirror	562
10. Front passenger door control unit, Digital exterior mirror control unit 2, Passenger side exterior mirror	563
11. Onboard supply control unit, Data bus diagnostic interface, Digital exterior mirror control unit 2	564
12. Onboard supply control unit, Data bus diagnostic interface	565
13. Driver door control unit, Rear driver side door control unit, Rear passenger side door control unit, Digital exterior mirror control unit 1	566
083 - Rear left door , (LOR)	567-572
1. Rear left door , (LOR)	567
2. Onboard supply control unit, Rear passenger side door control unit, Light for rear sill panel moulding background lighting, passenger side	568
3. Rear passenger side door control unit, Rear door lock unit, passenger side, Rear door power latching motor, passenger side	569
4. Operating unit in rear door, passenger side, Rear passenger side interior locking button for central locking system, Rear passenger side door control unit, Light for rear exterior door handle illumination, passenger side, Rear passenger side window regulator motor	570
5. Rear passenger side door control unit, Light 1 for rear left door background lighting, Light for rear passenger side interior door handle illumination, Rear passenger side entry light, Rear exit warning lamp, passenger side	571
6. Light for rear left door contour lighting	572
084 - Rear right door , (LOR)	573-578
1. Rear right door , (LOR)	573
2. Onboard supply control unit, Rear driver side door control unit, Light for rear sill panel moulding background lighting, driver side	574
3. Rear driver side door control unit, Rear door lock unit, driver side, Rear door power latching motor, driver side	575
4. Operating unit in rear door, driver side, Rear driver side interior locking button for central locking system. Rear driver side door control unit. Light for rear exterior door handle illumination.	576

driver side, Rear driver side window regulator motor	
5. Rear driver side door control unit, Light 1 for rear right door background lighting, Light for rear driver side interior door handle illumination, Rear driver side entry light, Rear exit warning lamp, driver side	577
6. Light for rear right door contour lighting	578
085 - Driver seat , (L0R),(Q1A)	579-584
1. Driver seat , (L0R),(Q1A)	579
2. Control unit for seat and steering column adjustment with memory function, Onboard supply control unit, Data bus diagnostic interface, Rear right footwell light	580
3. Driver seat adjustment operating unit, Control unit for seat and steering column adjustment with memory function, Driver seat longitudinal adjustment motor	581
4. Control unit for seat and steering column adjustment with memory function, Driver seat rake adjustment motor, Driver seat height adjustment motor	582
5. Control unit for seat and steering column adjustment with memory function, Driver seat backrest adjustment motor	583
6. Driver seat lumbar support adjustment switch, Lumbar support for driver seat	584
086 - Front passenger seat , (L0R),(Q1A)	585-589
1. Front passenger seat , (L0R),(Q1A)	585
2. Onboard supply control unit, Rear left footwell light	586
3. Front passenger seat adjustment operating unit, Airbag control unit, Emergency call module control unit and communication unit, Front passenger seat longitudinal adjustment motor, Front passenger seat rake adjustment motor, Front passenger seat height adjustment motor	587
4. Front passenger seat lumbar support adjustment switch, Front passenger seat adjustment operating unit, Lumbar support for front passenger seat, Front passenger seat backrest adjustment motor	588
5. Coupling point for front passenger seat backrest	589
087 - Driver seat , (L0R),(Q2J)	590-595
1. Driver seat , (L0R),(Q2J)	590
2. Control unit for seat and steering column adjustment with memory function, Onboard supply control unit, Data bus diagnostic interface, Rear right footwell light	591
3. Driver seat adjustment operating unit, Control unit for seat and steering column adjustment with memory function, Driver seat longitudinal adjustment motor, Driver seat height adjustment motor	592
4. Switch module for driver seat, Control unit for seat and steering column adjustment with memory function, Driver seat rake adjustment motor, Driver seat depth adjustment motor	593
5. Control unit for seat and steering column adjustment with memory function, Valve block 1 in driver seat, Valve block 2 in driver seat, Compressor for multicontour driver seat	594
6. Control unit for seat and steering column adjustment with memory function, Driver seat backrest adjustment motor	595
088 - Front passenger seat , (L0R),(Q2J)	596-601
1. Front passenger seat , (L0R),(Q2J)	596
2. Onboard supply control unit, Control unit for front passenger seat adjustment with memory function, Data bus diagnostic interface, Rear left footwell light	597
3. Front passenger seat adjustment operating unit, Control unit for front passenger seat adjustment with memory function, Front passenger seat longitudinal adjustment motor, Front passenger seat height adjustment motor	598
4. Switch module for front passenger seat, Control unit for front passenger seat adjustment with memory function, Front passenger seat rake adjustment motor, Front passenger seat depth adjustment motor	599
5. Control unit for front passenger seat adjustment with memory function, Valve block 1 in front passenger seat, Valve block 2 in front passenger seat, Compressor for multicontour front passenger seat	600
6. Control unit for front passenger seat adjustment with memory function, Front passenger seat backrest adjustment motor	601
089 - Driver seat , (L0R),(Q1D),(Q4Q)	602-605
1. Driver seat , (L0R),(Q1D),(Q4Q)	602
2. Control unit for seat and steering column adjustment with memory function, Onboard supply control unit, Data bus diagnostic interface, Rear right footwell light	603
3. Driver seat adjustment operating unit, Control unit for seat and steering column adjustment with memory function, Driver seat longitudinal adjustment motor, Driver seat rake adjustment motor	604
4. Driver seat lumbar support adjustment switch, Control unit for seat and steering column adjustment with memory function, Lumbar support for driver seat, Driver seat backrest adjustment motor, Driver seat height adjustment motor	605
090 - Front passenger seat , (L0R),(Q1D),(Q4Q)	606-609
1. Front passenger seat , (L0R),(Q1D),(Q4Q)	606
2. Front passenger seat adjustment operating unit, Onboard supply control unit, Rear left footwell light	607
3. Front passenger seat adjustment operating unit, Airbag control unit, Emergency call module	608

	control unit and communication unit, Front passenger seat longitudinal adjustment motor, Front passenger seat backrest adjustment motor, Front passenger seat rake adjustment motor, Front passenger seat height adjustment motor	
	4. Front passenger seat lumbar support adjustment switch, Lumbar support for front passenger seat	609
091	- Front seat heating , (L0R),(Q1A)	610-615
	1. Front seat heating , (L0R),(Q1A)	610
	2. Onboard supply control unit	611
	3. Onboard supply control unit, Data bus diagnostic interface, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics	612
	4. Heated seat cushion for driver seat	613
	5. Heated seat cushion for front passenger seat	614
	6. Heated backrest for front passenger seat, Front passenger seat bolster heater	615
092	- Front seat heating , (L0R),(Q1D),(Q2J),(Q4Q)	616-621
	1. Front seat heating , (L0R),(Q1D),(Q2J),(Q4Q)	616
	2. Onboard supply control unit	617
	3. Onboard supply control unit, Data bus diagnostic interface, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics	618
	4. Heated seat cushion for driver seat, Heated backrest for driver seat, Driver seat bolster heater	619
	5. Heated seat cushion for front passenger seat, Front passenger seat bolster heater, Heated seat extension for driver seat	620
	6. Heated backrest for front passenger seat, Heated seat extension for front passenger seat	621
093	- Airbag systems (US equipment) , (4UH)	622-636
	1. Airbag systems (US equipment) , (4UH)	622
	2. High-voltage battery 1, Airbag control unit	623
	3. Airbag control unit, Data bus diagnostic interface, Emergency call module control unit and communication unit, Igniter 3 for high-voltage battery isolation	624
	4. Airbag control unit, Convenience system central control unit, Onboard supply control unit, Steering column electronics control unit, Airbag igniter on driver side, Igniter for exhaust valve for driver airbag, Diagnostic connection, Front roof module	625
	5. Driver side belt switch, Driver side seat position sensor, Airbag control unit, Front passenger airbag unit	626
	6. Front passenger side belt switch, Front passenger side seat position sensor, Airbag control unit, Side airbag igniter on driver side	627
	7. Airbag control unit, Seat occupied recognition control unit, Heater element with seat occupied recognition, front passenger side	628
	8. Rear seat occupied sensor on driver side, Rear seat occupied sensor on passenger side, Rear seat occupied sensor, centre, Airbag control unit, Side airbag igniter on front passenger side	629
	9. Twin belt buckle, Passenger side belt buckle, seat row 2, Airbag control unit	630
	10. Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on passenger side, Front airbag crash sensor for driver side, Front airbag crash sensor for front passenger side, Crash sensor for rear-end collision, Airbag control unit, Driver side knee airbag igniter, Front passenger side knee airbag igniter	631
	11. Airbag control unit, Rear side airbag igniter on driver side, Rear side airbag igniter on passenger side, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter, Igniter for driver side seat belt tensioner 2, Igniter for front passenger side seat belt tensioner 2	632
	12. Airbag control unit, Control unit for rear left belt tensioner, Control unit for rear right belt tensioner	633
	13. Airbag control unit, Control unit for front left belt tensioner, Front left seat belt, Driver seat belt tensioner igniter 1	634
	14. Airbag control unit, Control unit for front right belt tensioner, Front right seat belt, Front passenger seat belt tensioner igniter 1	635
	15. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Crash sensor for side airbag in B-pillar, driver side, Crash sensor for side airbag in B-pillar, passenger side, Airbag control unit	636
094	- Towing bracket, only models with US equipment , (5C1)	637-640
	1. Towing bracket, only models with US equipment , (5C1)	637
	2. Trailer detector control unit, Convenience system central control unit	638
	3. Trailer detector control unit, Data bus diagnostic interface	639
	4. Trailer detector control unit	640
095	- Charging sockets for high-voltage system , (ES6)	641-654
	1. Charging sockets for high-voltage system , (ES6)	641
	2. Charging unit 1 for high-voltage battery	642
	3. Charging unit 1 for high-voltage battery, Drive unit for charging socket 1 cover	643
	4. Charging unit 1 for high-voltage battery, Drive unit for charging socket 1 cover	644
	5. Charging unit 1 for high-voltage battery, Actuator for high-voltage charging socket lock 1.	645

High-voltage battery charging socket 1	
6. Charging unit 1 for high-voltage battery, High-voltage battery charging socket 1	646
7. Charging unit 1 for high-voltage battery, Drive unit for charging socket 2 cover	647
8. Charging unit 1 for high-voltage battery, Actuator for high-voltage charging socket lock 2, High-voltage battery charging socket 2, Drive unit for charging socket 2 cover	648
9. Charging unit 1 for high-voltage battery, High-voltage charge current distributor, High-voltage battery charging socket 2	649
10. Charging unit 1 for high-voltage battery, High-voltage charge current distributor	650
11. Charging unit 1 for high-voltage battery, Charging unit 2 for high-voltage battery, Data bus diagnostic interface	651
12. Charging unit 2 for high-voltage battery	652
13. High-voltage battery 1, Contactless high-voltage battery charging unit	653
14. High-voltage battery 1	654
096 - Charging sockets for high-voltage system , (ES8)	655-665
1. Charging sockets for high-voltage system , (ES8)	655
2. Charging unit 1 for high-voltage battery, Drive unit for charging socket 1 cover	656
3. Charging unit 1 for high-voltage battery, Switch illumination bulb, High-voltage battery charging socket 1, Drive unit for charging socket 1 cover	657
4. Charging unit 1 for high-voltage battery, High-voltage battery charging socket 1	658
5. Charging unit 1 for high-voltage battery, Switch illumination bulb, Drive unit for charging socket 2 cover	659
6. Charging unit 1 for high-voltage battery, High-voltage battery charging socket 2, Drive unit for charging socket 2 cover	660
7. Charging unit 1 for high-voltage battery, High-voltage charge current distributor, High-voltage battery charging socket 2	661
8. Charging unit 1 for high-voltage battery, Charging unit 2 for high-voltage battery, Data bus diagnostic interface, High-voltage charge current distributor	662
9. Charging unit 2 for high-voltage battery	663
10. High-voltage battery 1, Contactless high-voltage battery charging unit	664
11. High-voltage battery 1	665
097 - Charging sockets for high-voltage system, Japan only , (ES5)	666-674
1. Charging sockets for high-voltage system, Japan only , (ES5)	666
2. Charging unit 1 for high-voltage battery	667
3. Charging unit 1 for high-voltage battery, Drive unit for charging socket 1 cover	668
4. Charging unit 1 for high-voltage battery, Drive unit for charging socket 1 cover, Drive unit for charging socket 2 cover	669
5. Charging unit 1 for high-voltage battery, Data bus diagnostic interface, Drive unit for charging socket 2 cover	670
6. Charging unit 1 for high-voltage battery, High-voltage battery charging socket 1	671
7. Charging unit 1 for high-voltage battery, High-voltage battery charging socket 1	672
8. Charging unit 1 for high-voltage battery, High-voltage battery charging socket 2	673
9. High-voltage battery 1, Contactless high-voltage battery charging unit	674
098 - Front seat heating , (5C1)	675-680
1. Front seat heating , (5C1)	675
2. Onboard supply control unit	676
3. Onboard supply control unit, Data bus diagnostic interface, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics	677
4. Heated seat cushion for driver seat, Heated backrest for driver seat, Driver seat bolster heater	678
5. Seat occupied recognition control unit, Heated seat extension for driver seat	679
6. Heated seat cushion for front passenger seat, Heated backrest for front passenger seat, Heater element with seat occupied recognition, front passenger side, Front passenger seat bolster heater, Heated seat extension for front passenger seat	680
099 - Adaptive cruise control , (8T4),(8T5)	681-682
1. Adaptive cruise control , (8T4),(8T5)	681
2. Adaptive cruise control unit, Heater element for adaptive cruise control radar sensor	682
100 - High-voltage battery system , EASB	683-708
1. High-voltage battery system , EASB	683
2. Battery module 1, Battery module 2, Battery modules control unit	684
3. Battery module 2, Battery module 3, Battery modules control unit	685
4. Battery module 4, Battery modules control unit, Battery modules control unit 2	686
5. Battery module 4, Battery module 5, Battery modules control unit 2	687
6. Battery module 6, Battery modules control unit 2	688
7. Battery module 7, Battery modules control unit 2, Battery modules control unit 3	689
8. Battery module 8, Battery module 9, Battery modules control unit 3	690
9. Battery module 9, Battery modules control unit 3	691
10. Battery module 10. Battery module 11. Battery modules control unit 4	692

11. Battery module 11, Battery module 12, Battery modules control unit 4	693
12. Battery module 13, Battery modules control unit 4, Battery modules control unit 5	694
13. Battery module 13, Battery module 14, Battery modules control unit 5	695
14. Battery module 15, Battery modules control unit 5	696
15. Battery module 16, Battery modules control unit 5, Battery modules control unit 6	697
16. Battery module 17, Battery module 18, Battery modules control unit 6	698
17. Battery module 18, Battery modules control unit 6	699
18. Battery module 19, Battery module 20, Battery modules control unit 7	700
19. Battery module 20, Battery module 21, Battery modules control unit 7	701
20. Battery module 22, Battery modules control unit 7, Battery modules control unit 8	702
21. Battery module 22, Battery module 23, Battery modules control unit 8	703
22. Battery module 24, Battery modules control unit 8	704
23. Battery module 25, Battery modules control unit 8, Battery modules control unit 9	705
24. Battery module 26, Battery module 27, Battery modules control unit 9	706
25. Battery module 27, Battery modules control unit 9, Coupling point 1 for low-voltage network of high-voltage battery	707
26. Coupling point on high-voltage battery, Coupling point 1 for low-voltage network of high-voltage battery, Coupling point 1 for high-voltage battery regulation	708
101 - Electric drive system for rear axle , EAVA	709-713
1. Electric drive system for rear axle , EAVA	709
2. Electric drive control unit for rear axle	710
3. Electric drive control unit for rear axle, Rear three-phase current drive	711
4. High-voltage battery 1, Electric drive control unit for rear axle, Electric drive control unit 2 for rear axle	712
5. Electric drive control unit 2 for rear axle	713
102 - MMI (information electronics 1) , (I8T)	714-728
1. MMI (information electronics 1) , (I8T)	714
2. Data bus diagnostic interface, Control unit 1 for information electronics, Fuse holder C, Fuse holder F, Fuse holder M	715
3. Driver side volume regulator, Data bus diagnostic interface, Control unit 1 for information electronics	716
4. Control unit 1 for information electronics, Microphone unit in front roof module	717
5. Control unit 1 for information electronics, USB hub, Internal vehicle communication aerial, USB connection 1	718
6. Control unit 1 for information electronics, Driver assist systems control unit, USB hub, USB connection 1	719
7. Control unit 1 for information electronics, GPS aerial, Roof aerial	720
8. Control unit 1 for information electronics, Aerial amplifier 2, Roof aerial	721
9. Control unit 1 for information electronics, Aerial amplifier	722
10. Control unit 1 for information electronics, LTE aerial 1, LTE aerial 2	723
11. Control unit in dash panel insert, Control unit 1 for information electronics, Control unit for head-up display	724
12. Chip card reader control unit, Control unit 1 for information electronics	725
13. Chip card reader control unit, Control unit 1 for information electronics, Traffic data aerial, Dedicated short-range communication aerial	726
14. Display unit for front information display and operating unit control unit, Display unit 2 for front information display and operating unit control unit	727
15. Digital sound package control unit, Display unit for front information display and operating unit control unit, Display unit 2 for front information display and operating unit control unit, TV tuner	728
103 - Digital TV tuner , (Q0A),(Q0B),(QU1),(QV1)	729-732
1. Digital TV tuner , (Q0A),(Q0B),(QU1),(QV1)	729
2. TV tuner, TV card reader	730
3. Control unit in dash panel insert, Digital sound package control unit, Control unit 1 for information electronics, Control unit for head-up display, TV tuner	731
4. Aerial amplifier, TV tuner, Aerial amplifier 2 for TV, Aerial amplifier 3 for TV	732
104 - Mobile telephone systems , (9ZE),(9ZV),(9ZX)	733-737
1. Mobile telephone systems , (9ZE),(9ZV),(9ZX)	733
2. Control unit 1 for information electronics, Microphone unit in front roof module	734
3. Control unit 1 for information electronics, Aerial amplifier for mobile telephone, Microphone unit in front roof module	735
4. Aerial amplifier for mobile telephone, Roof aerial	736
5. Charging unit 1 for mobile devices, Near field communication control unit 2, LTE aerial 3	737
105 - Infotainment MOST bus	738-740
1. Infotainment MOST bus	738
2. Control unit in dash panel insert. Control unit 1 for information electronics. Control unit for	739

head-up display	
3. Control unit in dash panel insert, Control unit 1 for information electronics, TV tuner	740
106 - Communication , (IV1),(IV2),(IV3),(IV4),(IV5),(IV6),(IV7),(IV8),(IV9),(JE0),(JE1),(JE3),(JE4), (JE6)	741-747
1. Communication , (IV1),(IV2),(IV3),(IV4),(IV5),(IV6),(IV7),(IV8),(IV9),(JE0),(JE1),(JE3),(JE4), (JE6)	741
2. Data bus diagnostic interface, Emergency call module control unit and communication unit	742
3. Emergency call module control unit and communication unit, Microphone unit in front roof module, Loudspeaker for emergency call module	743
4. Emergency call module control unit and communication unit, Wireless data transfer aerial, Wireless data transfer aerial 2	744
5. Emergency call module control unit and communication unit, Roof aerial	745
6. Emergency call module control unit and communication unit, Roof aerial, Emergency call module aerial	746
7. Emergency call module control unit and communication unit, Emergency call module aerial 3	747
107 - Interface for external use , (IU3),(IU4)	748-750
1. Interface for external use , (IU3),(IU4)	748
2. Control unit 1 for information electronics, Control unit with Android operating system	749
3. Control unit with Android operating system	750
108 - Communication , (AV4)	751-753
1. Communication , (AV4)	751
2. Battery regulation control unit, Interface control unit for telematics	752
3. Telephone and telematics control unit, Interface control unit for telematics, Aerial module for telephone and telematics	753
109 - Sound system , (9VS)	754-760
1. Sound system , (9VS)	754
2. Digital sound package control unit, Subwoofer	755
3. Digital sound package control unit, Front left bass loudspeaker, Front left mid-range loudspeaker, Front left treble loudspeaker 2	756
4. Digital sound package control unit, Front right bass loudspeaker, Front right mid-range loudspeaker	757
5. Digital sound package control unit, Rear left treble loudspeaker, Rear left bass loudspeaker, Rear right treble loudspeaker, Rear right bass loudspeaker	758
6. Control unit 1 for information electronics, Left effect loudspeaker, Right effect loudspeaker	759
7. Control unit 1 for information electronics, Front left treble loudspeaker, Front right treble loudspeaker, Centre loudspeaker	760
110 - Dash panel insert	761-763
1. Dash panel insert	761
2. Control unit in dash panel insert, Data bus diagnostic interface	762
3. Control unit in dash panel insert, Control unit 1 for information electronics	763
111 - USB connections for data transfer , (IU0),(IU1),(IU2),(UE8)	764-766
1. USB connections for data transfer , (IU0),(IU1),(IU2),(UE8)	764
2. USB hub, USB connection 1	765
3. Control unit 1 for information electronics, USB hub, USB connection 1	766
112 - Communication, Japan , (ER5)	767-769
1. Communication, Japan , (ER5)	767
2. Chip card reader control unit, Control unit 1 for information electronics	768
3. Chip card reader control unit, Dedicated short-range communication aerial	769
113 - MMI (information electronics 1)	770-778
1. MMI (information electronics 1)	770
2. Data bus diagnostic interface, Control unit 1 for information electronics	771
3. Driver side volume regulator, Data bus diagnostic interface, Control unit 1 for information electronics	772
4. Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Display unit 2 for front information display and operating unit control unit	773
5. Control unit in dash panel insert, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Display unit 2 for front information display and operating unit control unit	774
6. Control unit 1 for information electronics	775
7. Control unit 1 for information electronics, Roof aerial	776
8. Control unit 1 for information electronics, Aerial amplifier	777
9. Control unit 1 for information electronics, Aerial amplifier 2	778
114 - MMI (information electronics 1)	779-787
1. MMI (information electronics 1)	779
2. Data bus diaagnostic interface. Control unit 1 for information electronics	780

3. Driver side volume regulator, Data bus diagnostic interface, Control unit 1 for information electronics	781
4. Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Display unit 2 for front information display and operating unit control unit	782
5. Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Display unit 2 for front information display and operating unit control unit	783
6. Control unit 1 for information electronics, Aerial amplifier 3, Roof aerial	784
7. Control unit 1 for information electronics, Aerial amplifier	785
8. Control unit 1 for information electronics, Aerial amplifier	786
9. Control unit 1 for information electronics, Aerial amplifier 2	787
115 - Driver seat , (Q2J)	788-793
1. Driver seat , (Q2J)	788
2. Control unit for seat and steering column adjustment with memory function, Driver seat adjustment thermal fuse 1, Rear left footwell light	789
3. Driver seat adjustment operating unit, Control unit for seat and steering column adjustment with memory function, Driver seat longitudinal adjustment motor, Driver seat height adjustment motor	790
4. Switch module for driver seat, Control unit for seat and steering column adjustment with memory function, Driver seat rake adjustment motor, Driver seat depth adjustment motor	791
5. Control unit for seat and steering column adjustment with memory function, Valve block 1 in driver seat, Valve block 2 in driver seat, Compressor for multicontour driver seat	792
6. Control unit for seat and steering column adjustment with memory function, Onboard supply control unit, Data bus diagnostic interface, Driver seat backrest adjustment motor	793
116 - Front passenger seat , (Q2J)	794-799
1. Front passenger seat , (Q2J)	794
2. Control unit for front passenger seat adjustment with memory function, Front passenger seat adjustment thermal fuse 1, Rear right footwell light	795
3. Front passenger seat adjustment operating unit, Control unit for front passenger seat adjustment with memory function, Front passenger seat longitudinal adjustment motor	796
4. Control unit for front passenger seat adjustment with memory function, Front passenger seat rake adjustment motor, Front passenger seat height adjustment motor, Front passenger seat depth adjustment motor	797
5. Switch module for front passenger seat, Control unit for front passenger seat adjustment with memory function, Valve block 1 in front passenger seat, Valve block 2 in front passenger seat, Compressor for multicontour front passenger seat	798
6. Onboard supply control unit, Control unit for front passenger seat adjustment with memory function, Data bus diagnostic interface, Front passenger seat backrest adjustment motor	799
117 - Driver seat , (3L4),(Q1A),(Q1D)	800-804
1. Driver seat , (3L4),(Q1A),(Q1D)	800
2. Control unit for seat and steering column adjustment with memory function, Driver seat adjustment thermal fuse 1, Rear left footwell light	801
3. Driver seat adjustment operating unit, Control unit for seat and steering column adjustment with memory function, Driver seat longitudinal adjustment motor, Driver seat height adjustment motor	802
4. Driver seat lumbar support adjustment switch, Control unit for seat and steering column adjustment with memory function, Lumbar support for driver seat, Driver seat backrest adjustment motor, Driver seat rake adjustment motor	803
5. Onboard supply control unit, Data bus diagnostic interface	804
118 - Driver seat , (3L5),(Q1A),(Q1D)	805-808
1. Driver seat , (3L5),(Q1A),(Q1D)	805
2. Driver seat adjustment operating unit, Driver seat adjustment thermal fuse 1, Rear left footwell light	806
3. Driver seat adjustment operating unit, Driver seat longitudinal adjustment motor, Driver seat backrest adjustment motor, Driver seat rake adjustment motor, Driver seat height adjustment motor	807
4. Driver seat lumbar support adjustment switch, Lumbar support for driver seat	808
119 - Front passenger seat , (Q1A),(Q1D)	809-812
1. Front passenger seat , (Q1A),(Q1D)	809
2. Front passenger seat adjustment operating unit, Front passenger seat adjustment thermal fuse 1, Rear right footwell light	810
3. Front passenger seat lumbar support adjustment switch, Front passenger seat adjustment operating unit, Lumbar support for front passenger seat, Front passenger seat longitudinal adjustment motor, Front passenger seat backrest adjustment motor, Front passenger seat rake adjustment motor, Front passenger seat height adjustment motor	811
4. Front passenger seat lumbar support adjustment switch, Onboard supply control unit	812
120 - Seat ventilation , (L0L)	813-818
1. Seat ventilation . (L0L)	813

2. Front right seat cushion fan 1	814
3. Front right seat backrest fan 1	815
4. Onboard supply control unit, Remote-controlled air conditioning relay, Fuse holder D	816
5. Front left seat cushion fan 1	817
6. Front left seat backrest fan 1	818
121 - Seat ventilation , (LOR)	819-824
1. Seat ventilation , (LOR)	819
2. Front right seat cushion fan 1	820
3. Front right seat backrest fan 1	821
4. Onboard supply control unit, Remote-controlled air conditioning relay, Fuse holder D	822
5. Front left seat cushion fan 1	823
6. Front left seat backrest fan 1	824
122 - Seat ventilation , (Q2J)	825-828
1. Seat ventilation , (Q2J)	825
2. Front left seat backrest fan 1, Front left seat cushion fan 1	826
3. Onboard supply control unit, Remote-controlled air conditioning relay, Fuse holder D	827
4. Front right seat backrest fan 1, Front right seat cushion fan 1	828
801 - - Fitting locations: Earth points - 1	829-844
1. Fitting locations: Earth points	829-844
1.1 Earth points in front part of vehicle	832
1.1.1 Front from left	832
1.1.2 Front from right	833
1.2 Earth points in middle part of vehicle	833-837
1.2.1 Front left of interior	834
1.2.2 Front right of interior	835
1.2.3 Roof	835
1.2.4 Steering wheel	836
1.2.5 Front passenger seat	837
1.3 Earth points in rear part of vehicle	838-841
1.3.1 Left luggage compartment, e-tron, Q8 e-tron	839
1.3.2 Left luggage compartment, e-tron Sportback, Q8 e-tron Sportback	839
1.3.3 Right luggage compartment, e-tron, Q8 e-tron	840
1.3.4 Right luggage compartment, e-tron Sportback, Q8 e-tron Sportback	841
1.4 Earth points in underbody	842-844
1.4.1 Front of underbody	842
1.4.2 Rear underbody	843-844
802 - - Fitting locations: Fuses - 1	845-888
1. Fitting locations: Fuses	845-888
1.1 Fuse holder A -SA-	848-850
1.1.1 Fitting location, fuse holder A -SA-, left-hand drive	848
1.1.2 Fitting location, fuse holder A -SA-, left-hand drive	849
1.1.3 Fuse assignment on fuse holder A -SA-	850
1.2 Fuse holder B -SB-	851-853
1.2.1 Fitting location, fuse holder B -SB-, left-hand drive	851
1.2.2 Fitting location, fuse holder B -SB-, right-hand drive	852
1.2.3 Fuse assignment on fuse holder B -SB-	853
1.3 Fuse holder C -SC-	854-856
1.3.1 Fitting location, fuse holder C -SC-, left-hand drive	855
1.3.2 Fitting location, fuse holder C -SC-, right-hand drive	855-856
1.3.3 Fuse assignment, fuse holder C -SC-	857
1.4 Fuse holder D -SD-	857-860
1.4.1 Fitting location fuse holder D -SD-, left-hand drive	858
1.4.2 Fitting location fuse holder D -SD-, right-hand drive	859
1.4.3 Fuse assignment on fuse holder D -SD-	860
1.5 Fuse holder E -SE-	861-863
1.5.1 Fitting location of fuse holder E -SE-, from September 2018	861
1.5.2 Fitting location of fuse holder E -SE-, from December 2018	862-863
1.5.3 Fuse assignment, fuse holder E -SE-	864
1.6 Fuse holder F -SF-	864-866
1.6.1 Fitting location, fuse holder F -SF-, left-hand drive	864
1.6.2 Fitting location, fuse holder F -SF-, right-hand drive	865
1.6.3 Fuse assignment on fuse holder F -SF-	866
1.7 Fuse holder H -SH-	867-868
1.7.1 Fitting location fuse holder H -SH-	867
1.7.2 Fuse assignment fuse holder H -SH-	868
1.8 Fuse holder J -SJ-	869-871

1.8.1 Fitting location of fuse holder J -SJ-, from September 2018	869
1.8.2 Fitting location of fuse holder J -SJ-, from December 2018	870
1.8.3 Fuse assignment of fuse holder J -SJ-	871
1.9 Fuse holder M -SM-	872-873
1.9.1 Fitting location, fuse holder M -SM-	872
1.9.2 Fuse assignment, fuse holder M -SM-	873
1.10 Single fuses, relay and fuse carrier 1 -SR1-	874-876
1.10.1 Fitting location for single fuses, relay and fuse carrier 1 -SR1-, from September 2018	875
1.10.2 Fitting location for single fuses, relay and fuse carrier 1 -SR1-, from December 2018	875
1.10.3 Fuse assignment of single fuses, relay and fuse carrier 1 -SR1-	876
1.11 Single fuses, relay and fuse carrier 2 -SR2-	877-878
1.11.1 Fitting location of single fuses, relay and fuse carrier 2 -SR2-	877
1.11.2 Fuse assignment of single fuses, relay and fuse carrier 2 -SR2-	878
1.12 Single fuses, relay and fuse carrier 3 -SR3-	879-881
1.12.1 Fitting location for single fuses relay and fuse carrier 3 -SR3-, LHD	879
1.12.2 Fitting location for single fuses relay and fuse carrier 3 -SR3-, RHD	880
1.12.3 Fuse assignment for single fuses relay and fuse carrier 3 -SR3-, LHD	881
1.12.4 Fuse assignment for single fuses relay and fuse carrier 3 -SR3-, RHD	882
1.13 Single fuses, relay and fuse carrier 4 -SR4-	882-883
1.13.1 Fitting location of single fuses, relay and fuse carrier 4 -SR4-	882
1.13.2 Fuse assignment of single fuses, relay and fuse carrier 4 -SR4-	883
1.14 Wiring junction -TV1-	884-885
1.14.1 Fitting location of wiring junction -TV1-	884
1.14.2 Fuse assignment, wiring junction -TV1-	885
1.15 Terminal 30 wiring junction -TV2-	886-888
1.15.1 Fitting location, terminal 30 wiring junction -TV2-	886
1.15.2 Fuse assignment, terminal 30 wiring junction -TV2-	887-888
803 - -Fitting locations: Relays - 1	889-895
1. Fitting locations: Relays	889-895
1.1 Relay and fuse carrier 1 -SR1-	890
1.1.1 Relay and fuse carrier 1 -SR1-, from September 2018	890
1.1.2 Relay and fuse carrier 1 -SR1-, from December 2018	891
1.2 Relay and fuse carrier 2 -SR2-	891
1.3 Relay and fuse carrier 3 -SR3-	892-893
1.3.1 Relay and fuse carrier 3 -SR3-, left-hand drive models	893
1.3.2 Relay and fuse carrier 3 -SR3-, right-hand drive	893
1.4 Relay and fuse carrier 4 -SR4-	894-895
804 - - Fitting locations: front part of vehicle - 1	896-914
1. Fitting locations: front part of vehicle	896-914
1.1 Front, view from front	903-904
1.1.1 Front, view from front, Audi e-tron up to model year 2023	903
1.1.2 Front, view from front, Audi Q8 e-tron from model year 2024	904
1.2 Front, view from left	905-908
1.2.1 Front, view from left, part 1	906
1.2.2 Front, view from left, part 2	907-908
1.3 Front, view from right	909-913
1.3.1 Front, view from right, part 1	909
1.3.2 Front, view from right, part 2, models with engine code EASA, EASB	910-911
1.3.3 Front, view from right, part 2, models with engine code EAVA	912-913
1.4 Front axle electric drive	914
805 - - Fitting locations: middle part of vehicle - 1	915-1007
1. Fitting locations: middle part of vehicle	915-1007
1.1 At front of interior	953-983
1.1.1 Front left of interior, LHD models	954
1.1.2 Front left of interior, RHD models	954
1.1.3 Left footwell, LHD models	955
1.1.4 Left footwell, right-hand drive models	956
1.1.5 Front right of interior, LHD models	957-958
1.1.6 Front right of interior, RHD models	959
1.1.7 Right footwell, left-hand drive models	959
1.1.8 Right footwell, RHD models	960
1.1.9 Dash panel, LHD models	961
1.1.10 Dash panel, RHD models	962
1.1.11 Steering wheel, 3-spoke steering wheel	963
1.1.12 Steering wheel, 4-spoke steering wheel	964
1.1.13 Steering column	965

1.1.14 Front centre console	966-967
1.1.15 Front left seat, normal seat, sports seat, super sports seat, Q1A, Q1D, Q4Q, LHD models	968-969
1.1.16 Front left seat, normal seat, sports seat, super sports seat, Q1A, Q1D, Q4Q, RHD models	970-971
1.1.17 Front left seat, comfort seat, Q2J, LHD models	972-973
1.1.18 Front left seat, comfort seat, Q2J, RHD models	974-975
1.1.19 Front right seat, normal seat, sports seat, super sports seat, Q1A, Q1D, Q4Q, LHD models	976-977
1.1.20 Front right seat, normal seat, sports seat, super sports seat, Q1A, Q1D, Q4Q, RHD models	978-979
1.1.21 Front right seat, comfort seat, Q2J, LHD models	980-981
1.1.22 Front right seat, comfort seat, Q2J, RHD models	982-983
1.2 Rear interior	984-986
1.2.1 Rear interior, view from left	984
1.2.2 Rear interior, view from right	985
1.2.3 Rear seats	986
1.3 Roof	987-989
1.3.1 Roof, part 1	987-988
1.3.2 Roof, part 2	989
1.4 Doors	990-1000
1.4.1 Driver door, left-hand drive models	991-992
1.4.2 Driver door, right-hand drive models	993-994
1.4.3 Front passenger door, left-hand drive models	995
1.4.4 Front passenger door, right-hand drive models	996
1.4.5 Rear left door, LHD models	997
1.4.6 Rear left door, RHD models	998
1.4.7 Rear right door, LHD models	999
1.4.8 Rear right door, RHD models	1000
1.5 Heater and air conditioning unit	1001-1005
1.5.1 Front heater and air conditioner unit, 9AK, part 1	1002
1.5.2 Front heater and air conditioner unit, 9AK, part 2	1002
1.5.3 Front heater and air conditioner unit, 9AQ, part 1	1003
1.5.4 Front heater and air conditioner unit, 9AQ, part 2	1004-1005
1.6 Connector assignments	1006-1007
1.6.1 Connector assignment for onboard supply control unit -J519-	1006-1007
806 - - Fitting locations: rear part of vehicle - 1	1008-1020
1. Fitting locations: rear part of vehicle	1008-1020
1.1 Rear lid	1013-1014
1.1.1 Rear lid, e-tron, Q8 e-tron	1013
1.1.2 Rear lid, e-tron Sportback, Q8 e-tron Sportback	1014
1.2 Rear bumper	1015
1.3 Rear side, view from left	1016-1017
1.3.1 Rear side, view from left, e-tron, Q8 e-tron	1017
1.3.2 Rear side, view from left, e-tron Sportback, Q8 e-tron Sportback	1017
1.4 Rear side, view from right	1018-1020
1.4.1 Rear side, view from right, e-tron, Q8 e-tron	1019
1.4.2 Rear side, view from right, e-tron Sportback, Q8 e-tron Sportback	1019-1020
807 - -Fitting locations: Vehicle underbody - 1	1021-1038
1. Fitting locations: Vehicle underbody	1021-1038
1.1 Front of underbody	1028
1.2 Rear underbody	1029-1030
1.2.1 Rear of underbody, models with engine code EASA, EASB	1030
1.2.2 Rear of underbody, models with engine code EAVA	1030
1.3 Attachment parts of high-voltage battery 1 -AX2-	1031
1.4 Battery modules of high-voltage battery 1 -AX2-	1032-1035
1.4.1 Battery modules of high-voltage battery 1 -AX2-, high-voltage batteries with 1 level	1033
1.4.2 Battery modules of high-voltage battery 1 -AX2-, high-voltage batteries with 2 levels	1034-1035
1.5 Control units for battery modules of high-voltage battery 1 -AX2-	1036-1038
1.5.1 Control units for battery modules of high-voltage battery 1 -AX2-, high-voltage batteries with 1 level	1036
1.5.2 Control units for battery modules of high-voltage battery 1 -AX2-, high-voltage batteries with 2 levels	1037-1038
830 - -Connector views: parts with prefix A to D - 1	1039-1058
1. -Connector views: parts with prefix A to D	1039-1058
1.1 Voltage converter -A19-	1039
1.1.1 5-pin connector -T5ak-	1039
1.1.2 8-pin connector -T8f-	1040
1.2 Charging unit for contactless high-voltage battery charging -A52-	1040
1.2.1 5-pin connector -T5an-	1040

1.3 High-voltage battery 1 -AX2-	1041-1052
1.3.1 1-pin connector -T1gf-	1042
1.3.2 4-pin connector -T4em-	1042
1.3.3 4-pin connector -T4en-	1043
1.3.4 4-pin connector -T4eo-	1044
1.3.5 4-pin connector -T4ev-	1044
1.3.6 4-pin connector -T4ew-	1045
1.3.7 4-pin connector -T4ex-	1046
1.3.8 5-pin connector -T5az-	1046
1.3.9 5-pin connector -T5ba-	1047
1.3.10 5-pin connector -T5bi-	1048
1.3.11 5-pin connector -T5cg-	1048
1.3.12 6-pin connector -T6ap-	1049
1.3.13 6-pin connector -T6aq-	1050
1.3.14 6-pin connector -T6at-	1050
1.3.15 6-pin connector -T6bm-	1051
1.3.16 6-pin connector -T6cq-	1052
1.3.17 14-pin connector -T14t-	1052
1.4 Charging unit 1 for high-voltage battery -AX4-	1053-1054
1.4.1 5-pin connector -T5bh-	1053
1.4.2 8-pin connector -T8x-	1054
1.4.3 60-pin connector -T60a-	1055
1.5 Charging unit 2 for high-voltage battery -AX5-	1055-1058
1.5.1 5-pin connector -T5bj-	1056
1.5.2 8-pin connector -T8y-	1056
1.5.3 60-pin connector -T60b-	1057-1058
831 - -Connector views: parts with prefix E - 1	1059-1098
1. -Connector views: parts with prefix E	1059-1098
1.1 Light switch -E1-	1060
1.1.1 4-pin connector -T4u-	1060
1.2 Driver side belt switch -E24-	1061
1.2.1 2-pin connector -T2nn-	1061
1.2.2 5-pin connector -T5ce-	1061
1.3 Front passenger side belt switch -E25-	1062-1063
1.3.1 2-pin connector -T2ml-	1062
1.3.2 5-pin connector -T5cc-	1063
1.4 Glove compartment light switch -E26-	1064
1.4.1 3-pin connector -T3f-	1064
1.5 Driver side volume regulator -E67-	1064
1.5.1 6-pin connector -T6g-	1064
1.6 Steering column adjustment switch -E167-	1065
1.6.1 4-pin connector -T4x-	1065
1.7 Driver seat lumbar support adjustment switch -E176-	1066
1.7.1 6-pin connector -T6d-	1066
1.8 Front passenger seat lumbar support adjustment switch -E177-	1067
1.8.1 6-pin connector -T6ba-	1067
1.9 Key operated switch to deactivate front passenger side airbag -E224-	1068
1.9.1 6-pin connector -T6e-	1068
1.10 Rear lid remote release button -E233-	1069
1.10.1 4-pin connector -T4ab-	1069
1.11 Rear lid handle release button -E234-	1070
1.11.1 2-pin connector -T2z-	1070
1.12 Operating and display unit for rear air conditioning system -E265-	1071-1072
1.12.1 6-pin connector -T6ah-	1071
1.12.2 12-pin connector -T12f-	1072
1.13 Driver side interior locking button for central locking system -E308-	1073
1.13.1 4-pin connector -T4ho-	1073
1.14 Front passenger side interior locking button for central locking system -E309-	1073
1.14.1 4-pin connector -T4aa-	1073
1.15 Selector lever -E313-	1074
1.15.1 10-pin connector -T10s-	1074
1.16 Sunroof button -E325-	1075
1.16.1 10-pin connector -T10bd-	1075
1.17 Entry and start authorisation button -E408-	1076
1.17.1 6-pin connector -T6f-	1076
1.18 Driver side operating unit for memory settings -E464-	1077

1.18.1 5-pin connector -T5cf-	1077
1.19 Front passenger side operating unit for memory settings -E465-	1078
1.19.1 5-pin connector -T5j-	1078
1.20 Driver seat adjustment operating unit -E470-	1079-1080
1.20.1 6-pin connector -T6bz-	1079
1.20.2 10-pin connector -T10bs-	1080
1.20.3 12-pin connector -T12g-	1081
1.21 Front passenger seat adjustment operating unit -E471-	1081-1083
1.21.1 6-pin connector -T6ai-	1082
1.21.2 10-pin connector -T10bu-	1082
1.21.3 12-pin connector -T12bc-	1083
1.22 Button for deactivating interior monitoring and vehicle inclination sensor -E616-	1084
1.22.1 10-pin connector -T10j-	1084
1.23 Switch module for driver seat -E663-	1084
1.23.1 4-pin connector -T4hh-	1084
1.24 Switch module for front passenger seat -E664-	1085
1.24.1 4-pin connector -T4gv-	1085
1.25 Rear driver side interior locking button for central locking system -E717-	1086
1.25.1 4-pin connector -T4kg-	1086
1.26 Rear passenger side interior locking button for central locking system -E718-	1087
1.26.1 4-pin connector -T4gm-	1087
1.27 Interior mirror -EX5-	1088
1.27.1 8-pin connector -T8w-	1088
1.28 Exterior mirror adjuster -EX11-	1089
1.28.1 4-pin connector -T4hn-	1089
1.29 Parking brake button -EX12-	1090
1.29.1 10-pin connector -T10i-	1090
1.30 Centre switch module in dash panel -EX22-	1091
1.30.1 5-pin connector -T5m-	1091
1.31 Switch module 1 in centre console -EX23-	1092
1.31.1 5-pin connector -T5o-	1092
1.32 Window regulator switch in front passenger door -EX27-	1093
1.32.1 4-pin connector -T4v-	1093
1.33 Operating unit for driver door window regulator -EX36-	1094
1.33.1 10-pin connector -T10bt-	1094
1.34 Operating unit for rear lid control -EX58-	1095-1096
1.34.1 4-pin connector -T4ht-	1095
1.34.2 4-pin connector -T4hu-	1096
1.35 Operating unit in rear door, front passenger side -EX60-	1097
1.35.1 4-pin connector -T4gn-	1097
1.36 Operating unit in rear driver side door -EX61-	1097-1098
1.36.1 4-pin connector -T4hs-	1097-1098
832 - -Connector views: parts with prefix F - 1	1099-1106
1. -Connector views: parts with prefix F	1099-1106
1.1 Driver side vanity mirror contact switch -F147-	1099
1.1.1 2-pin connector -T2x-	1099
1.2 Front passenger side vanity mirror contact switch -F148-	1100
1.2.1 2-pin connector -T2y-	1100
1.3 Bonnet contact switch -F266-	1100
1.3.1 2-pin connector -T2ab-	1100
1.4 Bonnet contact switch 2 -F329-	1101
1.4.1 2-pin connector -T2ac-	1101
1.5 Actuator for high-voltage charging flap lock 1 -F496-	1102
1.5.1 4-pin connector -T4im-	1102
1.6 Actuator for high-voltage charging flap lock 2 -F497-	1103
1.6.1 4-pin connector -T4io-	1103
1.7 Twin belt buckle -FX4-	1104
1.7.1 10-pin connector -T10o-	1104
1.8 Passenger side belt buckle, seat row 2 -FX6-	1105-1106
1.8.1 10-pin connector -T10n-	1105-1106
833 - -Connector views: parts with prefix G - 1	1107-1183
1. -Connector views: parts with prefix G	1107-1183
1.1 Ambient temperature sensor -G17-	1109
1.1.1 2-pin connector -T2ag-	1109
1.2 Coolant shortage indicator sender -G32-	1110
1.2.1 2-pin connector -T2ap-	1110

1.3 Windscreen washer fluid level sender -G33-	1111
1.3.1 2-pin connector -T2aq-	1111
1.4 Front left brake pad wear sender -G34-	1112
1.4.1 2-pin connector -T2ar-	1112
1.5 Front right brake pad wear sender -G35-	1113
1.5.1 2-pin connector -T2as-	1113
1.6 Rear right brake pad wear sender -G37-	1114
1.6.1 2-pin connector -T2au-	1114
1.7 Rear right speed sensor -G44-	1115
1.7.1 2-pin connector -T2ax-	1115
1.8 Front right speed sensor -G45-	1116
1.8.1 2-pin connector -T2ay-	1116
1.9 Rear left speed sensor -G46-	1117
1.9.1 2-pin connector -T2az-	1117
1.10 Front left speed sensor -G47-	1118
1.10.1 2-pin connector -T2ba-	1118
1.11 Dash panel temperature sensor -G56-	1119
1.11.1 4-pin connector -T4as-	1119
1.12 Rear left vehicle level sender -G76-	1120
1.12.1 3-pin connector -T3v-	1120
1.13 Rear right vehicle inclination sender -G77-	1121
1.13.1 3-pin connector -T3w-	1121
1.14 Front left vehicle level sender -G78-	1122
1.14.1 3-pin connector -T3x-	1122
1.15 Seat occupied sensor, front passenger side -G128-	1123
1.15.1 2-pin connector -T2mm-	1123
1.16 Rear seat occupied sensor, driver side -G177-	1124
1.16.1 2-pin connector -T2mu-	1124
1.17 Rear seat occupied sensor, passenger side -G178-	1125
1.17.1 2-pin connector -T2mt-	1125
1.18 Side airbag crash sensor on driver side -G179-	1126
1.18.1 2-pin connector -T2ai-	1126
1.19 Side airbag crash sensor on front passenger side -G180-	1127
1.19.1 2-pin connector -T2aj-	1127
1.20 Rear left parking aid sender -G203-	1128
1.20.1 3-pin connector -T3g-	1128
1.21 Rear centre left parking aid sender -G204-	1129
1.21.1 3-pin connector -T3h-	1129
1.22 Rear centre right parking aid sender -G205-	1130
1.22.1 3-pin connector -T3i-	1130
1.23 Rear right parking aid sender -G206-	1131
1.23.1 3-pin connector -T3j-	1131
1.24 Air quality sensor -G238-	1132
1.24.1 3-pin connector -T3k-	1132
1.25 Front right parking aid sender -G252-	1133
1.25.1 3-pin connector -T3l-	1133
1.26 Front centre right parking aid sender -G253-	1134
1.26.1 3-pin connector -T3m-	1134
1.27 Front centre left parking aid sender -G254-	1135
1.27.1 3-pin connector -T3n-	1135
1.28 Front left parking aid sender -G255-	1136
1.28.1 3-pin connector -T3o-	1136
1.29 Rear side airbag crash sensor on driver side -G256-	1137
1.29.1 2-pin connector -T2ak-	1137
1.30 Rear side airbag crash sensor on front passenger side -G257-	1138
1.30.1 2-pin connector -T2al-	1138
1.31 Left footwell vent temperature sender -G261-	1139
1.31.1 2-pin connector -T2lo-	1139
1.32 Right footwell vent temperature sender -G262-	1140
1.32.1 2-pin connector -T2lp-	1140
1.33 Evaporator output temperature sender -G263-	1141
1.33.1 2-pin connector -T2lq-	1141
1.34 Front airbag crash sensor for driver side -G283-	1142
1.34.1 2-pin connector -T2am-	1142
1.35 Front airbag crash sensor for front passenger side -G284-	1143
1.35.1 2-pin connector -T2an-	1143

1.36 Front right vehicle level sender -G289-	1144
1.36.1 3-pin connector -T3p-	1144
1.37 Front left chest vent temperature sensor -G385-	1145
1.37.1 2-pin connector -T2av-	1145
1.38 Front right chest vent temperature sensor -G386-	1146
1.38.1 2-pin connector -T2aw-	1146
1.39 Refrigerant pressure and temperature sender -G395-	1147
1.39.1 4-pin connector -T4an-	1147
1.40 Rain and light sensor -G397-	1148
1.40.1 3-pin connector -T3q-	1148
1.41 Contact sensor for rear left exterior door handle -G417-	1149
1.41.1 4-pin connector -T4aq-	1149
1.42 Contact sensor for rear right exterior door handle -G418-	1150
1.42.1 4-pin connector -T4fc-	1150
1.43 Toll collection sender -G459-	1151
1.43.1 4-pin connector -T4js-	1151
1.44 Front left sender for park assist steering on left side of vehicle -G568-	1152
1.44.1 3-pin connector -T3r-	1152
1.45 Front right sender for park assist steering on right side of vehicle -G569-	1153
1.45.1 3-pin connector -T3s-	1153
1.46 Crash sensor for rear-end collision -G572-	1154
1.46.1 2-pin connector -T2bd-	1154
1.47 Anti-theft alarm sensor -G578-	1155
1.47.1 4-pin connector -T4at-	1155
1.48 Contact sensor for front left exterior door handle -G605-	1156
1.48.1 4-pin connector -T4ao-	1156
1.49 Contact sensor for front right exterior door handle -G606-	1157
1.49.1 4-pin connector -T4ap-	1157
1.50 Potentiometer in left centre vent -G626-	1158
1.50.1 8-pin connector -T8h-	1158
1.51 Potentiometer in left side vent -G628-	1159
1.51.1 5-pin connector -T5p-	1159
1.52 Potentiometer in right side vent -G629-	1160
1.52.1 5-pin connector -T5q-	1160
1.53 Potentiometer in rear left chest vent -G630-	1161
1.53.1 8-pin connector -T8i-	1161
1.54 Rear left chest vent temperature sender -G635-	1162
1.54.1 2-pin connector -T2be-	1162
1.55 Rear right chest vent temperature sender -G636-	1163
1.55.1 2-pin connector -T2bf-	1163
1.56 Vent temperature sender for rear left footwell -G637-	1164
1.56.1 2-pin connector -T2bg-	1164
1.57 Vent temperature sender for rear right footwell -G638-	1165
1.57.1 2-pin connector -T2bh-	1165
1.58 Rear left park assist steering sender -G716-	1166
1.58.1 3-pin connector -T3t-	1166
1.59 Rear right park assist steering sender -G717-	1167
1.59.1 3-pin connector -T3u-	1167
1.60 Refrigerant pressure and temperature sender 2 -G826-	1168
1.60.1 4-pin connector -T4au-	1168
1.61 Coolant temperature sender 1 for high-voltage battery -G898-	1169
1.61.1 2-pin connector -T2bi-	1169
1.62 Coolant temperature sender 2 for high-voltage battery -G899-	1170
1.62.1 2-pin connector -T2bj-	1170
1.63 Coolant temperature sender 1 for thermal management -G902-	1171
1.63.1 2-pin connector -T2bk-	1171
1.64 Coolant temperature sender 2 for thermal management -G903-	1172
1.64.1 2-pin connector -T2bl-	1172
1.65 Coolant temperature sender 5 for thermal management -G906-	1173
1.65.1 2-pin connector -T2bm-	1173
1.66 Coolant temperature sender 6 for thermal management -G907-	1174
1.66.1 2-pin connector -T2bn-	1174
1.67 Air conditioner sensor for fine particle concentration -G930-	1175
1.67.1 3-pin connector -T3y-	1175
1.68 External air quality and air humidity sensor -G935-	1176
1.68.1 3-pin connector -T3z-	1176

1.69 Coolant temperature sender 8 for thermal management -G968-	1177
1.69.1 2-pin connector -T2bo-	1177
1.70 Rear centre seat occupied sensor -G1010-	1178
1.70.1 2-pin connector -T2mv-	1178
1.71 Seat occupied sensor, driver side -G1067-	1179
1.71.1 2-pin connector -T2af-	1179
1.72 Side airbag crash sensor in B-pillar, driver side -G1101-	1180
1.72.1 2-pin connector -T2ad-	1180
1.73 Side airbag crash sensor in B-pillar, front passenger side -G1102-	1181
1.73.1 2-pin connector -T2ae-	1181
1.74 Accelerator pedal module -GX2-	1182-1183
1.74.1 6-pin connector -T6l-	1182-1183
834 - -Connector views: parts with prefix H to I - 1	1184-1187
1. -Connector views: parts with prefix H to I	1184-1187
1.1 Treble horn -H2-	1184
1.1.1 2-pin connector -T2bq-	1184
1.2 Bass horn -H7-	1185
1.2.1 2-pin connector -T2bt-	1185
1.3 Alarm horn -H12-	1185
1.3.1 3-pin connector -T3aa-	1185
1.4 Rear lid warning buzzer -H32-	1186-1187
1.4.1 2-pin connector -T2bs-	1186-1187
835 - -Connector views: parts with prefix J - 1	1188-1419
1. -Connector views: parts with prefix J	1188-1419
1.1 ABS control unit -J104-	1192-1193
1.1.1 2-pin connector -T2gr-	1192
1.1.2 2-pin connector -T2ho-	1193
1.1.3 46-pin connector -T46a-	1194
1.2 Fresh air blower control unit -J126-	1194
1.2.1 4-pin connector -T4ay-	1194
1.3 Seat and steering column adjustment control unit with memory -J136-	1195-1198
1.3.1 4-pin connector -T4eh-	1195
1.3.2 6-pin connector -T6am-	1196
1.3.3 20-pin connector -T20j-	1197
1.3.4 26-pin connector -T26a-	1197
1.3.5 26-pin connector -T26b-	1198
1.4 Airbag control unit -J234-	1199
1.4.1 20-pin connector -T20c-	1199
1.4.2 142-pin connector -T142a-	1199
1.5 Sliding sunroof adjustment control unit -J245-	1200-1201
1.5.1 4-pin connector -T4fa-	1200
1.5.2 5-pin connector -T5v-	1201
1.5.3 16-pin connector -T16f-	1202
1.6 Control unit in dash panel insert -J285-	1202-1205
1.6.1 2-pin connector -T2gv-	1203
1.6.2 4-pin connector -T4ek-	1203
1.6.3 5-pin connector -T5bd-	1204
1.6.4 18-pin connector -T18a-	1205
1.6.5 32-pin connector -T32ji-	1205
1.7 Trailer detector control unit -J345-	1206-1207
1.7.1 6-pin connector -T6aj-	1206
1.7.2 10-pin connector -T10at-	1207
1.7.3 24-pin connector -T24a-	1208
1.8 Battery monitor control unit -J367-	1208
1.8.1 2-pin connector -T2hr-	1208
1.9 Driver door control unit -J386-	1209-1211
1.9.1 6-pin connector -T6o-	1209
1.9.2 16-pin connector -T16i-	1210
1.9.3 20-pin connector -T20f-	1211
1.9.4 32-pin connector -T32ju-	1211
1.10 Front passenger door control unit -J387-	1212-1214
1.10.1 6-pin connector -T6p-	1212
1.10.2 16-pin connector -T16j-	1213
1.10.3 20-pin connector -T20g-	1214
1.10.4 32-pin connector -T32jv-	1214
1.11 Convenience svstem central control unit -J393-	1215-1218

1.11.1 17-pin connector -T17n-	1215
1.11.2 17-pin connector -T17p-	1216
1.11.3 20-pin connector -T20k-	1217
1.11.4 32-pin connector -T32jt-	1217
1.11.5 32-pin connector -T32jw-	1218
1.12 Wiper motor control unit -J400-	1219
1.12.1 4-pin connector -T4az-	1219
1.13 Adaptive cruise control unit -J428-	1219
1.13.1 8-pin connector -T8k-	1219
1.14 Power steering control unit -J500-	1220-1221
1.14.1 2-pin connector -T2bu-	1220
1.14.2 6-pin connector -T6ak-	1221
1.14.3 6-pin connector -T6aw-	1222
1.15 Tyre Pressure Monitoring System control unit -J502-	1222
1.15.1 4-pin connector -T4ba-	1222
1.16 Onboard supply control unit -J519-	1223-1224
1.16.1 54-pin connector -T54h-	1223
1.16.2 73-pin connector -T73a-	1224
1.16.3 73-pin connector -T73b-	1225
1.17 Front passenger seat adjustment with memory control unit -J521-	1225-1228
1.17.1 4-pin connector -T4gu-	1226
1.17.2 6-pin connector -T6bd-	1226
1.17.3 20-pin connector -T20u-	1227
1.17.4 26-pin connector -T26c-	1228
1.17.5 26-pin connector -T26d-	1228
1.18 Digital sound package control unit -J525-	1229-1230
1.18.1 2-pin connector -T2gw-	1229
1.18.2 38-pin connector -T38a-	1230
1.19 Telephone and telematics control unit -J526-	1231-1235
1.19.1 2-pin connector -T2gx-	1231
1.19.2 2-pin connector -T2hs-	1232
1.19.3 2-pin connector -T2nh-	1232
1.19.4 2-pin connector -T2nj-	1233
1.19.5 2-pin connector -T2nm-	1234
1.19.6 10-pin connector -T10r-	1234
1.19.7 12-pin connector -T12ct-	1235
1.20 Steering column electronics control unit -J527-	1236
1.20.1 12-pin connector -T12bd-	1236
1.20.2 17-pin connector -T17o-	1236
1.21 Garage door operation control unit -J530-	1237
1.21.1 5-pin connector -T5w-	1237
1.22 Data bus diagnostic interface -J533-	1238-1239
1.22.1 54-pin connector -T54a-	1238
1.22.2 54-pin connector -T54g-	1239
1.23 Rear lid control unit -J605-	1240
1.23.1 10-pin connector -T10t-	1240
1.23.2 32-pin connector -T32jr-	1240
1.24 Engine control unit -J623-	1241-1242
1.24.1 4-pin connector -T4ei-	1241
1.24.2 32-pin connector -T32jj-	1242
1.24.3 32-pin connector -T32js-	1243
1.25 Chip card reader control unit -J676-	1243-1245
1.25.1 2-pin connector -T2ht-	1244
1.25.2 5-pin connector -T5ao-	1244
1.25.3 10-pin connector -T10u-	1245
1.26 Display unit for front information display and operating unit control unit -J685-	1246
1.26.1 9-pin connector -T9h-	1246
1.26.2 9-pin connector -T9o-	1246
1.27 Seat occupied recognition control unit -J706-	1247-1248
1.27.1 3-pin connector -T3ba-	1247
1.27.2 10-pin connector -T10bn-	1248
1.28 Control unit for electronic steering column lock -J764-	1249
1.28.1 4-pin connector -T4bb-	1249
1.29 Lane change assist control unit -J769-	1249
1.29.1 14-pin connector -T14u-	1249
1.30 Lane change assist control unit 2 -J770-	1250

1.30.1 14-pin connector -T14v-	1250
1.31 Reversing camera system control unit -J772-	1251-1252
1.31.1 2-pin connector -T2gy-	1251
1.31.2 8-pin connector -T8m-	1252
1.32 Running gear control unit -J775-	1253
1.32.1 81-pin connector -T81b-	1253
1.33 Control unit 1 for information electronics -J794-	1253-1271
1.33.1 2-pin connector -T2ik-	1254
1.33.2 2-pin connector -T2il-	1255
1.33.3 2-pin connector -T2im-	1256
1.33.4 2-pin connector -T2in-	1257
1.33.5 2-pin connector -T2io-	1257
1.33.6 2-pin connector -T2ip-	1258
1.33.7 2-pin connector -T2og-	1259
1.33.8 2-pin connector -T2ok-	1259
1.33.9 4-pin connector -T4ey-	1260
1.33.10 4-pin connector -T4ez-	1261
1.33.11 4-pin connector -T4hv-	1261
1.33.12 5-pin connector -T5bm-	1262
1.33.13 5-pin connector -T5bn-	1263
1.33.14 5-pin connector -T5bo-	1263
1.33.15 5-pin connector -T5bp-	1264
1.33.16 5-pin connector -T5bq-	1265
1.33.17 5-pin connector -T5ch-	1265
1.33.18 5-pin connector -T5ct-	1266
1.33.19 5-pin connector -T5cu-	1267
1.33.20 8-pin connector -T8ab-	1267
1.33.21 8-pin connector -T8ba-	1268
1.33.22 8-pin connector -T8g-	1269
1.33.23 8-pin connector -T8n-	1269
1.33.24 12-pin connector -T12ax-	1270
1.33.25 12-pin connector -T12ay-	1271
1.33.26 12-pin connector -T12az-	1271
1.34 Battery regulation control unit -J840-	1272
1.34.1 28-pin connector -T28a-	1272
1.35 Control unit for air conditioner compressor -J842-	1273-1274
1.35.1 5-pin connector -T5c-	1273
1.35.2 5-pin connector -T5dk-	1274
1.35.3 8-pin connector -T8o-	1275
1.36 High-voltage heater (PTC) control unit -J848-	1275-1276
1.36.1 5-pin connector -T5ar-	1275
1.36.2 8-pin connector -T8p-	1276
1.37 Control unit for night vision system -J853-	1277-1278
1.37.1 5-pin connector -T5as-	1277
1.37.2 12-pin connector -T12ai-	1278
1.38 Control unit for electrically adjustable steering column -J866-	1279
1.38.1 6-pin connector -T6s-	1279
1.39 Ioniser control unit -J897-	1279-1281
1.39.1 4-pin connector -T4bc-	1280
1.39.2 4-pin connector -T4fz-	1280
1.39.3 4-pin connector -T4ga-	1281
1.40 Control unit for heads-up display -J898-	1282
1.40.1 2-pin connector -T2gz-	1282
1.40.2 10-pin connector -T10v-	1282
1.41 Rear driver side door control unit -J926-	1283-1285
1.41.1 6-pin connector -T6ay-	1283
1.41.2 6-pin connector -T6az-	1284
1.41.3 16-pin connector -T16l-	1285
1.41.4 20-pin connector -T20h-	1285
1.42 Rear passenger side door control unit -J927-	1286-1288
1.42.1 6-pin connector -T6an-	1286
1.42.2 6-pin connector -T6q-	1287
1.42.3 16-pin connector -T16e-	1288
1.42.4 20-pin connector -T20t-	1288
1.43 Rear lid power opening control unit -J938-	1289-1290
1.43.1 4-pin connector -T4bd-	1289

1.43.2 4-pin connector -T4fb-	1290
1.44 Engine sound generator control unit -J943-	1291
1.44.1 12-pin connector -T12aj-	1291
1.44.2 16-pin connector -T16b-	1291
1.45 Emergency call module control unit and communication unit -J949-	1292-1296
1.45.1 2-pin connector -T2ih-	1292
1.45.2 8-pin connector -T8ae-	1293
1.45.3 8-pin connector -T8ax-	1294
1.45.4 8-pin connector -T8ay-	1295
1.45.5 8-pin connector -T8az-	1295
1.45.6 20-pin connector -T20d-	1296
1.45.7 20-pin connector -T20i-	1297
1.46 Battery module 1 -J991-	1297-1299
1.46.1 12-pin connector -T12ak-	1298
1.46.2 12-pin connector -T12cu-	1298
1.46.3 12-pin connector -T12cv-	1299
1.47 Battery module 2 -J992-	1300-1301
1.47.1 12-pin connector -T12al-	1300
1.47.2 12-pin connector -T12cw-	1301
1.47.3 12-pin connector -T12cx-	1301
1.48 Battery module 3 -J993-	1302-1303
1.48.1 12-pin connector -T12am-	1302
1.48.2 12-pin connector -T12cy-	1303
1.49 Battery module 4 -J994-	1304
1.49.1 12-pin connector -T12an-	1304
1.49.2 12-pin connector -T12cz-	1304
1.50 Battery module 5 -J995-	1305-1306
1.50.1 12-pin connector -T12ao-	1305
1.50.2 12-pin connector -T12da-	1306
1.50.3 12-pin connector -T12db-	1307
1.51 Battery module 6 -J996-	1307-1309
1.51.1 12-pin connector -T12ap-	1308
1.51.2 12-pin connector -T12dc-	1308
1.51.3 12-pin connector -T12dd-	1309
1.52 Battery module 7 -J997-	1310
1.52.1 12-pin connector -T12aq-	1310
1.52.2 12-pin connector -T12de-	1310
1.53 Battery module 8 -J998-	1311-1312
1.53.1 12-pin connector -T12ar-	1311
1.53.2 12-pin connector -T12df-	1312
1.54 Battery module 9 -J999-	1313
1.54.1 12-pin connector -T12as-	1313
1.54.2 12-pin connector -T12dg-	1313
1.55 Battery module 10 -J1000-	1314-1315
1.55.1 12-pin connector -T12bi-	1314
1.55.2 12-pin connector -T12h-	1315
1.56 Battery module 11 -J1001-	1316
1.56.1 12-pin connector -T12bj-	1316
1.56.2 12-pin connector -T12i-	1316
1.57 Battery module 12 -J1002-	1317-1318
1.57.1 12-pin connector -T12bk-	1317
1.57.2 12-pin connector -T12j-	1318
1.58 Thermal management control unit -J1024-	1319
1.58.1 40-pin connector -T40a-	1319
1.59 Digital exterior mirror control unit 1 -J1030-	1319-1321
1.59.1 2-pin connector -T2lh-	1320
1.59.2 4-pin connector -T4aw-	1320
1.59.3 4-pin connector -T4fp-	1321
1.60 Digital exterior mirror control unit 2 -J1031-	1322-1323
1.60.1 2-pin connector -T2la-	1322
1.60.2 4-pin connector -T4av-	1323
1.60.3 4-pin connector -T4fo-	1323
1.61 Battery module 13 -J1045-	1324-1325
1.61.1 12-pin connector -T12bl-	1324
1.61.2 12-pin connector -T12bm-	1325
1.61.3 12-pin connector -T12k-	1326

1.62 Battery module 14 -J1046-	1326-1328
1.62.1 12-pin connector -T12bn-	1327
1.62.2 12-pin connector -T12bo-	1327
1.62.3 12-pin connector -T12l-	1328
1.63 Battery module 15 -J1047-	1329-1330
1.63.1 12-pin connector -T12bp-	1329
1.63.2 12-pin connector -T12bq-	1330
1.63.3 12-pin connector -T12m-	1330
1.64 Battery module 16 -J1048-	1331-1332
1.64.1 12-pin connector -T12br-	1331
1.64.2 12-pin connector -T12n-	1332
1.65 Battery module 17 -J1049-	1333
1.65.1 12-pin connector -T12bs-	1333
1.65.2 12-pin connector -T12o-	1333
1.66 Display unit 2 for front information display and operating unit control unit -J1060-	1334
1.66.1 9-pin connector -T9d-	1334
1.67 Battery module 18 -J1077-	1335-1336
1.67.1 12-pin connector -T12bt-	1335
1.67.2 12-pin connector -T12bu-	1336
1.67.3 12-pin connector -T12p-	1337
1.68 Battery module 19 -J1078-	1337-1338
1.68.1 12-pin connector -T12bv-	1337
1.68.2 12-pin connector -T12q-	1338
1.69 Battery module 20 -J1079-	1339-1340
1.69.1 12-pin connector -T12bw-	1339
1.69.2 12-pin connector -T12bx-	1340
1.69.3 12-pin connector -T12r-	1341
1.70 Battery module 21 -J1080-	1341-1343
1.70.1 12-pin connector -T12by-	1342
1.70.2 12-pin connector -T12bz-	1342
1.70.3 12-pin connector -T12s-	1343
1.71 Battery module 22 -J1081-	1344-1345
1.71.1 12-pin connector -T12ca-	1344
1.71.2 12-pin connector -T12cb-	1345
1.71.3 12-pin connector -T12t-	1345
1.72 Battery module 23 -J1082-	1346-1347
1.72.1 12-pin connector -T12cc-	1346
1.72.2 12-pin connector -T12cd-	1347
1.72.3 12-pin connector -T12u-	1348
1.73 Battery module 24 -J1083-	1348-1350
1.73.1 12-pin connector -T12ce-	1349
1.73.2 12-pin connector -T12cf-	1349
1.73.3 12-pin connector -T12v-	1350
1.74 Battery module 25 -J1084-	1351
1.74.1 12-pin connector -T12cg-	1351
1.74.2 12-pin connector -T12w-	1351
1.75 Battery module 26 -J1085-	1352-1353
1.75.1 12-pin connector -T12ch-	1352
1.75.2 12-pin connector -T12x-	1353
1.76 Front left radar sensor control unit for object detection -J1088-	1354
1.76.1 10-pin connector -T10p-	1354
1.77 Front right radar sensor control unit for object detection -J1089-	1354
1.77.1 10-pin connector -T10q-	1354
1.78 Control unit for rear left belt tensioner -J1097-	1355-1356
1.78.1 2-pin connector -T2df-	1355
1.78.2 5-pin connector -T5av-	1356
1.79 Control unit for rear right belt tensioner -J1098-	1357
1.79.1 2-pin connector -T2dg-	1357
1.79.2 5-pin connector -T5aw-	1357
1.80 Windscreen washer pump control unit -J1100-	1358
1.80.1 6-pin connector -T6m-	1358
1.81 Control unit for fragrance diffuser system -J1101-	1359-1360
1.81.1 5-pin connector -T5bt-	1359
1.81.2 5-pin connector -T5r-	1360
1.82 Driver assist systems control unit -J1121-	1361-1366
1.82.1 2-pin connector -T2as-	1361

1.82.2 2-pin connector -T2hp-	1362
1.82.3 2-pin connector -T2ie-	1362
1.82.4 2-pin connector -T2ig-	1363
1.82.5 2-pin connector -T2ii-	1364
1.82.6 2-pin connector -T2ij-	1364
1.82.7 5-pin connector -T5bl-	1365
1.82.8 40-pin connector -T40b-	1366
1.82.9 81-pin connector -T81a-	1366
1.83 Control unit for laser distance control -J1122-	1367
1.83.1 8-pin connector -T8j-	1367
1.84 Battery module 27 -J1130-	1368-1369
1.84.1 12-pin connector -T12ci-	1368
1.84.2 12-pin connector -T12cj-	1369
1.84.3 12-pin connector -T12y-	1370
1.85 Adaptive suspension compressor electronics -J1135-	1370-1371
1.85.1 2-pin connector -T2fx-	1370
1.85.2 2-pin connector -T2ia-	1371
1.86 Charger 1 for mobile devices -J1146-	1372-1373
1.86.1 2-pin connector -T2gt-	1372
1.86.2 2-pin connector -T2hq-	1373
1.86.3 6-pin connector -T6n-	1374
1.87 Near field communication control unit -J1169-	1374
1.87.1 4-pin connector -T4ax-	1374
1.88 Near field communication control unit 2 -J1170-	1375-1376
1.88.1 2-pin connector -T2gu-	1375
1.88.2 5-pin connector -T5u-	1376
1.89 Battery module 28 -J1199-	1377
1.89.1 12-pin connector -T12ck-	1377
1.89.2 12-pin connector -T12z-	1377
1.90 Battery module 29 -J1200-	1378-1379
1.90.1 12-pin connector -T12aa-	1378
1.90.2 12-pin connector -T12cl-	1379
1.91 Battery module 30 -J1201-	1380
1.91.1 12-pin connector -T12ab-	1380
1.91.2 12-pin connector -T12cm-	1380
1.92 Battery module 31 -J1202-	1381-1382
1.92.1 12-pin connector -T12ac-	1381
1.92.2 12-pin connector -T12cn-	1382
1.93 Battery module 32 -J1203-	1383
1.93.1 12-pin connector -T12ad-	1383
1.93.2 12-pin connector -T12co-	1383
1.94 Battery module 33 -J1204-	1384-1385
1.94.1 12-pin connector -T12ae-	1384
1.94.2 12-pin connector -T12cp-	1385
1.95 Battery module 34 -J1205-	1386
1.95.1 12-pin connector -T12af-	1386
1.95.2 12-pin connector -T12cq-	1386
1.96 Battery module 35 -J1206-	1387-1388
1.96.1 12-pin connector -T12ag-	1387
1.96.2 12-pin connector -T12cr-	1388
1.97 Battery module 36 -J1207-	1389
1.97.1 12-pin connector -T12ah-	1389
1.97.2 12-pin connector -T12cs-	1389
1.98 Control unit for battery modules -J1208-	1390-1391
1.98.1 10-pin connector -T10ag-	1390
1.98.2 32-pin connector -T32iw-	1391
1.99 Control unit 2 for battery modules -J1209-	1392
1.99.1 10-pin connector -T10ah-	1392
1.99.2 32-pin connector -T32ix-	1392
1.100 Control unit 3 for battery modules -J1210-	1393-1394
1.100.1 10-pin connector -T10ai-	1393
1.100.2 32-pin connector -T32iy-	1394
1.101 Control unit 4 for battery modules -J1211-	1395
1.101.1 10-pin connector -T10aj-	1395
1.101.2 32-pin connector -T32iz-	1395
1.102 Control unit 5 for battery modules -J1212-	1396-1397

1.102.1 10-pin connector -T10ak-	1396
1.102.2 32-pin connector -T32ja-	1397
1.103 Control unit 6 for battery modules -J1213-	1398
1.103.1 10-pin connector -T10al-	1398
1.103.2 32-pin connector -T32jb-	1398
1.104 Control unit 7 for battery modules -J1214-	1399-1400
1.104.1 10-pin connector -T10am-	1399
1.104.2 32-pin connector -T32jc-	1400
1.105 Control unit 8 for battery modules -J1215-	1401
1.105.1 10-pin connector -T10an-	1401
1.105.2 32-pin connector -T32jd-	1401
1.106 Control unit 9 for battery modules -J1216-	1402-1403
1.106.1 10-pin connector -T10ao-	1402
1.106.2 32-pin connector -T32je-	1403
1.107 Control unit 10 for battery modules -J1217-	1404
1.107.1 10-pin connector -T10ap-	1404
1.107.2 32-pin connector -T32jf-	1404
1.108 Control unit 11 for battery modules -J1218-	1405-1406
1.108.1 10-pin connector -T10aq-	1405
1.108.2 32-pin connector -T32jg-	1406
1.109 Control unit 12 for battery modules -J1219-	1407
1.109.1 10-pin connector -T10ar-	1407
1.109.2 32-pin connector -T32jh-	1407
1.110 Interface control unit for vehicle tracking -J1221-	1408
1.110.1 20-pin connector -T20e-	1408
1.111 Control unit for projection modules in matrix headlight -J1231-	1409-1410
1.111.1 4-pin connector -T4dw-	1409
1.111.2 8-pin connector -T8bh-	1410
1.112 Control unit for front axle electric drive -J1234-	1411-1412
1.112.1 4-pin connector -T4ed-	1411
1.112.2 4-pin connector -T4ee-	1412
1.112.3 28-pin connector -T28d-	1412
1.113 Control unit for rear axle electric drive -J1235-	1413-1414
1.113.1 4-pin connector -T4ae-	1413
1.113.2 4-pin connector -T4ea-	1414
1.113.3 28-pin connector -T28b-	1415
1.114 Control unit for rear axle electric drive 2 -J1236-	1415-1416
1.114.1 4-pin connector -T4af-	1415
1.114.2 28-pin connector -T28g-	1416
1.115 High voltage heater 2 (PTC) control unit -J1238-	1417-1418
1.115.1 5-pin connector -T5ap-	1417
1.115.2 8-pin connector -T8l-	1418
1.116 Android operating system control unit -J1243-	1419
1.116.1 9-pin connector -T9c-	1419
836 - -Connector views: parts with prefix K to M - 1	1420-1469
1. -Connector views: parts with prefix K to M	1420-1469
1.1 Central locking SAFELock function warning lamp -K133-	1421
1.1.1 2-pin connector -T2bv-	1421
1.2 Rear left fog light bulb -L46-	1422
1.2.1 2-pin connector -T2ch-	1422
1.3 Rear right fog light bulb -L47-	1423
1.3.1 2-pin connector -T2ci-	1423
1.4 Central rear vent illumination bulb -L87-	1424
1.4.1 5-pin connector -T5x-	1424
1.5 Rear left vent illumination bulb -L88-	1425
1.5.1 2-pin connector -T2cj-	1425
1.6 Rear right vent illumination bulb -L89-	1426
1.6.1 2-pin connector -T2ck-	1426
1.7 Front left footwell illumination bulb -L151-	1427
1.7.1 2-pin connector -T2bz-	1427
1.8 Front right footwell illumination bulb -L152-	1428
1.8.1 2-pin connector -T2ca-	1428
1.9 Switch illumination bulb -L156-	1429-1430
1.9.1 2-pin connector -T2on-	1429
1.9.2 2-pin connector -T2oq-	1430
1.10 Light 1 for front centre console ambient lightina -L193-	1431

1.10.1 4-pin connector -T4bg-	1431
1.11 Light 2 for front centre console ambient lighting -L194-	1431
1.11.1 4-pin connector -T4bh-	1431
1.12 Light 1 for rear left door ambient lighting -L201-	1432
1.12.1 4-pin connector -T4bi-	1432
1.13 Light 1 for rear right door ambient lighting -L202-	1433
1.13.1 4-pin connector -T4go-	1433
1.14 Light for driver side interior door handle illumination -L219-	1434
1.14.1 2-pin connector -T2cc-	1434
1.15 Light for front passenger side interior door handle illumination -L220-	1435
1.15.1 2-pin connector -T2cd-	1435
1.16 Light for rear driver side interior door handle illumination -L221-	1436
1.16.1 2-pin connector -T2by-	1436
1.17 Light for rear passenger side interior door handle illumination -L222-	1437
1.17.1 2-pin connector -T2lu-	1437
1.18 Light 1 for dash panel contour lighting -L243-	1438
1.18.1 4-pin connector -T4bp-	1438
1.19 Light 2 for dash panel contour lighting -L244-	1439
1.19.1 4-pin connector -T4bo-	1439
1.20 Light 3 for dash panel contour lighting -L245-	1440
1.20.1 4-pin connector -T4bn-	1440
1.21 Light for front passenger side door contour lighting -L248-	1441
1.21.1 4-pin connector -T4br-	1441
1.22 Light for front left door contour lighting -L251-	1442
1.22.1 4-pin connector -T4bq-	1442
1.23 Light for front right door contour lighting -L252-	1443
1.23.1 4-pin connector -T4dv-	1443
1.24 Light for rear left door contour lighting -L253-	1444
1.24.1 4-pin connector -T4bs-	1444
1.25 Light for rear right door contour lighting -L254-	1445
1.25.1 4-pin connector -T4gq-	1445
1.26 Light for left door storage compartment illumination -L255-	1446
1.26.1 4-pin connector -T4be-	1446
1.27 Light for right door storage compartment illumination -L256-	1447
1.27.1 4-pin connector -T4hf-	1447
1.28 LED module for charging socket 1 -L263-	1448
1.28.1 4-pin connector -T4in-	1448
1.29 LED module for charging socket 2 -L264-	1449
1.29.1 4-pin connector -T4ip-	1449
1.30 Light for exterior door handle illumination, driver side -L283-	1450
1.30.1 2-pin connector -T2ce-	1450
1.31 Light for exterior door handle illumination, front passenger side -L284-	1451
1.31.1 2-pin connector -T2cf-	1451
1.32 Light for rear driver side exterior door handle illumination -L285-	1452
1.32.1 2-pin connector -T2cb-	1452
1.33 Light for rear passenger side exterior door handle illumination -L286-	1453
1.33.1 2-pin connector -T2lt-	1453
1.34 Light 1 for dashboard ambient lighting -L292-	1454
1.34.1 4-pin connector -T4bl-	1454
1.35 Light 2 for dashboard ambient lighting -L293-	1455
1.35.1 4-pin connector -T4bj-	1455
1.36 Light 1 for centre console contour lighting -L308-	1456
1.36.1 4-pin connector -T4bt-	1456
1.37 Light 2 for centre console contour lighting -L309-	1457
1.37.1 4-pin connector -T4bu-	1457
1.38 Front luggage compartment light -L325-	1458
1.38.1 2-pin connector -T2cg-	1458
1.39 LED module for daytime running light and side light -L405-	1459
1.39.1 4-pin connector -T4ki-	1459
1.40 High-level brake light bulb -M25-	1460
1.40.1 2-pin connector -T2cl-	1460
1.41 Front left headlight -MX1-	1461-1462
1.41.1 2-pin connector -T2ha-	1461
1.41.2 8-pin connector -T8q-	1462
1.42 Front right headlight -MX2-	1463
1.42.1 2-pin connector -T2hb-	1463

1.42.2 8-pin connector -T8r-	1463
1.43 Left tail light -MX3-	1464-1465
1.43.1 6-pin connector -T6v-	1464
1.43.2 6-pin connector -T6w-	1465
1.44 Right tail light -MX4-	1466
1.44.1 6-pin connector -T6x-	1466
1.44.2 6-pin connector -T6y-	1466
1.45 Centre rear tail light unit -MX13-	1467-1469
1.45.1 6-pin connector -T6t-	1467
1.45.2 6-pin connector -T6u-	1468-1469
837 - -Connector views: parts with prefix N - 1	1470-1512
1. -Connector views: parts with prefix N	1470-1512
1.1 Driver side airbag igniter -N95-	1471
1.1.1 2-pin connector -T2mp-	1471
1.2 Adaptive suspension drain valve -N111-	1472
1.2.1 3-pin connector -T3bb-	1472
1.3 Driver seat belt tensioner igniter 1 -N153-	1472
1.3.1 2-pin connector -T2de-	1472
1.4 Front passenger seat belt tensioner igniter 1 -N154-	1473
1.4.1 2-pin connector -T2dd-	1473
1.5 Side airbag igniter on driver side -N199-	1474
1.5.1 3-pin connector -T3af-	1474
1.6 Side airbag igniter on front passenger side -N200-	1475
1.6.1 3-pin connector -T3bo-	1475
1.7 Rear side airbag igniter on driver side -N201-	1476
1.7.1 2-pin connector -T2dh-	1476
1.8 Rear side airbag igniter on front passenger side -N202-	1477
1.8.1 2-pin connector -T2di-	1477
1.9 Driver side curtain airbag igniter -N251-	1478
1.9.1 2-pin connector -T2dj-	1478
1.10 Front passenger side curtain airbag igniter -N252-	1479
1.10.1 2-pin connector -T2dk-	1479
1.11 Driver side knee airbag igniter -N295-	1480
1.11.1 2-pin connector -T2dl-	1480
1.12 Front passenger side knee airbag igniter -N296-	1481
1.12.1 2-pin connector -T2dm-	1481
1.13 Igniter for driver side seat belt tensioner 2 -N297-	1482
1.13.1 3-pin connector -T3ag-	1482
1.14 Igniter for front passenger side seat belt tensioner 2 -N298-	1483
1.14.1 3-pin connector -T3ah-	1483
1.15 Front left shock absorber damping adjustment valve -N336-	1484
1.15.1 2-pin connector -T2dn-	1484
1.16 Front right shock absorber damping adjustment valve -N337-	1485
1.16.1 2-pin connector -T2do-	1485
1.17 Rear left shock absorber damping adjustment valve -N338-	1486
1.17.1 2-pin connector -T2dp-	1486
1.18 Rear right shock absorber damping adjustment valve -N339-	1487
1.18.1 2-pin connector -T2dq-	1487
1.19 Valve block 1 in driver seat -N475-	1488-1489
1.19.1 4-pin connector -T4gr-	1488
1.19.2 4-pin connector -T4iy-	1489
1.20 Valve block 2 in driver seat -N476-	1490
1.20.1 4-pin connector -T4dn-	1490
1.21 Valve block 1 in front passenger seat -N477-	1490
1.21.1 4-pin connector -T4gz-	1490
1.22 Valve block 2 in front passenger seat -N478-	1491
1.22.1 4-pin connector -T4gy-	1491
1.23 Igniter for exhaust valve for driver airbag -N490-	1492
1.23.1 3-pin connector -T3bt-	1492
1.24 Coolant changeover valve 1 -N632-	1493
1.24.1 5-pin connector -T5aa-	1493
1.25 Coolant changeover valve 2 -N633-	1494
1.25.1 5-pin connector -T5ab-	1494
1.26 Coolant changeover valve 3 -N634-	1495
1.26.1 5-pin connector -T5ad-	1495
1.27 Coolant changeover valve 4 -N635-	1496

1.27.1 5-pin connector -T5ac-	1496
1.28 Expansion valve 2 for coolant -N637-	1497
1.28.1 4-pin connector -T4ch-	1497
1.29 Refrigerant shut-off valve 2 -N640-	1498
1.29.1 4-pin connector -T4ci-	1498
1.30 Refrigerant shut-off valve 3 -N641-	1499
1.30.1 4-pin connector -T4cj-	1499
1.31 Refrigerant shut-off valve 4 -N642-	1500
1.31.1 4-pin connector -T4ck-	1500
1.32 Refrigerant shut-off valve 5 -N643-	1501
1.32.1 4-pin connector -T4cl-	1501
1.33 Igniter 3 for high-voltage battery isolation -N813-	1502
1.33.1 3-pin connector -T3cf-	1502
1.34 Front passenger airbag unit -NX3-	1503-1505
1.34.1 2-pin connector -T2hd-	1503
1.34.2 2-pin connector -T2hf-	1504
1.34.3 3-pin connector -T3ai-	1505
1.34.4 3-pin connector -T3ak-	1505
1.35 Valve block for adaptive suspension -NX7-	1506
1.35.1 10-pin connector -T10y-	1506
1.36 Front left seat belt -NX10-	1507-1508
1.36.1 2-pin connector -T2hw-	1507
1.36.2 2-pin connector -T2hx-	1508
1.36.3 5-pin connector -T5au-	1509
1.37 Front right seat belt -NX11-	1509-1512
1.37.1 2-pin connector -T2hu-	1510
1.37.2 2-pin connector -T2hv-	1510
1.37.3 5-pin connector -T5at-	1511-1512
839 - -Connector views: parts with prefix R - 1	1513-1592
1. -Connector views: parts with prefix R	1513-1592
1.1 DVD player -R7-	1515
1.1.1 9-pin connector -T9j-	1515
1.2 Rear left treble loudspeaker -R14-	1515-1516
1.2.1 2-pin connector -T2dz-	1515
1.2.2 2-pin connector -T2me-	1516
1.3 Rear left bass loudspeaker -R15-	1517
1.3.1 2-pin connector -T2eb-	1517
1.4 Rear right treble loudspeaker -R16-	1517-1518
1.4.1 2-pin connector -T2mc-	1518
1.4.2 2-pin connector -T2mf-	1518
1.5 Rear right bass loudspeaker -R17-	1519
1.5.1 2-pin connector -T2md-	1519
1.6 Front left treble loudspeaker -R20-	1520
1.6.1 2-pin connector -T2ec-	1520
1.7 Front left bass loudspeaker -R21-	1521-1522
1.7.1 2-pin connector -T2eg-	1521
1.7.2 4-pin connector -T4cv-	1522
1.8 Front right treble loudspeaker -R22-	1523
1.8.1 2-pin connector -T2ek-	1523
1.9 Front right bass loudspeaker -R23-	1523-1524
1.9.1 2-pin connector -T2el-	1524
1.9.2 4-pin connector -T4cy-	1524
1.10 Aerial amplifier -R24-	1525-1528
1.10.1 2-pin connector -T2em-	1525
1.10.2 2-pin connector -T2en-	1526
1.10.3 4-pin connector -T4cz-	1527
1.10.4 4-pin connector -T4da-	1527
1.10.5 4-pin connector -T4db-	1528
1.11 TV tuner -R78-	1529-1531
1.11.1 2-pin connector -T2hk-	1529
1.11.2 2-pin connector -T2if-	1530
1.11.3 4-pin connector -T4eq-	1530
1.11.4 5-pin connector -T5bf-	1531
1.11.5 12-pin connector -T12at-	1532
1.12 Aerial amplifier 2 for TV -R83-	1532-1533
1.12.1 2-pin connector -T2fb-	1532

1.12.2 2-pin connector -T2fc-	1533
1.13 Aerial amplifier 3 for TV -R84-	1534-1536
1.13.1 2-pin connector -T2fd-	1534
1.13.2 2-pin connector -T2fe-	1535
1.13.3 2-pin connector -T2ff-	1536
1.13.4 2-pin connector -T2fg-	1536
1.14 Aerial amplifier for mobile telephone -R86-	1537-1540
1.14.1 2-pin connector -T2fh-	1537
1.14.2 2-pin connector -T2fi-	1538
1.14.3 2-pin connector -T2fj-	1539
1.14.4 2-pin connector -T2hl-	1539
1.14.5 4-pin connector -T4ej-	1540
1.15 Front left mid-range loudspeaker -R103-	1541
1.15.1 2-pin connector -T2dr-	1541
1.16 Front right mid-range loudspeaker -R104-	1541
1.16.1 2-pin connector -T2ds-	1541
1.17 Aerial amplifier 2 -R111-	1542-1545
1.17.1 2-pin connector -T2dt-	1542
1.17.2 2-pin connector -T2du-	1543
1.17.3 4-pin connector -T4cq-	1544
1.17.4 4-pin connector -T4cr-	1544
1.17.5 4-pin connector -T4cs-	1545
1.18 Aerial amplifier 3 -R112-	1546
1.18.1 2-pin connector -T2dv-	1546
1.19 Luggage compartment aerial for entry and start system -R137-	1546
1.19.1 2-pin connector -T2dx-	1546
1.20 Interior aerial 1 for entry and start system -R138-	1547
1.20.1 2-pin connector -T2dw-	1547
1.21 Microphone unit in front roof module -R164-	1548-1549
1.21.1 4-pin connector -T4ct-	1548
1.21.2 4-pin connector -T4cu-	1549
1.21.3 4-pin connector -T4dd-	1550
1.22 Parking aid loudspeaker -R169-	1550
1.22.1 2-pin connector -T2br-	1550
1.23 Traffic data aerial -R173-	1551
1.23.1 8-pin connector -T8t-	1551
1.24 Left aerial for entry and start authorisation -R200-	1552
1.24.1 2-pin connector -T2ed-	1552
1.25 Right aerial for entry and start authorisation -R201-	1553
1.25.1 2-pin connector -T2jh-	1553
1.26 TV card reader -R204-	1554
1.26.1 5-pin connector -T5ae-	1554
1.27 Centre loudspeaker -R208-	1555
1.27.1 2-pin connector -T2ee-	1555
1.28 Left effect loudspeaker -R209-	1556
1.28.1 2-pin connector -T2ef-	1556
1.29 Right effect loudspeaker -R210-	1557
1.29.1 2-pin connector -T2eh-	1557
1.30 Subwoofer -R211-	1558-1559
1.30.1 4-pin connector -T4cw-	1558
1.30.2 4-pin connector -T4cx-	1559
1.31 Camera for night vision system -R212-	1560
1.31.1 5-pin connector -T5af-	1560
1.32 Roof aerial -R216-	1560-1565
1.32.1 2-pin connector -T2ei-	1561
1.32.2 2-pin connector -T2ej-	1561
1.32.3 2-pin connector -T2hg-	1562
1.32.4 2-pin connector -T2hz-	1563
1.32.5 2-pin connector -T2of-	1563
1.32.6 2-pin connector -T2oi-	1564
1.32.7 2-pin connector -T2w-	1565
1.32.8 6-pin connector -T6ao-	1565
1.33 Front left treble loudspeaker 2 -R220-	1566
1.33.1 2-pin connector -T2os-	1566
1.34 Front right treble loudspeaker 2 -R221-	1567
1.34.1 2-pin connector -T2ot-	1567

1.35 Front camera for driver assist systems -R242-	1568-1569
1.35.1 2-pin connector -T2hh-	1568
1.35.2 4-pin connector -T4dc-	1569
1.36 Front overhead view camera -R243-	1570
1.36.1 2-pin connector -T2eo-	1570
1.37 Rear overhead view camera -R246-	1570
1.37.1 2-pin connector -T2ep-	1570
1.38 Actuator 1 for engine sound generator -R257-	1571
1.38.1 2-pin connector -T2eq-	1571
1.39 Emergency call module aerial -R263-	1572-1573
1.39.1 2-pin connector -T2er-	1572
1.39.2 2-pin connector -T2np-	1573
1.40 Dedicated short-range communication aerial -R269-	1574
1.40.1 2-pin connector -T2es-	1574
1.41 Front left mid-range loudspeaker 2 -R276-	1574
1.41.1 2-pin connector -T2et-	1574
1.42 Front right mid-range loudspeaker 2 -R277-	1575
1.42.1 2-pin connector -T2eu-	1575
1.43 USB hub -R293-	1576-1578
1.43.1 5-pin connector -T5ax-	1576
1.43.2 5-pin connector -T5be-	1577
1.43.3 6-pin connector -T6aa-	1578
1.43.4 6-pin connector -T6z-	1578
1.44 LTE aerial 1 -R297-	1579
1.44.1 2-pin connector -T2mb-	1579
1.45 LTE aerial 2 -R306-	1580-1581
1.45.1 2-pin connector -T2ev-	1580
1.45.2 2-pin connector -T2ew-	1581
1.46 Emergency call module aerial 3 -R323-	1582
1.46.1 2-pin connector -T2qh-	1582
1.47 LTE aerial 3 -R330-	1582
1.47.1 2-pin connector -T2ex-	1582
1.48 Emergency call module loudspeaker -R335-	1583-1584
1.48.1 2-pin connector -T2ey-	1583
1.48.2 2-pin connector -T2ez-	1584
1.49 Wireless data transfer aerial -R336-	1585
1.49.1 2-pin connector -T2oc-	1585
1.50 Aerial for in-vehicle communication -R364-	1585
1.50.1 2-pin connector -T2fa-	1585
1.51 Wireless data transfer aerial 2 -R366-	1586
1.51.1 2-pin connector -T2ob-	1586
1.52 Front aerial for entry and start authorisation -R376-	1587
1.52.1 2-pin connector -T2fk-	1587
1.53 Telephone and telematics aerial module -RX23-	1588-1592
1.53.1 2-pin connector -T2fp-	1588
1.53.2 2-pin connector -T2hm-	1589
1.53.3 2-pin connector -T2ne-	1590
1.53.4 2-pin connector -T2ni-	1590
1.53.5 2-pin connector -T2qg-	1591-1592
840 - -Connector views: parts with prefix S to U - 1	1593-1713
1. -Connector views: parts with prefix S to U	1593-1713
1.1 Fuse holder A -SA-	1595
1.1.1 24-pin connector -T24b-	1595
1.2 High-voltage charge current distributor -SX4-	1595-1596
1.2.1 8-pin connector -T8v-	1595
1.2.2 8-pin connector -T8z-	1596
1.3 4-pin connector -T4-	1597
1.3.1 4-pin connector -T4hb-	1597
1.3.2 4-pin connector -T4hc-	1597
1.4 Coupling point for electric trailer brakes -TAHKV-	1598-1600
1.4.1 2-pin connector -T2a-	1598
1.4.2 2-pin connector -T2b-	1599
1.4.3 2-pin connector -T2nr-	1600
1.4.4 2-pin connector -T2ns-	1600
1.5 Coupling point on high-voltage battery -TAHV-	1601-1602
1.5.1 14-pin connector -T14b-	1601

1.5.2 14-pin connector -T14c-	1602
1.6 Coupling point on dash panel -TCP-	1603
1.6.1 2-pin connector -T2c-	1603
1.6.2 2-pin connector -T2d-	1603
1.7 Coupling point on dash panel, centre -TCPM-	1604-1613
1.7.1 2-pin connector -T2f-	1605
1.7.2 2-pin connector -T2h-	1605
1.7.3 2-pin connector -T2qd-	1606
1.7.4 2-pin connector -T2qe-	1607
1.7.5 17-pin connector -T17a-	1607
1.7.6 17-pin connector -T17b-	1608
1.7.7 17-pin connector -T17c-	1609
1.7.8 17-pin connector -T17d-	1609
1.7.9 17-pin connector -T17e-	1610
1.7.10 17-pin connector -T17f-	1611
1.7.11 17-pin connector -T17g-	1611
1.7.12 17-pin connector -T17h-	1612
1.7.13 17-pin connector -T17i-	1613
1.7.14 17-pin connector -T17j-	1613
1.8 Coupling point for electromechanical brake servo -TEBKV-	1614
1.8.1 4-pin connector -T4ar-	1614
1.9 Coupling point for electrical air conditioner compressor -TEKK-	1615-1616
1.9.1 10-pin connector -T10cs-	1615
1.9.2 10-pin connector -T10ct-	1616
1.10 Coupling point for roof -TH-	1617
1.10.1 2-pin connector -T2k-	1617
1.10.2 2-pin connector -T2l-	1617
1.11 Coupling point for front heater and air conditioning system -THUKV-	1618-1619
1.11.1 16-pin connector -T16a-	1618
1.11.2 16-pin connector -T16k-	1619
1.12 Coupling point 1 for high-voltage battery regulation -THVBA1-	1620
1.12.1 14-pin connector -T14r-	1620
1.12.2 14-pin connector -T14s-	1620
1.13 Coupling point 1 for high-voltage charging socket -THVL1-	1621-1624
1.13.1 14-pin connector -T14ao-	1621
1.13.2 14-pin connector -T14ap-	1622
1.13.3 14-pin connector -T14d-	1623
1.13.4 14-pin connector -T14e-	1623
1.13.5 14-pin connector -T14f-	1624
1.13.6 14-pin connector -T14g-	1625
1.14 Coupling point 2 for high-voltage charging socket -THVL2-	1625-1627
1.14.1 14-pin connector -T14h-	1626
1.14.2 14-pin connector -T14i-	1626
1.14.3 14-pin connector -T14j-	1627
1.14.4 14-pin connector -T14k-	1628
1.15 Coupling point in interior -TI-	1628-1630
1.15.1 8-pin connector -T8d-	1629
1.15.2 8-pin connector -T8e-	1629
1.15.3 14-pin connector -T14l-	1630
1.15.4 14-pin connector -T14m-	1631
1.16 Coupling point in centre of interior -TIM-	1631-1635
1.16.1 2-pin connector -T2n-	1632
1.16.2 2-pin connector -T2o-	1632
1.16.3 2-pin connector -T2p-	1633
1.16.4 2-pin connector -T2q-	1634
1.16.5 10-pin connector -T10b-	1634
1.16.6 10-pin connector -T10c-	1635
1.17 Coupling point in rear left seat -TISHL-	1636
1.17.1 2-pin connector -T2ku-	1636
1.17.2 2-pin connector -T2kv-	1636
1.18 Coupling point in rear right seat -TISHR-	1637-1638
1.18.1 2-pin connector -T2kw-	1637
1.18.2 2-pin connector -T2kx-	1638
1.19 Coupling point in front left seat -TISVL-	1639-1642
1.19.1 2-pin connector -T2jt-	1639
1.19.2 2-pin connector -T2iu-	1640

1.19.3 2-pin connector -T2jv-	1640
1.19.4 2-pin connector -T2jw-	1641
1.19.5 2-pin connector -T2kl-	1642
1.19.6 2-pin connector -T2km-	1642
1.20 Coupling point in front right seat -TISVR-	1643-1646
1.20.1 2-pin connector -T2jy-	1643
1.20.2 2-pin connector -T2jz-	1644
1.20.3 2-pin connector -T2ka-	1645
1.20.4 2-pin connector -T2kb-	1645
1.20.5 2-pin connector -T2kn-	1646
1.20.6 2-pin connector -T2ko-	1647
1.21 Coupling point in engine compartment -TM-	1647-1648
1.21.1 3-pin connector -T3a-	1647
1.21.2 3-pin connector -T3d-	1648
1.22 Coupling point in engine compartment, right -TMR-	1649-1650
1.22.1 3-pin connector -T3b-	1649
1.22.2 3-pin connector -T3c-	1650
1.22.3 4-pin connector -T4hl-	1651
1.23 Coupling point 1 for low-voltage network of high-voltage battery -TNVBA1-	1651-1655
1.23.1 12-pin connector -T12bg-	1652
1.23.2 12-pin connector -T12bh-	1652
1.23.3 12-pin connector -T12d-	1653
1.23.4 12-pin connector -T12e-	1654
1.23.5 20-pin connector -T20a-	1654
1.23.6 20-pin connector -T20b-	1655
1.24 Coupling point 2 in front left door -TS5-	1656
1.24.1 2-pin connector -T2hi-	1656
1.24.2 2-pin connector -T2nt-	1656
1.25 Coupling point 2 in front right door -TS6-	1657-1658
1.25.1 2-pin connector -T2hj-	1657
1.25.2 2-pin connector -T2nv-	1658
1.26 Coupling point for driver's side seat -TS18-	1659-1664
1.26.1 3-pin connector -T3aw-	1659
1.26.2 3-pin connector -T3e-	1660
1.26.3 4-pin connector -T4er-	1660
1.26.4 10-pin connector -T10av-	1661
1.26.5 10-pin connector -T10az-	1662
1.26.6 10-pin connector -T10be-	1662
1.26.7 10-pin connector -T10bq-	1663
1.26.8 17-pin connector -T17m-	1664
1.26.9 17-pin connector -T17r-	1664
1.27 Coupling point for front passenger side seat -TS19-	1665-1671
1.27.1 3-pin connector -T3az-	1665
1.27.2 3-pin connector -T3bn-	1666
1.27.3 4-pin connector -T4eu-	1667
1.27.4 10-pin connector -T10ax-	1668
1.27.5 10-pin connector -T10bc-	1668
1.27.6 10-pin connector -T10bj-	1669
1.27.7 10-pin connector -T10bo-	1670
1.27.8 17-pin connector -T17s-	1670
1.27.9 17-pin connector -T17u-	1671
1.28 Coupling point for front passenger seat backrest -TSB-	1672-1675
1.28.1 4-pin connector -T4gw-	1672
1.28.2 4-pin connector -T4gx-	1673
1.28.3 8-pin connector -T8as-	1673
1.28.4 8-pin connector -T8at-	1674
1.28.5 12-pin connector -T12ba-	1675
1.28.6 12-pin connector -T12bb-	1675
1.29 Coupling point for driver seat backrest -TSF-	1676-1679
1.29.1 4-pin connector -T4hi-	1676
1.29.2 4-pin connector -T4hj-	1677
1.29.3 8-pin connector -T8a-	1678
1.29.4 8-pin connector -T8b-	1678
1.29.5 12-pin connector -T12dk-	1679
1.29.6 12-pin connector -T12dl-	1680
1.30 Coupling point on rear left bumper -TSFHL-	1680-1681

1.30.1 14-pin connector -T14n-	1680
1.30.2 14-pin connector -T14o-	1681
1.31 Coupling point on front left bumper -TSFVL-	1682-1684
1.31.1 2-pin connector -T2r-	1682
1.31.2 2-pin connector -T2s-	1683
1.31.3 10-pin connector -T10d-	1684
1.31.4 10-pin connector -T10e-	1684
1.32 Coupling point on front right bumper -TSFVR-	1685-1688
1.32.1 2-pin connector -T2qi-	1685
1.32.2 2-pin connector -T2qj-	1686
1.32.3 5-pin connector -T5h-	1687
1.32.4 5-pin connector -T5i-	1687
1.32.5 14-pin connector -T14p-	1688
1.32.6 14-pin connector -T14q-	1689
1.33 Coupling point for back seat -TSH-	1689-1690
1.33.1 10-pin connector -T10as-	1689
1.33.2 10-pin connector -T10bm-	1690
1.34 Coupling point for rear left seat -TSHL-	1691-1692
1.34.1 10-pin connector -T10au-	1691
1.34.2 10-pin connector -T10bg-	1692
1.35 Coupling point for rear right seat -TSHR-	1693
1.35.1 10-pin connector -T10bh-	1693
1.35.2 10-pin connector -T10z-	1693
1.36 Coupling point for rear left door -TTHL-	1694-1695
1.36.1 19-pin connector -T19b-	1694
1.36.2 19-pin connector -T19d-	1695
1.37 Coupling point for rear right door -TTHR-	1696
1.37.1 19-pin connector -T19c-	1696
1.37.2 19-pin connector -T19e-	1696
1.38 Coupling point in rear left door -TTIHL-	1697-1698
1.38.1 4-pin connector -T4g-	1697
1.38.2 4-pin connector -T4h-	1698
1.39 Coupling point in rear right door -TTIHR-	1699
1.39.1 4-pin connector -T4gj-	1699
1.39.2 4-pin connector -T4gk-	1699
1.40 Coupling point in front left door -TTIVL-	1700-1701
1.40.1 4-pin connector -T4hm-	1700
1.40.2 4-pin connector -T4i-	1701
1.41 Coupling point in front right door -TTIVR-	1702
1.41.1 4-pin connector -T4k-	1702
1.41.2 4-pin connector -T4l-	1702
1.42 Coupling point for front left door -TTVL-	1703-1704
1.42.1 21-pin connector -T21a-	1703
1.42.2 21-pin connector -T21b-	1704
1.43 Coupling point for front right door -TTVR-	1705
1.43.1 21-pin connector -T21c-	1705
1.43.2 21-pin connector -T21d-	1705
1.44 Maintenance connector for high-voltage system -TW-	1706
1.44.1 4-pin connector -T4ai-	1706
1.45 12 V socket -U5-	1707
1.45.1 3-pin connector -T3an-	1707
1.46 Rear cigarette lighter -U9-	1708
1.46.1 3-pin connector -T3ao-	1708
1.47 12 V socket 3 -U19-	1709
1.47.1 3-pin connector -T3am-	1709
1.48 Diagnostic connection -U31-	1710
1.48.1 16-pin connector -T16c-	1710
1.49 USB connection 1 -U41-	1711-1713
1.49.1 4-pin connector -T4ef-	1711
1.49.2 5-pin connector -T5ag-	1712-1713
841 - -Connector views: parts with prefix V - 1	1714-1795
1. -Connector views: parts with prefix V	1714-1795
1.1 Washer pump -V5-	1717
1.1.1 2-pin connector -T2fw-	1717
1.2 Headlight washer system pump -V11-	1717
1.2.1 2-pin connector -T2fa-	1717

1.3 Rear window wiper motor -V12-	1718
1.3.1 3-pin connector -T3ap-	1718
1.4 Rear window washer pump -V13-	1719
1.4.1 2-pin connector -T2fr-	1719
1.5 Driver seat longitudinal adjustment motor -V28-	1720
1.5.1 5-pin connector -T5ah-	1720
1.6 Front passenger seat longitudinal adjustment motor -V31-	1721
1.6.1 5-pin connector -T5bz-	1721
1.7 Driver seat backrest adjustment motor -V45-	1722
1.7.1 5-pin connector -T5ai-	1722
1.8 Front passenger seat backrest adjustment motor -V46-	1723
1.8.1 5-pin connector -T5ca-	1723
1.9 Defroster flap control motor -V107-	1724
1.9.1 4-pin connector -T4fu-	1724
1.10 Left footwell flap control motor -V108-	1725
1.10.1 4-pin connector -T4gh-	1725
1.11 Right footwell flap control motor -V109-	1726
1.11.1 4-pin connector -T4gc-	1726
1.12 Left centre vent control motor -V110-	1727
1.12.1 4-pin connector -T4gf-	1727
1.13 Right central vent control motor -V111-	1728
1.13.1 4-pin connector -T4ge-	1728
1.14 Air recirculation flap control motor -V113-	1729
1.14.1 4-pin connector -T4fq-	1729
1.15 Rear temperature flap control motor -V137-	1730
1.15.1 4-pin connector -T4fy-	1730
1.16 Driver side window regulator motor -V147-	1731
1.16.1 3-pin connector -T3aq-	1731
1.17 Front passenger side window regulator motor -V148-	1732
1.17.1 3-pin connector -T3ar-	1732
1.18 Left temperature flap control motor -V158-	1733
1.18.1 4-pin connector -T4fv-	1733
1.19 Right temperature flap control motor -V159-	1734
1.19.1 4-pin connector -T4fs-	1734
1.20 Right B-pillar and footwell shut-off flap control motor -V211-	1735
1.20.1 4-pin connector -T4di-	1735
1.21 Left B-pillar and footwell shut-off flap control motor -V212-	1736
1.21.1 4-pin connector -T4dj-	1736
1.22 Rear left air quantity flap control motor -V239-	1737
1.22.1 4-pin connector -T4gg-	1737
1.23 Rear right air quantity flap control motor -V240-	1738
1.23.1 4-pin connector -T4gd-	1738
1.24 Driver seat rake adjustment motor -V243-	1739
1.24.1 5-pin connector -T5bg-	1739
1.25 Front passenger seat rake adjustment motor -V244-	1740
1.25.1 5-pin connector -T5bx-	1740
1.26 Driver seat height adjustment motor -V245-	1741
1.26.1 5-pin connector -T5ay-	1741
1.27 Front passenger seat height adjustment motor -V246-	1742
1.27.1 5-pin connector -T5by-	1742
1.28 Driver seat depth adjustment motor -V256-	1743
1.28.1 5-pin connector -T5bk-	1743
1.29 Front passenger seat depth adjustment motor -V257-	1744
1.29.1 5-pin connector -T5cb-	1744
1.30 Left parking brake motor -V282-	1745
1.30.1 2-pin connector -T2ft-	1745
1.31 Right parking brake motor -V283-	1746
1.31.1 2-pin connector -T2fu-	1746
1.32 Left side vent control motor -V299-	1747
1.32.1 4-pin connector -T4fw-	1747
1.33 Right side vent control motor -V300-	1748
1.33.1 4-pin connector -T4ft-	1748
1.34 Driver door power latching motor -V302-	1749
1.34.1 4-pin connector -T4dk-	1749
1.35 Front passenger door power latching motor -V303-	1750
1.35.1 4-pin connector -T4dl-	1750

1.36 Refrigerant shut-off valve -V424-	1751
1.36.1 2-pin connector -T2fv-	1751
1.37 Rear air distribution flap control motor -V427-	1752
1.37.1 4-pin connector -T4fx-	1752
1.38 Fresh air flap control motor -V438-	1753
1.38.1 4-pin connector -T4fr-	1753
1.39 Compressor for multicontour driver seat -V439-	1754
1.39.1 2-pin connector -T2fs-	1754
1.40 Compressor for multicontour front passenger seat -V440-	1755
1.40.1 2-pin connector -T2mg-	1755
1.41 Rear driver side window regulator motor -V471-	1756
1.41.1 3-pin connector -T3as-	1756
1.42 Rear passenger side window regulator motor -V472-	1757
1.42.1 3-pin connector -T3bm-	1757
1.43 Front left seat backrest fan 1 -V512-	1758
1.43.1 6-pin connector -T6ad-	1758
1.44 Front left seat cushion fan 1 -V514-	1759
1.44.1 6-pin connector -T6ac-	1759
1.45 Front right seat backrest fan 1 -V516-	1760
1.45.1 6-pin connector -T6bc-	1760
1.46 Front right seat cushion fan 1 -V518-	1761
1.46.1 6-pin connector -T6bb-	1761
1.47 Rear door power latching motor, driver side -V541-	1762
1.47.1 4-pin connector -T4dm-	1762
1.48 Rear door power latching motor, front passenger side -V542-	1763
1.48.1 4-pin connector -T4gl-	1763
1.49 Radiator blind control motor -V544-	1764
1.49.1 4-pin connector -T4do-	1764
1.50 Radiator blind control motor 2 -V550-	1765
1.50.1 4-pin connector -T4dp-	1765
1.51 Coolant pump for high-voltage battery -V590-	1766
1.51.1 3-pin connector -T3at-	1766
1.52 Rear left air distribution control motor -V593-	1767
1.52.1 4-pin connector -T4gi-	1767
1.53 Rear right air distribution control motor -V594-	1768
1.53.1 4-pin connector -T4gb-	1768
1.54 Thermal management coolant pump 2 -V618-	1769
1.54.1 3-pin connector -T3au-	1769
1.55 Thermal management coolant pump 4 -V620-	1770
1.55.1 3-pin connector -T3av-	1770
1.56 Actuator for parking lock -V682-	1771
1.56.1 6-pin connector -T6k-	1771
1.57 Lumbar support for driver seat -VX2-	1772-1773
1.57.1 4-pin connector -T4dq-	1772
1.57.2 4-pin connector -T4eg-	1773
1.58 Lumbar support for front passenger seat -VX3-	1774
1.58.1 4-pin connector -T4gs-	1774
1.58.2 4-pin connector -T4gt-	1774
1.59 Driver side exterior mirror -VX4-	1775
1.59.1 2-pin connector -T2nu-	1775
1.60 Passenger side exterior mirror -VX5-	1776
1.60.1 2-pin connector -T2nw-	1776
1.61 Trailer towing coupling -VX15-	1777-1778
1.61.1 7-pin connector -T7c-	1777
1.61.2 13-pin connector -T13b-	1778
1.62 Power latching for rear lid -VX16-	1779
1.62.1 6-pin connector -T6ae-	1779
1.63 Driver door lock unit -VX21-	1779
1.63.1 10-pin connector -T10co-	1779
1.64 Front passenger door lock unit -VX22-	1780
1.64.1 10-pin connector -T10l-	1780
1.65 Rear lid lock unit -VX25-	1781
1.65.1 4-pin connector -T4ak-	1781
1.66 Radiator fan -VX57-	1782
1.66.1 4-pin connector -T4dh-	1782
1.67 Rear lid drive unit -VX69-	1783

1.67.1 10-pin connector -T10bk-	1783
1.68 Rear lid drive unit 2 -VX77-	1784
1.68.1 10-pin connector -T10bl-	1784
1.69 Rear door lock unit, driver side -VX83-	1785
1.69.1 10-pin connector -T10m-	1785
1.70 Rear door lock unit, front passenger side -VX84-	1786
1.70.1 10-pin connector -T10bi-	1786
1.71 Drive unit for charging socket cover 1 -VX86-	1787
1.71.1 10-pin connector -T10ae-	1787
1.72 Drive unit for charging socket cover 2 -VX87-	1788
1.72.1 10-pin connector -T10cm-	1788
1.73 Three-phase drive front -VX89-	1789-1790
1.73.1 2-pin connector -T2id-	1789
1.73.2 4-pin connector -T4dz-	1790
1.73.3 6-pin connector -T6be-	1791
1.74 Three-phase drive rear -VX90-	1791-1793
1.74.1 2-pin connector -T2ib-	1792
1.74.2 4-pin connector -T4dx-	1792
1.74.3 6-pin connector -T6bk-	1793
1.75 Three-phase drive 2 rear -VX91-	1794-1795
1.75.1 4-pin connector -T4je-	1794
1.75.2 6-pin connector -T6bv-	1794-1795
842 - -Connector views: parts with prefix W to Z - 1	1796-1828
1. -Connector views: parts with prefix W to Z	1796-1828
1.1 Glove compartment light -W6-	1797
1.1.1 2-pin connector -T2ge-	1797
1.2 Front passenger side illuminated vanity mirror -W14-	1798
1.2.1 2-pin connector -T2fy-	1798
1.3 Left boot light -W18-	1798
1.3.1 2-pin connector -T2fz-	1798
1.4 Driver side illuminated vanity mirror -W20-	1799
1.4.1 2-pin connector -T2ga-	1799
1.5 Right boot light -W35-	1800
1.5.1 2-pin connector -T2gc-	1800
1.6 Rear left footwell light -W45-	1801
1.6.1 2-pin connector -T2bw-	1801
1.7 Rear right footwell light -W46-	1802
1.7.1 2-pin connector -T2bx-	1802
1.8 Rear lid light -W51-	1803
1.8.1 2-pin connector -T2gd-	1803
1.9 Rear driver side entry light -W83-	1804
1.9.1 2-pin connector -T2gb-	1804
1.10 Rear passenger side entry light -W84-	1805
1.10.1 2-pin connector -T2lv-	1805
1.11 Light for driver door ambient lighting -W86-	1806
1.11.1 4-pin connector -T4du-	1806
1.12 Light for passenger door ambient lighting -W87-	1807
1.12.1 4-pin connector -T4fd-	1807
1.13 Driver side entry light -W92-	1808
1.13.1 2-pin connector -T2gj-	1808
1.14 Front passenger side entry light -W93-	1809
1.14.1 2-pin connector -T2gk-	1809
1.15 Light for driver side sill panel moulding ambient lighting -W102-	1810
1.15.1 2-pin connector -T2gf-	1810
1.16 Light for sill panel moulding ambient lighting, front passenger side -W103-	1811
1.16.1 2-pin connector -T2gg-	1811
1.17 Light for rear sill panel moulding ambient lighting, front passenger side -W104-	1812
1.17.1 2-pin connector -T2gi-	1812
1.18 Light for rear sill panel moulding ambient lighting, driver side -W105-	1813
1.18.1 2-pin connector -T2gh-	1813
1.19 Driver door exit warning light -W111-	1814
1.19.1 4-pin connector -T4dr-	1814
1.20 Front passenger door exit warning light -W112-	1815
1.20.1 4-pin connector -T4ds-	1815
1.21 Rear driver side door exit warning light -W113-	1816
1.21.1 4-pin connector -T4dt-	1816

1.22 Rear passenger side door exit warning light -W114-	1817
1.22.1 4-pin connector -T4gp-	1817
1.23 Rear interior light -WX2-	1818
1.23.1 6-pin connector -T6ag-	1818
1.24 Front roof module -WX3-	1819-1820
1.24.1 6-pin connector -T6r-	1819
1.24.2 16-pin connector -T16d-	1820
1.25 Left washer jet heater element -Z20-	1821
1.25.1 2-pin connector -T2gp-	1821
1.26 Right washer jet heater element -Z21-	1821
1.26.1 2-pin connector -T2gq-	1821
1.27 Auxiliary air heater element -Z35-	1822
1.27.1 5-pin connector -T5aj-	1822
1.28 Windscreen heater for front sensors -Z113-	1823
1.28.1 2-pin connector -T2gl-	1823
1.29 Heater element 1, in driver side wiper arm -Z139-	1824
1.29.1 2-pin connector -T2gm-	1824
1.30 Heater element 1, in passenger side wiper arm -Z141-	1825
1.30.1 2-pin connector -T2gn-	1825
1.31 Heater element for adaptive cruise control radar sensor -Z185-	1826
1.31.1 2-pin connector -T2go-	1826
1.32 Rear window -ZX1-	1827-1828
1.32.1 2-pin connector -T2ao-	1827-1828