

Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety information	1
2 Repair instructions	2
2.1 Repair instructions	2
3 Identification	3
3.1 Identification of transmission unit	3
4 Technical data	4
4.1 Capacities	4
34 - Controls, housing	5
1 Safety and repair instructions	5
1.1 Safety information	5
1.2 Repair instructions	5
2 Removing and installing transmission unit	6
2.1 Removing transmission unit	6
2.2 Separating motor and transmission unit	6
2.3 Assembling motor and transmission unit	9
3 Gear oil	24
3.1 Checking gear oil level	24
3.2 Draining and filling gear oil	24
4 Dismantling and assembling transmission unit	26
4.1 Assembly overview - transmission unit	26
35 - Gears, shafts	29
1 Safety and repair instructions	29
1.1 Safety information	29
1.2 Repair instructions	29
2 Parking lock	30
2.1 Removing and installing parking lock actuator	30
39 - Final drive - differential	32
1 Safety and repair instructions	32
1.1 Safety information	32
1.2 Repair instructions	32
2 Oil seals	33
2.1 Overview of fitting locations - oil seals	33
2.2 Removing and installing oil seal for differential in motor	33
2.3 Removing and installing oil seal for right flange shaft	34
2.4 Removing and installing oil seal for rotor shaft in motor	36
3 Differential	38
3.1 Assembly overview - flange shafts	38
3.2 Assembly overview - differential	38
3.3 Removing and installing left flange shaft	39
3.4 Removing and installing right flange shaft	40
3.5 Removing and installing roller bearing for right flange shaft	41
3.6 Renewing locking plate and ball bearing for flange shaft	43
3.7 Dismantling and assembling differential	45