

## Contents

<b>1</b>	<b>General information</b>	<b>1</b>
1.1	--- Change history ---	1
1.2	General notes on Maintenance Manuals	2
1.3	Cleaning engine	2
1.4	Engine number	2
1.5	Vehicle identification number	4
1.6	Vehicle data sticker	5
<b>2</b>	<b>Preparations</b>	<b>6</b>
2.1	Vehicle: raising	6
2.2	Engine cover panel: removing and installing	7
2.3	Noise insulation: removing and installing	8
2.4	Window regulators: activating automatic open/close function	11
2.5	Vehicle diagnostic tester: connecting	11
<b>3</b>	<b>Maintenance</b>	<b>14</b>
3.1	Diesel particulate filter: reading out ash deposit volume	17
3.2	Event memory: reading out	18
3.3	Service interval display: resetting service event	18
3.4	Diagnostic work: performing	19
3.5	Static event memory: working through	19
3.6	Transport mode: deactivating	20
3.7	Emergency call function: checking status LED (must be green before delivery to customer)	20
3.8	ERA-GLONASS: checking emergency call function	21
3.9	Transport mode: checking activation and activating if necessary	22
3.10	Battery: reading out status	22
3.11	Vehicle identification numbers: checking numbers match and are embossed properly	23
3.12	Vehicle diagnosis: completing	23
3.13	Battery: checking electrolyte level	24
3.14	Battery: connecting stationary battery charger (min. 30A, charging voltage max. 14.8 V on IV characteristic curve)	26
3.15	Battery: determining and recording state of charge (SOC)	27
3.16	Mirror hanger indicating defective battery: renewing battery on affected vehicles	30
3.17	Brake fluid: changing	30
3.18	Brake fluid (vehicles older than 12 months): changing	35
3.19	Brake fluid: checking fluid level	35
3.20	Brake system: checking condition of brake hoses, and checking that caps are fitted on bleeder screws	35
3.21	Brake pads: checking thickness	36
3.22	Toothed belt for coolant pump drive: checking	37
3.23	Brake discs: checking for surface rust and operating brakes to clean if necessary	38
3.24	Parking brake: releasing	39
3.25	Tyres: checking condition, age and wear pattern, and checking and recording tread depth	39
3.26	Tyres: checking tyre pressures and adjusting if necessary	41
3.27	Tyres (except spare wheel): checking tyre pressures and adjusting to 3.5 bar if necessary	42
3.28	Tyre Pressure Loss Indicator: storing changed tyre pressures	42
3.29	Tyre repair kit: checking that set is complete, and checking and recording expiry date	43
3.30	Wheel bolts: tightening to specified torque	43
3.31	Suspension struts on front and rear axle: removing locking elements and correctly fitting bump stops	44
3.32	Axles (front and rear): checking components for play, secure attachment and damage, and checking protective boots	45
3.33	Engine, gearbox, final drive and steering: checking for leaks and damage	49
3.34	Vehicle (from below): checking for damage	50
3.35	Underbody: checking trim, wheel housing liners, side members and pipes/wiring for damage, and checking that they are properly secured	50



3.36	Roof insert: checking operation	50
3.37	Roof insert - sliding/tilting sunroof: cleaning and lubricating	50
3.38	Roof insert for panoramic sliding sunroof: checking operation	53
3.39	Door hinges with separate door arrester: cleaning and lubricating	53
3.40	Windscreen/rear window washer system: checking spray pattern and adjusting if necessary	54
3.41	ECE towing bracket: checking (if fitted)	55
3.42	Wiper blades: checking for damage	55
3.43	Headlight washer system: checking operation	56
3.44	Headlights: checking for correct adjustment	56
3.45	Headlights and reversing lights, brake lights, side lights, number plate lights, turn signals, hazard warning lights: checking operation	57
3.46	Luggage compartment lighting: checking operation	58
3.47	Luggage compartment: removing protective film and felt pieces	58
3.48	Glove compartment light, interior lighting and reading light: checking operation	58
3.49	Horn: checking operation	59
3.50	Passenger airbag: checking key switch on/off and setting to "on"	59
3.51	Owner's literature: checking that all documents are present	59
3.52	Emergency battery: reading out status	60
3.53	Owner's Manual: attaching vehicle data sticker	60
3.54	Service Schedule: affixing vehicle data sticker	60
3.55	Service Schedule: entering Delivery Inspection	60
3.56	Seat belts: checking retainers for latch plate and belt buckle, and checking locking action of automatic belt retractor	61
3.57	Vehicle interior: removing protective film (if present) and protective covers for seats	61
3.58	Vehicle interior: checking that it is clean and cleaning if necessary	62
3.59	Vehicle interior: removing any objects other than those protecting interior surfaces	62
3.60	Vehicle interior and exterior: checking for and documenting any damage	62
3.61	Instrument cluster: checking warning lamps	62
3.62	Warning triangle: checking availability	62
3.63	First-aid kit: checking and recording expiry date	63
3.64	Vehicle keys: checking operation and recording number of keys given to customer	63
3.65	Vehicle key: removing from ignition lock	63
3.66	Vehicle key(s), wheel covers and owner's literature: checking availability and recording number present	63
3.67	Sun visors: checking that they are folded up and folding up if necessary	64
3.68	Luggage compartment cover and sun blind: checking that they are rolled up and rolling up if necessary	64
3.69	Engine oil: draining	64
3.70	Engine oil: extracting	68
3.71	Engine oil: renewing oil filter	69
3.72	Engine oil: filling up	74
3.73	Engine oil: checking oil level and correcting if necessary	75
3.74	Spark plugs: renewing	76
3.75	Coolant level: checking (coolant level must reach at least top marking on coolant expansion tank)	87
3.76	Air filter: renewing filter element and cleaning housing	91
3.77	Dust and pollen filter: renewing	96
3.78	Fuel filter: renewing	98
3.79	Fuel filter: draining	99
3.80	Fuel tank: adding fuel additive	100
3.81	Reducing agent (AdBlue®): filling up tank completely	101
3.82	Vehicle doors: removing edge protection	105
3.83	Vehicle exterior: checking unprotected areas for dirt, and cleaning if necessary	105
3.84	Vehicle exterior: removing protective film, if present	105
3.85	Vehicle cover: checking position and correcting if necessary	106
3.86	Vehicle cover: removing according to manufacturer's instructions	106

3.87	Paintwork, trims, side windows and wiper blades: checking cleanliness	106
3.88	Body: checking vehicle paintwork for damage and corrosion from below and with bonnet, rear lid and doors open	106
3.89	Vehicles parked outdoors: locking	106
3.90	Road test	106
3.91	Stock vehicles: observing measures specified in maintenance table for stock vehicles (see "Before handing vehicle over to customer")	107
3.92	Accessories: installing	107
3.93	Readiness for sending and receiving information: establishing	108
3.94	Emergency flare: fitted so it is visible from driver's seat or driver's entrance	108
3.95	Certificate of conformity (COC): checking COC is present in vehicle	109
3.96	Checklist "Documentation of cleaning and care routine": checking that list is present	109
3.97	"Stock vehicle maintenance" checklist: signing and placing in vehicle wallet	109
3.98	Cleaning and care: checking that required measures have been carried out on time	109
3.99	Stock vehicle care management: deciding and recording date of next check	109
3.100	Front final drive: changing gear oil	109
3.101	Display instruments: setting time and date	110
3.102	Manual gearbox/automatic gearbox: selecting 1st gear/park	110
3.103	Dual clutch gearbox (S tronic): changing ATF	110
3.104	Dual clutch gearbox (S tronic): changing gear oil and renewing oil filter	110
3.105	All-wheel drive coupling: changing oil	110
3.106	Interior mirror: calibrating compass	110
3.107	Instrument cluster: resetting driver information system	110
3.108	Poly V-belt for ancillaries: renewing	110
3.109	Toothed belt for camshaft drive: renewing	111
3.110	Toothed belt for camshaft drive and tensioning roller: renewing	111
3.111	Exhaust emissions test	111
3.112	Diesel engines: performing exhaust emissions test - from EU6 onwards	129
<b>4</b>	<b>Periodic technical inspection (PTI)</b>	<b>131</b>