

Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when working on vehicles with high-voltage system	1
1.2 Safety precautions when working in the vicinity of high-voltage components	2
1.3 Safety precautions when working on vehicles with start/stop system	2
1.4 Safety precautions when using testers and measuring instruments during a road test	3
2 Repair instructions	4
2.1 Rules for cleanliness	4
2.2 Contact corrosion	4
2.3 Routing and attachment of lines and wiring	5
2.4 Identification plates	5
2.5 Use of impact wrenches	5
98 - Assist systems	7
1 Safety information	7
2 Fitting locations	8
2.1 Overview of fitting locations - senders, sensors and control units in front section of vehicle	8
2.2 Overview of fitting locations - senders, sensors and control units in centre section of vehicle	9
2.3 Overview of fitting locations - senders, sensors and control units in rear section of vehicle	9
3 Senders/sensors/control units	12
3.1 Removing and installing front parking aid sender G252/G253/G254/G255	12
3.2 Removing and installing rear parking aid sender G203/G204/G205/G206	13
3.3 Removing and installing front park assist steering sender G568/G569	14
3.4 Removing and installing rear park assist steering sender G716/G717	14
3.5 Removing and installing rear parking aid warning buzzer H15	15
3.6 Removing and installing front parking aid warning buzzer H22	16
3.7 Removing and installing adaptive cruise control unit J428	17
3.8 Removing and installing parking aid control unit J446	19
3.9 Removing and installing lane change assist control unit J769/J770	21
3.10 Removing and installing reversing camera system control unit J772	22
3.11 Removing and installing lane change assist warning lamp in exterior mirror K233/K234	22
3.12 Removing and installing reversing camera R189	23
3.13 Assembly overview - front camera for driver assist systems	23
3.14 Removing and installing front camera for driver assist systems R242	25
4 Adaptive cruise control	30
4.1 Layout - adaptive cruise control	30
4.2 Adjusting adaptive cruise control	30
5 Parking aid/park assist steering/autonomous parking	35
5.1 Layout - parking aid/park assist steering/autonomous parking	35
6 Front camera for driver assist systems	36
6.1 Layout - front camera for driver assist systems	36
6.2 Calibrating front camera for driver assist systems	36
7 Reversing camera system	45
7.1 Layout - reversing camera system	45
7.2 Calibrating reversing camera system	45
8 Lane change assist	52
8.1 Layout - lane change assist	52
8.2 Calibrating lane change assist	52