

## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety precautions when working on vehicles with high-voltage system	1
1.2 Safety precautions when working in the vicinity of high-voltage components	2
1.3 Safety precautions when working on vehicles with start/stop system	2
1.4 Safety precautions when using testers and measuring instruments during a road test	3
1.5 Notes on use and safety for LED headlights and Audi laser lights	3
<b>2 Repair instructions</b>	<b>4</b>
2.1 Rules for cleanliness	4
2.2 General notes	4
2.3 Contact corrosion	4
2.4 ESD (electrostatic discharge) workplace	5
2.5 Routing and attachment of pipes, hoses and wiring	5
2.6 Identification plates	5
2.7 Use of impact wrenches	6
2.8 Cleaning engine	6
<b>3 Battery</b>	<b>8</b>
3.1 Battery - general notes	8
3.2 Battery types	8
<b>27 - Starter, current supply, CCS</b>	<b>9</b>
<b>1 Safety information</b>	<b>9</b>
<b>2 Battery</b>	<b>10</b>
2.1 Assembly overview - battery	10
2.2 Disconnecting and connecting battery	12
2.3 Removing and installing earth cable with battery monitor control unit J367	13
2.4 Removing and installing battery	13
2.5 Removing and installing battery tray	19
2.6 Checking battery	20
2.7 Charging battery	20
<b>3 Alternator</b>	<b>22</b>
3.1 Assembly overview - alternator	22
3.2 Removing and installing alternator	23
3.3 Checking alternator	27
<b>4 Starter</b>	<b>28</b>
4.1 Assembly overview - starter	28
4.2 Removing and installing starter	29
<b>5 Start/stop system</b>	<b>33</b>
5.1 Overview of fitting locations - start/stop system	33
<b>6 Adaptive cruise control</b>	<b>34</b>
<b>90 - Gauges, instruments</b>	<b>35</b>
<b>1 Safety information</b>	<b>35</b>
<b>2 Dash panel insert</b>	<b>36</b>
2.1 Assembly overview - dash panel insert	36
2.2 Assembly overview - head-up display	38
2.3 Removing and installing dash panel insert with control unit in dash panel insert J285	38
2.4 Removing and installing control unit for head-up display	42
<b>3 Horn</b>	<b>45</b>
3.1 Assembly overview - horn	45
3.2 Removing and installing treble horn H2 / bass horn H7	46

<b>92 - Windscreen wash/wipe system</b>	<b>47</b>
<b>1 Safety information</b>	<b>47</b>
<b>2 Windscreen wiper system</b>	<b>48</b>
2.1 Assembly overview - windscreen wiper system	48
2.2 Moving wipers to service position	50
2.3 Removing and installing wiper blade	51
2.4 Removing and installing wiper arms	51
2.5 Adjusting wiper arms	53
2.6 Removing and installing wiper motor V	54
2.7 Removing and installing rain and light sensor	55
<b>3 Windscreen washer system</b>	<b>60</b>
3.1 Assembly overview - windscreen washer system	60
3.2 Removing and installing washer fluid reservoir	66
3.3 Removing and installing windscreen washer fluid level sender	71
3.4 Removing and installing washer pump	73
3.5 Removing and installing washer jets	74
3.6 Adjusting washer jets	74
<b>4 Rear window wiper system</b>	<b>76</b>
4.1 Assembly overview - rear window wiper system	76
4.2 Removing and installing wiper blade	76
4.3 Removing and installing wiper arm	77
4.4 Adjusting wiper arm	78
4.5 Removing and installing rear window wiper motor V12	79
<b>5 Rear window washer system</b>	<b>80</b>
5.1 Assembly overview - rear window washer system	80
5.2 Removing and installing washer fluid reservoir	82
5.3 Removing and installing rear window washer pump	82
5.4 Removing and installing washer jet	83
5.5 Adjusting washer jet	83
<b>6 Headlight washer system</b>	<b>84</b>
6.1 Assembly overview - headlight washer system	84
6.2 Removing and installing washer fluid reservoir	86
6.3 Removing and installing headlight washer system pump V11	87
6.4 Removing and installing washer jets	88
6.5 Adjusting washer jets	89
<b>7 Washer fluid hoses</b>	<b>90</b>
7.1 Repairing washer fluid hoses	90
<b>94 - Lights, bulbs, switches - exterior</b>	<b>91</b>
<b>1 Safety information</b>	<b>91</b>
<b>2 Headlight</b>	<b>92</b>
2.1 Assembly overview - headlight	92
2.2 Removing and installing headlights	101
2.3 Adjusting headlights	106
2.4 Removing and installing front turn signal bulb M5 / M7	114
2.5 Removing and installing bulb for daytime running light and side light L186 / L188	115
2.6 Removing and installing headlight dipped beam bulb	116
2.7 Removing and installing headlight main beam bulb M30 / M32	117
2.8 Removing and installing output module for headlight	118
2.9 Removing and installing LED module for daytime running light and side light L176 / L177	119
2.10 Removing and installing light control unit J1018 / J1023	120
2.11 Removing and installing headlight range control motor V48 / V49	121
2.12 Installing repair kit for headlight housing	124
2.13 Adapting headlights for driving on the left side of the road	124

2.14	Adapting headlights for driving on the right side of the road	124
<b>3</b>	<b>Daytime running lights</b>	<b>125</b>
3.1	Assembly overview - signature lighting	125
3.2	Removing and installing signature lighting	125
3.3	Removing and installing light for signature lighting L275 / L276	126
<b>4</b>	<b>Lights in exterior mirror</b>	<b>127</b>
4.1	Assembly overview - lights in exterior mirror	127
4.2	Removing and installing exterior mirror turn signal bulb L131 / L132	127
<b>5</b>	<b>Lights in sill panel moulding</b>	<b>129</b>
5.1	Assembly overview - entry light	129
<b>6</b>	<b>Tail light clusters</b>	<b>130</b>
6.1	Assembly overview - tail light cluster on body	130
6.2	Removing and installing tail light cluster	132
6.3	Correcting installation position of tail light cluster	134
6.4	Removing and installing bulb carrier	134
<b>7</b>	<b>High-level brake light</b>	<b>136</b>
7.1	Assembly overview - high-level brake light	136
7.2	Removing and installing high-level brake light bulb	136
<b>8</b>	<b>Number plate light</b>	<b>138</b>
8.1	Removing and installing number plate light X4 / X5	138
<b>9</b>	<b>Entry and start authorisation</b>	<b>139</b>
9.1	Overview of fitting locations - entry and start authorisation system	139
9.2	Overview of fitting locations - keyless entry system	141
9.3	Assembly overview - exterior door handle for keyless entry system	143
9.4	Removing and installing front exterior door handle switches	144
9.5	Removing and installing entry and start authorisation control unit J518	145
9.6	Removing and installing interior aerial 1 for entry and start system R138	147
9.7	Removing and installing luggage compartment aerial for entry and start system R137	147
9.8	Removing and installing aerial for entry and start system R134 / R135	148
9.9	Removing and installing rear bumper aerial for entry and start system R136	149
9.10	Alcohol interlock	149
<b>10</b>	<b>Steering column switch module</b>	<b>160</b>
10.1	Assembly overview - steering column switch module	160
10.2	Removing and installing lock cylinder	163
10.3	Removing and installing ignition key withdrawal lock solenoid N376	164
10.4	Removing and installing ignition/starter switch	164
10.5	Removing and installing steering column switch module	166
10.6	Removing and installing steering column electronics control unit J527	169
10.7	Removing and installing steering column combination switch	171
10.8	Removing and installing steering lock housing	171
<b>11</b>	<b>Parking aid</b>	<b>173</b>
<b>12</b>	<b>Park assist steering</b>	<b>174</b>
<b>13</b>	<b>Automatic headlight range control</b>	<b>175</b>
13.1	Assembly overview - automatic headlight range control	175
13.2	Removing and installing headlight range control unit	178
<b>14</b>	<b>Towing bracket</b>	<b>182</b>
14.1	Removing and installing trailer socket U10	182
<b>96 - Lights, bulbs, switches - interior</b>		<b>183</b>
<b>1</b>	<b>Safety information</b>	<b>183</b>
<b>2</b>	<b>Lights</b>	<b>184</b>
2.1	Overview of fitting locations - lights in dash panel	184
2.2	Overview of fitting locations - lights in front doors	185



2.3	Overview of fitting locations - lights in centre console	186
2.4	Overview of fitting locations - lights in luggage compartment	187
2.5	Overview of fitting locations - lights in roof trim	188
2.6	Removing and installing lights for dash panel background lighting	190
2.7	Removing and installing front footwell illumination bulb L151 / L152	191
2.8	Removing and installing central locking SAFELOCK function warning lamp K133	191
2.9	Removing and installing lights for front door background lighting	192
2.10	Removing and installing light for centre console background lighting L193 / L194 / L195 / L196	193
2.11	Removing and installing selector lever position display Y26	194
2.12	Removing and installing luggage compartment light W18 / W35	195
2.13	Removing and installing illuminated vanity mirror W20 / W14	195
2.14	Removing and installing reading light W19 / W13	196
2.15	Renewing bulb for rear reading light W11 / W12	196
<b>3</b>	<b>Controls</b>	<b>199</b>
3.1	Overview of fitting locations - controls in dash panel	200
3.2	Overview of fitting locations - controls in front doors	202
3.3	Overview of fitting locations - controls in rear doors	204
3.4	Overview of fitting locations - controls in centre console	204
3.5	Overview of fitting locations - controls in luggage compartment	205
3.6	Overview of fitting locations - controls in roof trim	206
3.7	Assembly overview - front roof module WX3	207
3.8	Removing and installing light switch E1	208
3.9	Removing and installing headlight range control regulator E102	209
3.10	Removing and installing dash panel insert operating button E493 (9S8)	209
3.11	Removing and installing centre switch module in dash panel EX22	210
3.12	Removing and installing mirror adjustment switch E43 / E168	210
3.13	Removing and installing operating unit for window regulator in driver door E512	211
3.14	Removing and installing front passenger side window regulator button E716	211
3.15	Removing and installing driver side interior locking button for central locking system E308	212
3.16	Removing and installing rear window regulator button E711 / E713	212
3.17	Removing and installing rear interior locking button for central locking system E717 / E718	213
3.18	Removing and installing button for deactivating interior monitoring and vehicle inclination sensor E616	213
3.19	Removing and installing rear lid release switch E165	214
3.20	Removing and installing entry and start authorisation button E408	215
3.21	Removing and installing electromechanical parking brake button E540 / auto hold button E538	215
3.22	Removing and installing rear lid handle release button E234	215
3.23	Removing and installing rear lid warning buzzer H32	216
3.24	Removing and installing button to close rear lid in luggage compartment E406	217
3.25	Removing and installing vanity mirror contact switch F147 / F148	217
3.26	Removing and installing sunroof button E325	217
3.27	Removing and installing front interior light/reading light	218
3.28	Dismantling and assembling front interior light/reading light	219
3.29	Removing and installing rear interior light/reading light	221
<b>4</b>	<b>Anti-theft alarm system</b>	<b>222</b>
4.1	Assembly overview - interior monitoring	222
4.2	Removing and installing alarm horn H12	222
4.3	Removing and installing anti-theft alarm sensor G578	223
<b>5</b>	<b>Immobiliser</b>	<b>224</b>
5.1	Removing and installing immobiliser reader coil	224
<b>6</b>	<b>Lane change assist</b>	<b>225</b>
<b>7</b>	<b>Front camera for driver assist systems</b>	<b>226</b>

<b>8</b>	<b>Cigarette lighter, socket</b> .....	<b>227</b>
8.1	Assembly overview - cigarette lighter, 12 V socket .....	227
8.2	Removing and installing cigarette lighter U1 .....	228
8.3	Removing and installing cigarette lighter illumination bulb L28 .....	229
8.4	Removing and installing 12 V socket U5 .....	229
8.5	Removing and installing socket illumination bulb L42 .....	231
8.6	Removing and installing 12 V socket 2 U18 .....	231
8.7	Renewing 12 V socket 2 U18 .....	232
<b>97</b>	<b>- Wiring</b> .....	<b>234</b>
<b>1</b>	<b>Safety information</b> .....	<b>234</b>
<b>2</b>	<b>Relay carriers, fuse carriers, electronics boxes</b> .....	<b>235</b>
2.1	Overview of fitting locations - relay carriers, fuse carriers, electronics boxes .....	235
2.2	Removing and installing electronics box .....	238
2.3	Removing and installing fuse holder B SB in electronics box .....	240
2.4	Removing and installing fuse holder A SA .....	241
2.5	Removing and installing fuse holder C SC under dash panel (left-side) .....	242
2.6	Removing and installing bracket for control unit .....	242
<b>3</b>	<b>Control units</b> .....	<b>244</b>
3.1	Overview of fitting locations - control units .....	244
3.2	Assembly overview - data bus diagnostic interface .....	247
3.3	Removing and installing onboard supply control unit J519 .....	248
3.4	Removing and installing data bus diagnostic interface J533 .....	251
<b>4</b>	<b>Connectors</b> .....	<b>254</b>
4.1	Overview of fitting locations - connectors .....	254
4.2	Unplugging left door coupling point .....	254
4.3	Removing and installing coupling station at left A-pillar .....	255
4.4	Removing and installing coupling station at right A-pillar .....	256
4.5	Repairing electrical wiring harnesses and electrical connectors .....	256
<b>5</b>	<b>Releasing and dismantling connector housings</b> .....	<b>257</b>
<b>6</b>	<b>Cleaning contact surfaces</b> .....	<b>258</b>
<b>7</b>	<b>Repairing aerial wires</b> .....	<b>259</b>
<b>8</b>	<b>Fibre optic cables</b> .....	<b>260</b>
<b>9</b>	<b>Vehicle diagnostic, testing and information systems</b> .....	<b>261</b>