

Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when working on the high-voltage system	1
1.2 Safety precautions when working in the vicinity of high-voltage components	2
1.3 Safety precautions when working on vehicles with start/stop system	2
1.4 Safety precautions when using testers and measuring instruments during a road test	3
2 Repair instructions	4
2.1 Rules for cleanliness	4
2.2 General notes	4
2.3 Contact corrosion	4
2.4 ESD (electrostatic discharge) workplace	5
2.5 Routing and attachment of lines and wiring	5
2.6 Identification plates	6
2.7 Use of impact wrenches	6
91 - Radio, telephone, navigation	7
1 Safety information	7
2 Infotainment system	8
2.1 Layout - infotainment system	8
2.2 Overview of fitting locations - infotainment system	15
2.3 Removing and installing infotainment system display	16
2.4 Removing and installing control unit 1 for information electronics J794	18
2.5 Removing and installing multimedia system operating unit E380	19
2.6 Removing and installing driver side volume regulator E67	20
3 Sound system	22
3.1 Layout - sound system	22
3.2 Overview of fitting locations - sound system	26
3.3 Removing and installing digital sound package control unit/amplifier	29
3.4 Removing and installing bracket for digital sound package control unit J525	33
3.5 Removing and installing rear treble loudspeakers R14/R16	35
3.6 Removing and installing front treble loudspeakers R20/R22	35
3.7 Removing and installing front mid-range loudspeakers	36
3.8 Removing and installing rear bass loudspeakers R15/R17	37
3.9 Removing and installing front bass loudspeakers R21/R23	38
3.10 Removing and installing subwoofer R211	39
3.11 Removing and installing effect loudspeakers	40
3.12 Removing and installing centre loudspeaker	41
3.13 Removing and installing internal microphone R74	41
4 Aerial systems	43
4.1 Layout - aerial systems	43
4.2 Overview of fitting locations - aerial systems	44
4.3 Removing and installing aerial amplifier	47
4.4 Removing and installing window aerial suppression filter C18	48
4.5 Removing and installing roof aerial	49
4.6 Removing and installing GPS aerial	50
4.7 Removing and installing GSM aerial	50
4.8 Removing and installing LTE aerials	50
4.9 Removing and installing digital radio aerial R183	51
4.10 Removing and installing emergency call module aerials	51
4.11 Removing and installing bumper aerials	52
4.12 Removing and installing traffic data aerial	54
4.13 Removing and installing dedicated short-range communication aerial R269	55



5	Radio	56
5.1	Layout - radio	56
5.2	Overview of fitting locations - radio	56
5.3	Removing and installing radio	56
5.4	Removing and installing digital radio	56
6	Telephone system	57
6.1	Layout - telephone	57
6.2	Overview of fitting locations - telephone system	63
6.3	Assembly overview - microphone unit	64
6.4	Removing and installing front microphone R140/R141	65
6.5	Removing and installing aerial amplifier for mobile telephone R86	66
6.6	Removing and installing telephone bracket R126	67
7	Navigation system	68
7.1	Layout - navigation system	68
7.2	Overview of fitting locations - navigation system	68
7.3	Removing and installing control unit for navigation system	70
7.4	Removing and installing chip card reader control unit	70
8	TV system	72
8.1	Layout - TV system	72
8.2	Overview of fitting locations - TV system	72
8.3	Removing and installing TV tuner	73
9	Multifunction steering wheel	76
9.1	Layout - multifunction steering wheel	76
9.2	Assembly overview - multi-function steering wheel	76
9.3	Removing and installing multifunction buttons in steering wheel E440/E441	78
9.4	Removing and installing tiptronic switches in steering wheel E480/E479	84
9.5	Removing and installing control unit for steering wheel contact detection J1158	84
10	Connection for external multimedia devices	86
10.1	Layout - connection for external multimedia devices	86
10.2	Removing and installing USB charging socket 1 U37	87
10.3	Removing and installing USB connection 1 U41	88
10.4	Removing and installing USB hub R293	89
11	Mobile online services	92
11.1	Layout - mobile online services	92
11.2	Overview of fitting locations - mobile online services	94
11.3	Removing and installing emergency call module control unit and communication unit J949	96
11.4	Removing and installing emergency battery, telematics A16	97
11.5	Removing and installing loudspeaker for emergency call module R335	98