

Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when working on vehicles with start/stop system	1
1.2 Safety precautions when working on the high-voltage system	1
1.3 Safety precautions when working in the vicinity of high-voltage components	2
1.4 Safety precautions when using testers and measuring instruments during a road test	2
1.5 Safety precautions when working on the cooling system	3
2 Repair instructions	4
2.1 Routing and attachment of pipes, hoses and wiring	4
2.2 Contact corrosion	4
2.3 Installation requirements for self-adhesive components	4
2.4 General information on using adhesives	6
2.5 Secure threaded connections	7
2.6 Identification plates	7
2.7 Impact wrenches	7
50 - Body - front	9
1 Safety information	9
2 Lock carrier	10
2.1 Assembly overview - lock carrier	10
2.2 Removing and installing lock carrier	12
2.3 Removing and installing lock carrier cover	17
2.4 Removing and installing air duct for radiator	17
2.5 Removing and installing headlight mounting	18
3 Wing	20
3.1 Assembly overview - wing	20
3.2 Removing and installing wing	22
3.3 Removing and installing wing panel brace	24
3.4 Removing and installing wing panel covers	24
3.5 Removing and installing closure plate	25
4 Bulkhead	27
4.1 Assembly overview - bulkhead	27
4.2 Assembly overview - plenum chamber cover	27
4.3 Removing and installing plenum chamber cover	28
4.4 Removing and installing bulkhead	29
55 - Bonnet, rear lid	31
1 Safety information	31
2 Bonnet	32
2.1 Assembly overview - bonnet	32
2.2 Assembly overview - Bowden cable	34
2.3 Removing and installing bonnet	36
2.4 Adjusting bonnet	36
2.5 Removing and installing hinges	40
2.6 Removing and installing striker	40
2.7 Removing and installing gas strut	41
2.8 Releasing gas from gas strut	42
2.9 Removing and installing insulation	42
2.10 Removing and installing impact guard	42
2.11 Removing and installing Bowden cable	43
2.12 Removing and installing bonnet lock	47
2.13 Removing and installing operating lever for bonnet lock	48



2.14	Removing and installing operating lever for arrester	48
2.15	Removing and installing mounting bracket for operating lever for bonnet lock	49
2.16	Removing and installing mounting bracket with Bowden cable for operating lever for arrester	49
3	Rear lid	50
3.1	Assembly overview - rear lid	50
3.2	Removing and installing rear lid	53
3.3	Adjusting rear lid	53
3.4	Removing and installing hinges	57
3.5	Removing and installing mounting for gas strut/motor for rear lid	57
3.6	Removing and installing rear lid seal	58
3.7	Removing and installing adjusting buffer	58
3.8	Removing and installing gas strut	59
3.9	Preparing gas strut for disposal	59
3.10	Removing and installing rear lid lock	60
3.11	Removing and installing striker	61
3.12	Removing and installing power latching motor for rear lid V382	61
3.13	Removing and installing Bowden cable for power latching system	62
3.14	Removing and installing rear lid drive unit VX69 / rear lid drive unit 2 VX77	63
3.15	Adapting rear lid drive unit VX69 / rear lid drive unit 2 VX77	64
3.16	Preparing rear lid drive unit VX69 / rear lid drive unit 2 VX77 for disposal	64
3.17	Removing and installing rear lid control unit J605	65
4	Tank flap unit	66
4.1	Assembly overview - tank flap unit	66
4.2	Removing and installing tank flap unit	66
4.3	Removing and installing trim panel for tank flap unit	68
4.4	Removing and installing drain hose for tank flap unit	68
4.5	Removing and installing manual release cable for fuel tank flap locking mechanism	69
5	Charging flap unit	70
5.1	Assembly overview - charging flap unit	70
5.2	Removing and installing charging flap unit	70
5.3	Removing and installing charging flap unit trim	71
5.4	Removing and installing manual release cable	72
57	Front doors, door components, central locking	73
1	Safety information	73
2	Door	74
2.1	Assembly overview - door	74
2.2	Assembly overview - door seals	75
2.3	Removing and installing door	76
2.4	Adjusting door	77
2.5	Removing and installing door arrester	81
2.6	Removing and installing inner door seal	82
3	Door components	84
3.1	Assembly overview - window regulator	84
3.2	Assembly overview - door handle and door lock	85
3.3	Assembly overview - window guides and window slot seals	87
3.4	Removing and installing window regulator	87
3.5	Removing and installing window regulator motor	89
3.6	Removing and installing door handle	89
3.7	Removing and installing mounting bracket	91
3.8	Removing and installing operating cable for exterior door handle	92
3.9	Removing and installing lock cylinder	94
3.10	Removing and installing cap on door handle	95
3.11	Removing and installing door lock	97

3.12	Removing and installing cover for door lock	98
3.13	Removing and installing striker	99
3.14	Removing and installing operating cable for interior door handle	99
3.15	Removing and installing inner door cover	99
3.16	Removing and installing window guide	101
3.17	Removing and installing inner window slot seal	101
3.18	Removing and installing outer window slot seal	102
4	Central locking system	104
4.1	Overview of fitting locations - central locking system	104
4.2	Removing and installing driver door control unit J386 and front passenger door control unit J387	105
4.3	Removing and installing rear left door control unit J926 and rear right door control unit J927	106
4.4	Removing and installing interface control unit for vehicle location system J843	106
4.5	Removing and installing bonnet contact switch F266 and bonnet contact switch 2 F329	107
4.6	Removing and installing tank filler flap locking motor V155	108
58	Rear doors, door components	109
1	Safety information	109
2	Door	110
2.1	Assembly overview - door	110
2.2	Assembly overview - door seals	111
2.3	Removing and installing door	113
2.4	Adjusting door	113
2.5	Removing and installing door arrester	118
2.6	Removing and installing inner door seal	119
2.7	Removing and installing outer door seal	119
2.8	Removing and installing side member seal	125
3	Door components	126
3.1	Assembly overview - window regulator	126
3.2	Assembly overview - door handle and door lock	127
3.3	Assembly overview - window guides and window slot seals	128
3.4	Removing and installing window regulator	129
3.5	Removing and installing window regulator motor	130
3.6	Removing and installing door handle	131
3.7	Removing and installing mounting bracket	132
3.8	Removing and installing operating cable for exterior door handle	133
3.9	Removing and installing cap on door handle	134
3.10	Removing and installing door lock	136
3.11	Removing and installing striker	137
3.12	Removing and installing operating cable for interior door handle	137
3.13	Removing and installing inner door cover	138
3.14	Removing and installing window guide	139
3.15	Removing and installing guide rail for door window	140
3.16	Removing and installing inner window slot seal	140
3.17	Removing and installing outer window slot seal	141
60	Sunroof	143
1	Safety information	143
2	Repair instructions	144
2.1	Minimum drying times for bonded sunroofs	144
2.2	Tools and materials required for installation and removal	144
2.3	Preparing new front trim for installation	146
2.4	Preparing a new sunroof frame for installation	147
2.5	Preparing body flange for installation	148
2.6	Cleaning off adhesive sealant	149



3	Sliding sunroof	150
3.1	Assembly overview - sliding sunroof	150
3.2	Assembly overview - glass panel	152
3.3	Assembly overview - sunroof roller blind	152
3.4	Removing and installing sliding sunroof frame	153
3.5	Removing and installing glass panel	155
3.6	Adjusting glass panel	157
3.7	Removing and installing slotted guide	158
3.8	Removing and installing sliding sunroof adjustment control unit J245	160
3.9	Adapting sliding sunroof adjustment control unit J245	161
3.10	Adapting sliding sunroof motor V1	161
3.11	Removing and installing front trim for sliding sunroof	162
3.12	Removing and installing sliding sunroof seals	164
3.13	Removing and installing sunroof roller blind	167
3.14	Removing and installing wind deflector	172
4	Water drain hoses	175
4.1	Assembly overview - water drain hoses	175
4.2	Cleaning water drain hoses	175
4.3	Removing and installing water drain hoses	176
63	Bumpers	178
1	Safety information	178
2	Front bumper	180
2.1	Assembly overview - bumper cover	180
2.2	Assembly overview - bumper carrier	195
2.3	Removing and installing bumper cover	196
2.4	Removing and installing side panel of bumper cover	203
2.5	Adjusting bumper cover	204
2.6	Removing and installing bumper cover mounting	206
2.7	Removing and installing cover for headlight washer jet	208
2.8	Removing and installing adapter for mounting for headlight washer jet	208
2.9	Removing and installing dummy cover in bumper cover	208
2.10	Removing and installing air intake grille	209
2.11	Removing and installing trim for side air intake grille	213
2.12	Removing and installing air duct	214
2.13	Removing and installing adapter	217
2.14	Removing and installing front spoiler for bumper cover	218
2.15	Removing and installing underbody guard	219
2.16	Removing and installing connecting piece	219
2.17	Removing and installing bracket for signature lighting	219
2.18	Removing and installing trim strips	220
2.19	Removing and installing closure plate for bumper cover	225
2.20	Removing and installing bumper carrier	226
3	Rear bumper	228
3.1	Assembly overview - bumper cover	228
3.2	Assembly overview - bumper carrier	241
3.3	Removing and installing bumper cover	242
3.4	Removing and installing upper section of bumper cover	245
3.5	Removing and installing lower section of bumper cover	245
3.6	Removing and installing base plate for bumper cover	247
3.7	Removing and installing bumper cover mounting	248
3.8	Removing and installing trim strip for bumper cover	249
3.9	Removing and installing bumper cover trim	253
3.10	Removing and installing reflector	255
3.11	Removing and installing bumper carrier	256

64 - Glazing	258
1 Safety information	258
2 Repair instructions	259
2.1 Minimum drying times for bonded windows	259
2.2 Repairing windows	259
2.3 Tools and materials required for installation and removal	260
2.4 Preparing undamaged windows for installation	263
2.5 Preparing new windows for installation	264
2.6 Preparing body flange for installation	265
2.7 Cleaning off adhesive sealant	266
3 Windscreen	267
3.1 Assembly overview - windscreen	267
3.2 Removing and installing windscreen	268
4 Rear window	273
4.1 Assembly overview - rear window	273
4.2 Removing and installing rear window	273
5 Door windows	279
5.1 Assembly overview - front door window	279
5.2 Assembly overview - rear door window	279
5.3 Removing and installing front door window	280
5.4 Removing and installing rear door window	281
5.5 Removing and installing fixed rear door window	283
66 - Exterior equipment	285
1 Safety information	285
2 Radiator grille/front trim	286
2.1 Assembly overview - radiator grille	286
2.2 Removing and installing radiator grille	288
2.3 Removing and installing reinforcement strut	289
3 Spoilers	291
3.1 Assembly overview - spoiler	291
3.2 Removing and installing spoiler	292
3.3 Removing and installing spoiler (side)	294
4 Strips/trim panels/extensions	296
4.1 Assembly overview - trim strips	296
4.2 Assembly overview - sill panel trim	297
4.3 Assembly overview - trim panel for A-pillar	297
4.4 Assembly overview - trim panel for B-pillar	298
4.5 Assembly overview - trim panel for C-pillar	299
4.6 Assembly overview - wheel arch covers	300
4.7 Removing and installing cover	301
4.8 Removing and installing sill panel trim	304
4.9 Removing and installing trim panel for A-pillar	307
4.10 Removing and installing trim panel for B-pillar on door	307
4.11 Removing and installing trim panel for C-pillar	308
4.12 Removing and installing wheel arch covers	310
5 Noise insulation	314
5.1 Assembly overview - noise insulation	314
5.2 Removing and installing noise insulation	316
6 Underbody cladding	317
6.1 Assembly overview - underbody cladding	317
6.2 Assembly overview - underbody struts	320
6.3 Removing and installing underbody cladding	322



6.4	Removing and installing tunnel cross-piece	325
7	Exterior mirror	327
7.1	Assembly overview - exterior mirror	327
7.2	Removing and installing exterior mirror	328
7.3	Removing and installing mirror glass	329
7.4	Removing and installing mirror adjustment unit	330
7.5	Removing and installing mirror cover	330
7.6	Removing and installing mirror trim	331
8	Wheel housing liner	332
8.1	Assembly overview - front wheel housing liner	332
8.2	Assembly overview - rear wheel housing liner	332
8.3	Removing and installing front wheel housing liner	333
8.4	Removing and installing wheel spoiler (front)	334
8.5	Removing and installing grille for vented air	334
8.6	Removing and installing rear wheel housing liner	335
9	Lettering and badges	336
9.1	Assembly overview - lettering and badges	336
9.2	Removing and installing lettering	336
9.3	Dimensions - lettering and badges at rear	337
9.4	Dimensions - lettering and badges on sides	338
9.5	Removing and installing lettering and badges for radiator grille	339
10	Towing bracket	343
10.1	Assembly overview - towing bracket	343
10.2	Removing and installing trailer detector control unit J345	343
11	Heat shields	345
11.1	Overview of fitting locations - heat shields	345
11.2	Removing and installing heat shield for tunnel	345
11.3	Removing and installing heat shield for exhaust system (centre)	346
11.4	Removing and installing heat shield for rear silencer	346
11.5	Removing and installing heat shield for propshaft	347