

## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety briefing/employee qualification</b>	<b>1</b>
1.1 Qualification	1
<b>2 Safety information</b>	<b>2</b>
2.1 Safety information	2
2.2 Work that requires high-voltage system to be de-energised	4
2.3 Safety precautions when working on the high-voltage system	4
2.4 Safety precautions when working in the vicinity of high-voltage components	5
2.5 Safety precautions when working on the cooling system	5
2.6 Safety precautions when using testers and measuring instruments during a road test	6
<b>3 Repair instructions</b>	<b>7</b>
3.1 Important notes	7
3.2 Information on handling fine dust, aluminium dust and steel dust	8
3.3 Routing and attaching pipes and wiring	9
3.4 Contact corrosion	9
3.5 Bonding surfaces for self-adhesive components	9
3.6 Secure threaded connections	9
3.7 Identification plates	9
3.8 Impact wrenches	10
3.9 Moulded foam inserts	10
3.10 Bonded joints	12
3.11 Galvanised body panels, high-strength and extra-high-strength steel	13
3.12 Matching the surface contour	17
3.13 Repairing thread for seat belt anchorage	18
<b>4 Processing body structure adhesive D 180 004 M2</b>	<b>19</b>
4.1 Preparing bonding surfaces	20
<b>5 Vehicle identification data</b>	<b>33</b>
5.1 Vehicle identification number	33
5.2 Type plate	34
5.3 Vehicle data sticker	34
<b>6 Body dimensions</b>	<b>35</b>
6.1 Body - front	35
6.2 Body - centre	37
6.3 Floor group	38
6.4 Body - rear	42
<b>7 Tools</b>	<b>44</b>
<b>8 Using edge milling unit -VAS 882 005-</b>	<b>48</b>
8.1 General information	48
8.2 Assembling unit/changing milling tool	51
8.3 Separating flanged edges	61
8.4 Separating panels at corners and along surfaces	67
8.5 Separating outer edges	70
8.6 Renewing roof	73
8.7 Separating laser weld seams using round head milling unit	75
8.8 Aluminium panels	77
<b>9 Straightening jig</b>	<b>80</b>
9.1 Procedure for repairing structural body damage on Audi vehicles	80
<b>50 - Body - front</b>	<b>81</b>
<b>1 Safety information</b>	<b>81</b>
<b>2 Renewing engine console (right-side)</b>	<b>82</b>



2.1	Tools	82
2.2	Procedure	83
<b>3</b>	<b>Renewing mounting bracket (for subframe)</b>	<b>87</b>
3.1	Tools	87
3.2	Procedure	88
<b>4</b>	<b>Renewing upper wheel housing longitudinal member</b>	<b>97</b>
4.1	Tools	97
4.2	Procedure	98
<b>5</b>	<b>Renewing front wheel housing</b>	<b>104</b>
5.1	Tools	104
5.2	Procedure	105
<b>6</b>	<b>Renewing front longitudinal member</b>	<b>110</b>
6.1	Tools	110
6.2	Procedure	111
<b>7</b>	<b>Renewing front longitudinal member (left-side) - partial renewal</b>	<b>116</b>
7.1	Tools	116
7.2	Procedure	117
<b>8</b>	<b>Renewing front longitudinal member (right-side) - partial renewal</b>	<b>124</b>
8.1	Tools	124
8.2	Procedure	125
<b>9</b>	<b>Renewing impact damper plate</b>	<b>132</b>
9.1	Tools	132
9.2	Procedure	133
<b>10</b>	<b>Renewing upper footwell cross member</b>	<b>136</b>
10.1	Tools	136
10.2	Procedure	137
<b>11</b>	<b>Renewing outer footwell cross member - partial renewal</b>	<b>143</b>
11.1	Tools	143
11.2	Procedure	144
<b>12</b>	<b>Repairing threads for attachment of subframe</b>	<b>150</b>
12.1	Tools	150
<b>51 - Body - centre</b>		<b>157</b>
<b>1</b>	<b>Safety information</b>	<b>157</b>
<b>2</b>	<b>Permitted separating cuts on complete side panel</b>	<b>158</b>
<b>3</b>	<b>Renewing roof</b>	<b>159</b>
3.1	Tools	159
3.2	Procedure	165
<b>4</b>	<b>Renewing roof (vehicles with panoramic tilting sunroof)</b>	<b>180</b>
4.1	Tools	180
4.2	Procedure	186
<b>5</b>	<b>Renewing roof side member</b>	<b>200</b>
5.1	Tools	200
5.2	Procedure	201
<b>6</b>	<b>Renewing front roof cross member</b>	<b>208</b>
6.1	Tools	208
6.2	Procedure	209
<b>7</b>	<b>Renewing front roof cross member (vehicles with panoramic sunroof)</b>	<b>212</b>
7.1	Tools	212
7.2	Procedure	213
<b>8</b>	<b>Renewing rear roof cross member</b>	<b>220</b>
8.1	Tools	220
8.2	Procedure	221

<b>9</b>	<b>Renewing outer A-pillar</b>	<b>226</b>
9.1	Tools	226
9.2	Procedure	227
<b>10</b>	<b>Renewing upper inner A-pillar</b>	<b>232</b>
10.1	Tools	232
10.2	Procedure	233
<b>11</b>	<b>Renewing upper inner A-pillar - partial renewal</b>	<b>241</b>
11.1	Tools	241
11.2	Procedure	242
<b>12</b>	<b>Renewing lower inner A-pillar - partial renewal</b>	<b>254</b>
12.1	Tools	254
12.2	Procedure	255
<b>13</b>	<b>Renewing inner A-pillar reinforcement</b>	<b>260</b>
13.1	Tools	260
13.2	Procedure	261
<b>14</b>	<b>Renewing outer B-pillar</b>	<b>265</b>
14.1	Tools	265
14.2	Procedure	266
<b>15</b>	<b>Renewing inner B-pillar</b>	<b>273</b>
15.1	Tools	273
15.2	Procedure	274
<b>16</b>	<b>Inner B-pillar - Partial renewal</b>	<b>280</b>
16.1	Tools	280
16.2	Procedure	281
<b>17</b>	<b>Renewing outer side member</b>	<b>295</b>
17.1	Tools	295
17.2	Procedure	296
<b>18</b>	<b>Renewing inner side member</b>	<b>301</b>
18.1	Tools	301
18.2	Procedure	302
<b>19</b>	<b>Renewing mounting for inner seat cross member</b>	<b>305</b>
19.1	Tools	305
19.2	Procedure	306
<b>20</b>	<b>Renewing mounting for outer seat cross member</b>	<b>310</b>
20.1	Tools	310
20.2	Procedure	311
<b>21</b>	<b>Renewing centre seat cross member</b>	<b>315</b>
21.1	Tools	315
21.2	Procedure	316
<b>22</b>	<b>Renewing mounting for seat cross member - e-tron</b>	<b>320</b>
22.1	Tools	320
22.2	Procedure	321
<b>23</b>	<b>Renewing floor panel</b>	<b>329</b>
23.1	Tools	329
23.2	Procedure	330
<b>24</b>	<b>Renewing centre tunnel</b>	<b>335</b>
24.1	Tools	335
24.2	Procedure	336
<b>53 - Body - rear</b>		<b>341</b>
1	Safety information	341
2	Permitted separating cuts on complete side panel	342



<b>3</b>	<b>Renewing rear upper cross panel</b> .....	<b>343</b>
3.1	Tools .....	344
3.2	Procedure .....	344
<b>4</b>	<b>Renewing rear cross panel</b> .....	<b>349</b>
4.1	Tools .....	350
4.2	Procedure .....	350
<b>5</b>	<b>Renewing tail light mounting</b> .....	<b>354</b>
5.1	Tools .....	355
5.2	Procedure .....	355
<b>6</b>	<b>Renewing rear longitudinal member - part section</b> .....	<b>359</b>
6.1	Tools .....	360
6.2	Procedure .....	360
<b>7</b>	<b>Renewing side panel</b> .....	<b>366</b>
7.1	Tools .....	367
7.2	Procedure .....	368
<b>8</b>	<b>Renewing luggage compartment floor</b> .....	<b>374</b>
8.1	Tools .....	374
8.2	Procedure .....	375
<b>9</b>	<b>Renewing luggage compartment floor (quattro)</b> .....	<b>380</b>
9.1	Tools .....	381
9.2	Procedure .....	382
<b>10</b>	<b>Renewing rear wheel housing</b> .....	<b>388</b>
10.1	Tools .....	389
10.2	Procedure .....	389