

## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety precautions when working on vehicles with high-voltage system	1
1.2 Safety precautions when working in the vicinity of high-voltage components	2
1.3 Safety precautions when handling refrigerants	2
1.4 Safety precautions when working on air conditioners	3
1.5 Safety precautions when working on vehicles with start/stop system	3
1.6 Safety precautions when using testers and measuring instruments during a road test	3
1.7 Safety precautions when working on the cooling system	4
<b>2 Identification</b>	<b>5</b>
2.1 Identification of heater and air conditioning unit	5
<b>3 General notes</b>	<b>7</b>
3.1 Type plates	7
3.2 Notes on odours in vehicles without air conditioner	9
3.3 Notes on odours in vehicles with air conditioner	10
3.4 Notes on operation of auxiliary/supplementary heater on vehicles with diesel engine	12
3.5 Seat heating	14
3.6 Heated rear window	16
3.7 Neck heating	19
3.8 Auxiliary air conditioner - vehicles with high-voltage system only	21
<b>4 Repair instructions</b>	<b>23</b>
4.1 Rules for cleanliness	23
4.2 General notes	23
4.3 Contact corrosion	24
4.4 Routing and attachment of pipes, hoses and wiring	24
4.5 Installing radiators and condensers	24
4.6 Checking heating output	25
4.7 Checking cooling output	47
4.8 Discharging refrigerant circuit	76
4.9 Working on refrigerant circuit	77
4.10 Paintwork repairs on vehicles with air conditioning system	78
4.11 Refrigerant circuit seals	78
4.12 Notes on control motors	79
4.13 Notes on dust and pollen filter	81
4.14 Notes on high-voltage heater (PTC) Z115 (and high-voltage heater (PTC) control unit J848)	82
4.15 Notes on high-voltage components and potential equalisation lines	84
4.16 Use of impact wrenches	84
4.17 Identification plates	85
<b>5 Technical data</b>	<b>86</b>
5.1 Refrigerant capacities	86
5.2 Approved refrigerant oils and refrigerant oil capacities	88
5.3 Oil distribution	95
<b>80 - Heating</b>	<b>96</b>
<b>1 Safety information</b>	<b>96</b>
<b>2 Overview of fitting locations - heater</b>	<b>97</b>
2.1 Overview of fitting locations - components not located in passenger compartment	97
2.2 Overview of fitting locations - components in passenger compartment (front)	100
<b>3 Heater</b>	<b>103</b>
3.1 Assembly overview - heater unit	103
3.2 Removing and installing fresh air blower V2	109



3.3	Removing and installing fresh air blower control unit J126	110
3.4	Removing and installing auxiliary air heater element Z35	110
3.5	Removing and installing temperature flap control motor V68 with potentiometer G92	110
3.6	Removing and installing air recirculation flap control motor V113	110
3.7	Removing and installing air distribution flap control motor V428 with potentiometer G645	110
3.8	Removing and installing dust and pollen filter	111
3.9	Removing and installing heat exchanger	111
3.10	Removing and installing heater unit	111
3.11	Dismantling and assembling heater unit	111
<b>4</b>	<b>Air duct</b>	<b>112</b>
4.1	Assembly overview - routing of air flow and air distribution in passenger compartment	112
4.2	Removing and installing vents (front)	112
4.3	Removing and installing fresh air intake	112
4.4	Checking forced ventilation vents in passenger compartment	112
4.5	Removing and installing forced ventilation vents in passenger compartment	112
4.6	Checking plenum chamber water drain	112
<b>5</b>	<b>Operating and display unit</b>	<b>113</b>
5.1	Overview of fitting locations - operating and display unit	113
5.2	Removing and installing operating and display unit	115
<b>6</b>	<b>Further control components</b>	<b>116</b>
6.1	Removing and installing ambient temperature sensor G17	116
6.2	Removing and installing continued coolant circulation pump V51 / auxiliary pump for heating V488	116
6.3	Removing and installing coolant shut-off valve N82	116
<b>87</b>	<b>Air conditioning system</b>	<b>117</b>
<b>1</b>	<b>Safety information</b>	<b>117</b>
<b>2</b>	<b>Overview of fitting locations - air conditioner</b>	<b>118</b>
2.1	Overview of fitting locations - components not located in passenger compartment	118
2.2	Overview of fitting locations - components in passenger compartment (front)	131
<b>3</b>	<b>Refrigerant circuit</b>	<b>138</b>
3.1	System overview - refrigerant circuit	138
3.2	Exploded view - condenser, air conditioner compressor, refrigerant lines and expansion valve	150
3.3	Removing and installing pressure sender for refrigerant circuit G805	165
3.4	Removing and installing refrigerant pressure and temperature sender G395	167
3.5	Checking cut-in signal for air conditioner compressor regulating valve N280	169
3.6	Removing and installing refrigerant shut-off valve for heater and air conditioning unit N541	173
3.7	Removing and installing refrigerant shut-off valve for high-voltage battery heat exchanger N542	177
3.8	Additional weight at refrigerant line	180
3.9	Removing and installing expansion valve	180
3.10	Detaching and attaching refrigerant lines at condenser	183
3.11	Removing and installing condenser	191
3.12	Removing and installing desiccant cartridge	197
3.13	Removing and installing refrigerant lines with internal heat exchanger	208
3.14	Differences in service connections depending on refrigerant (R134a or R1234yf)	214
3.15	Removing and installing service connections (low and high-pressure sides)	217
3.16	Starting up air conditioner after charging refrigerant circuit	219
<b>4</b>	<b>Air conditioner compressor</b>	<b>224</b>
4.1	Exploded view - drive unit for air conditioner compressor	224
4.2	Exploded view - pulley, mechanically driven air conditioner compressor	233
4.3	Detaching and attaching air conditioner compressor at bracket	239
4.4	Detaching and attaching refrigerant lines at air conditioner compressor	248
4.5	Removing and installing air conditioner compressor	255

4.6	Removing and installing pulley .....	260
<b>5</b>	<b>Control motors .....</b>	<b>264</b>
5.1	Removing and installing temperature flap control motor V68 with potentiometer G92 .....	264
5.2	Removing and installing defroster flap control motor V107 with potentiometer G135 .....	266
5.3	Removing and installing air recirculation flap control motor V113 .....	268
5.4	Removing and installing left temperature flap control motor V158 with potentiometer G220 .....	270
5.5	Removing and installing right temperature flap control motor V159 with potentiometer G221 .....	272
5.6	Removing and installing fresh air/air recirculation, air flow flap control motor V425 with potentiometer G644 .....	274
5.7	Removing and installing actuator for fresh air/air recirculation, air flow flap .....	277
5.8	Removing and installing air distribution flap control motor V428 with potentiometer G645 .....	279
5.9	Removing and installing front air distribution flap control motor V426 with potentiometer G642 .....	282
5.10	Removing and installing actuator for air distribution flap .....	285
<b>6</b>	<b>Front heater and air conditioning unit .....</b>	<b>289</b>
6.1	Exploded view - heater and air conditioning unit .....	289
6.2	Exploded view - attachments for heater and air conditioning unit and air intake box .....	297
6.3	Exploded view - evaporator housing .....	300
6.4	Exploded view - flaps and partitions in air distribution housing .....	302
6.5	Removing and installing evaporator .....	305
6.6	Cleaning evaporator .....	308
6.7	Removing and installing evaporator output temperature sender G263 .....	315
6.8	Removing and installing vent temperature sender G150/G151 .....	316
6.9	Removing and installing heater and air conditioning unit .....	317
6.10	Removing and installing retainers for heater and air conditioning unit .....	321
6.11	Dismantling and assembling heater and air conditioning unit .....	322
6.12	Removing and installing air distribution housing .....	324
6.13	Removing and installing dust and pollen filter .....	325
6.14	Removing and installing fresh air blower V2 .....	327
6.15	Removing and installing fresh air blower control unit J126 .....	329
6.16	Removing and installing footwell vent temperature sender G192 .....	330
6.17	Removing and installing auxiliary air heater element Z35 .....	331
6.18	Removing and installing heat exchanger .....	333
6.19	Removing and installing coolant pipes at heat exchanger .....	345
6.20	Checking condensation drain hose .....	350
6.21	Removing and installing condensation drain hose .....	355
<b>7</b>	<b>Air duct .....</b>	<b>359</b>
7.1	Assembly overview - routing of air flow and air distribution in passenger compartment ..	359
7.2	Removing and installing vents (front) .....	363
7.3	Removing and installing vents (rear) .....	367
7.4	Removing and installing air ducts .....	369
7.5	Removing and installing intake duct .....	370
7.6	Removing and installing drip rail .....	370
7.7	Removing and installing fresh air intake .....	371
7.8	Checking forced ventilation vents in passenger compartment .....	373
7.9	Removing and installing forced ventilation vents in passenger compartment .....	376
7.10	Checking plenum chamber water drain .....	379
<b>8</b>	<b>Operating and display unit .....</b>	<b>381</b>
8.1	Overview of fitting locations - operating and display unit .....	381
8.2	Removing and installing operating and display unit J65/J301/J255 .....	385
<b>9</b>	<b>Coolant circuit .....</b>	<b>390</b>
9.1	Integration of high-voltage heater (PTC) Z115 into coolant circuit .....	390
9.2	Integration of heat exchanger for high-voltage battery into coolant circuit of high-voltage system .....	395
9.3	Removing and installing coolant valve for high-voltage battery N688 .....	398



9.4	Removing and installing coolant pump for high-voltage battery V590 .....	398
9.5	Removing and installing continued coolant circulation pump V51 .....	398
9.6	Removing and installing coolant shut-off valve N82 .....	399
9.7	Removing and installing coolant changeover valve 1 N632 .....	399
9.8	Removing and installing coolant changeover valve 2 N633 .....	399
9.9	Removing and installing heat exchanger for high-voltage battery .....	400
9.10	Removing and installing high-voltage heater (PTC) Z115 (with high-voltage heater (PTC) control unit J848) .....	404
<b>10</b>	<b>Further control components .....</b>	<b>411</b>
10.1	Removing and installing sunlight penetration photosensor G107 .....	411
10.2	Removing and installing ambient temperature sensor G17 .....	412
10.3	Operation of air quality sensor G238 .....	414
10.4	Checking air quality sensor G238 .....	417
10.5	Operation of humidity sender in fresh air intake duct G657 .....	420
10.6	Removing and installing air quality sensor G238/humidity sender in fresh air intake duct G657 .....	421
10.7	Removing and installing sensors G355/G397/G107 .....	422
10.8	Removing and installing fuse for electrical air conditioner compressor .....	423