

Contents

00 - Technical data	1
1 Identification	1
1.1 Identification of final drive	1
2 Technical data	3
2.1 Capacities	3
2.2 Allocation of gearbox to engine	3
3 Overview - power transmission	8
3.1 Overview - power transmission, all-wheel drive	8
4 Repair instructions	10
4.1 General repair instructions	10
4.2 Contact corrosion	13
5 Safety information	14
5.1 General safety regulations	14
5.2 Safety precautions when using testers and measuring instruments during a road test	14
5.3 Safety precautions when working on vehicles with start/stop system	15
6 Electrical components	16
6.1 Overview of fitting locations - electrical components	16
39 - Final drive - rear differential	17
1 Propshaft	17
1.1 Assembly overview - propshaft	17
1.2 Removing and installing propshaft	21
1.3 Removing and installing rear flexible coupling	38
2 Final drive	45
2.1 Assembly overview - final drive	45
2.2 Removing and installing final drive	46
3 Assembly mountings	70
3.1 Assembly overview - assembly mountings	70
3.2 Removing and installing bonded rubber bushes	70
4 Oil seals	76
4.1 Overview of fitting locations - oil seals	76
4.2 Renewing left oil seal	77
4.3 Renewing right oil seal	80
4.4 Renewing input shaft oil seal	82
5 Gear oil	91
5.1 Overview of fitting locations - drain and inspection plugs	91
5.2 Checking gear oil level	91
6 All-wheel drive coupling	94
6.1 Assembly overview - all-wheel drive coupling	94
6.2 Checking operation	96
6.3 Removing and installing all-wheel drive coupling	97
6.4 Removing and installing all-wheel drive coupling pump	103
6.5 Removing and installing control unit	105
6.6 Checking oil level	109
6.7 Draining and filling oil for all-wheel drive coupling	110