

## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety precautions when working on vehicles with start/stop system	1
1.2 Safety precautions when using testers and measuring instruments during a road test	1
<b>2 Identification</b>	<b>2</b>
2.1 Gearbox identification	2
<b>3 Technical data</b>	<b>4</b>
3.1 Allocation of gearbox to engine	4
3.2 Capacities	4
<b>4 Overview - power transmission</b>	<b>5</b>
<b>5 Repair instructions</b>	<b>6</b>
5.1 General repair instructions	6
5.2 Contact corrosion	8
<b>6 Electrical components</b>	<b>10</b>
6.1 Overview of fitting locations - electrical components	10
<b>30 - Clutch</b>	<b>12</b>
<b>1 Clutch mechanism</b>	<b>12</b>
1.1 Assembly overview - pedal cluster	12
1.2 Assembly overview - clutch hydraulics	14
1.3 Function check for clutch master cylinder and slave cylinder	18
1.4 Removing and installing clutch pedal	19
1.5 Removing and installing over-centre spring	20
1.6 Removing and installing return spring	21
1.7 Removing and installing mounting bracket	23
1.8 Removing and installing bearing bush	25
1.9 Removing and installing clutch master cylinder	26
1.10 Removing and installing clutch slave cylinder	27
1.11 Removing and installing lines for clutch mechanism	28
1.12 Bleeding clutch mechanism	30
1.13 Removing and installing clutch position sender G476	32
1.14 Servicing clutch release mechanism	32
<b>2 Clutch</b>	<b>33</b>
2.1 Identifying different makes of clutch	33
2.2 Assembly overview - clutch	34
2.3 Removing and installing clutch	37
<b>34 - Controls, housing</b>	<b>51</b>
<b>1 Selector mechanism</b>	<b>51</b>
1.1 Installation position - selector mechanism	51
1.2 Assembly overview - gear knob and cover	51
1.3 Assembly overview - selector mechanism	52
1.4 Removing and installing gear knob	59
1.5 Removing and installing selector mechanism	60
1.6 Adjusting selector mechanism	63
1.7 Checking selector mechanism	67
1.8 Renewing selector shaft oil seal	67
<b>2 Removing and installing gearbox</b>	<b>70</b>
2.1 Removing gearbox	70
2.2 Installing gearbox	85
2.3 Tightening torques for gearbox	89
<b>3 Assembly mountings</b>	<b>91</b>



3.1	Assembly overview - assembly mountings	91
<b>4</b>	<b>Transporting gearbox</b>	<b>94</b>
<b>5</b>	<b>Gear oil</b>	<b>96</b>
5.1	Checking gear oil level	96
5.2	Draining and filling gear oil	96
<b>6</b>	<b>Dismantling and assembling gearbox</b>	<b>99</b>
6.1	Assembly overview - selector unit	99
6.2	Removing and installing selector unit	99
6.3	Servicing selector unit	101
6.4	Dismantling and assembling gearbox	102
<b>35</b>	<b>Gears, shafts</b>	<b>103</b>
1	Input shaft	103
2	Output shaft	104
<b>39</b>	<b>Final drive - differential</b>	<b>105</b>
<b>1</b>	<b>Oil seals</b>	<b>105</b>
1.1	Overview of fitting locations - oil seals	105
1.2	Renewing left oil seal	105
1.3	Renewing right oil seal with sleeve	107
<b>2</b>	<b>Differential</b>	<b>111</b>
2.1	Removing and installing left flange shaft	111
2.2	Removing and installing right flange shaft	112
2.3	Dismantling and assembling differential	113