

Contents

00 - Technical data	1
1 Identification	1
1.1 Gearbox identification	1
2 Technical data	2
2.1 Allocation of gearbox to engine	2
2.2 Capacities	3
2.3 Calculating gear ratios	4
3 Overview - power transmission	5
3.1 Overview - power transmission, front-wheel drive	5
4 Safety information	6
4.1 General safety regulations	6
4.2 Safety precautions when working on vehicles with start/stop system	6
4.3 Safety precautions when using testers and measuring instruments during a road test	6
5 Repair instructions	8
5.1 General repair instructions	8
5.2 Contact corrosion	13
6 Electrical components	15
6.1 Overview of fitting locations - electrical components	15
30 - Clutch	16
1 Clutch mechanism	16
1.1 Overview of fitting locations - clutch mechanism	16
1.2 Assembly overview - pedal cluster	17
1.3 Assembly overview - clutch hydraulics	19
1.4 Assembly overview - clutch release mechanism	23
1.5 Function check for clutch master cylinder and slave cylinder	23
1.6 Removing and installing clutch position sender G476	25
1.7 Removing and installing return spring	25
1.8 Removing and installing over-centre spring	31
1.9 Removing and installing clutch pedal	35
1.10 Removing and installing mounting bracket	37
1.11 Removing and installing bearing bush	43
1.12 Removing and installing clutch master cylinder	45
1.13 Removing and installing clutch slave cylinder	45
1.14 Removing and installing lines for clutch mechanism	47
1.15 Bleeding clutch mechanism	49
1.16 Servicing clutch release mechanism	51
2 Clutch	53
2.1 Assembly overview - clutch	53
2.2 Removing and installing clutch	53
34 - Controls, housing	59
1 Selector mechanism	59
1.1 Overview - selector mechanism	59
1.2 Assembly overview - gear knob and cover	60
1.3 Assembly overview - selector mechanism	61
1.4 Assembly overview - selector cables	69
1.5 Removing and installing gear knob	71
1.6 Removing and installing selector mechanism	72
1.7 Dismantling and assembling selector mechanism	76
1.8 Adjusting selector mechanism	84
1.9 Checking selector mechanism	87



1.10	Renewing selector shaft oil seal	87
2	Removing and installing gearbox	89
2.1	Removing gearbox	89
2.2	Installing gearbox	110
2.3	Tightening torques for gearbox	113
3	Transporting gearbox	115
4	Assembly mountings	117
4.1	Assembly overview - assembly mountings	117
5	Gear oil	120
5.1	Checking gear oil level	120
6	Securing to engine and gearbox support	122
7	Dismantling and assembling gearbox	123
7.1	Schematic overview - gearbox	123
7.2	Assembly overview - gearbox	124
7.3	Assembly overview - gearbox housing cover and 5th/6th gear	124
7.4	Assembly overview - clutch housing	126
7.5	Assembly overview - input shaft, output shaft, differential, selector mechanism and selector forks	127
7.6	Assembly overview - selector unit	129
7.7	Assembly overview - selector forks	130
7.8	Servicing selector unit	131
7.9	Servicing selector forks	134
7.10	Dismantling and assembling gearbox	138
8	Gearbox housing, clutch housing	159
8.1	Assembly overview - gearbox housing and clutch housing	159
8.2	Assembly overview - gearbox housing cover	161
8.3	Servicing gearbox housing cover	162
35 - Gears, shafts		165
1	Input shaft	165
1.1	Assembly overview - input shaft	165
1.2	Dismantling and assembling input shaft	168
1.3	Renewing input shaft oil seal	178
2	Output shaft	181
2.1	Assembly overview - output shaft	181
2.2	Dismantling and assembling output shaft	184
39 - Final drive - differential		192
1	Oil seals	192
1.1	Overview of fitting locations - oil seals	192
1.2	Renewing left oil seal	192
1.3	Renewing right oil seal	195
2	Differential	198
2.1	Assembly overview - differential	198
2.2	Removing and installing left flange shaft	200
2.3	Removing and installing right flange shaft	203
2.4	Dismantling and assembling differential	204
2.5	Adjusting differential	211