

Contents

00 - Technical data	1
1 Safety information	1
2 Identification	2
2.1 Gearbox identification	2
3 Technical data	4
3.1 Capacities	4
4 Repair instructions	5
4.1 General repair instructions	5
4.2 Contact corrosion	11
30 - Clutch	12
1 Clutch mechanism	12
1.1 Assembly overview - clutch release mechanism	12
1.2 Servicing clutch release mechanism	14
2 Clutch	16
2.1 Assembly overview - clutch	16
2.2 Removing and installing clutch	19
34 - Controls, housing	28
1 Selector mechanism	28
2 Gear oil	29
3 Removing and installing gearbox	30
4 Transporting gearbox	31
5 Securing to engine and gearbox support	33
6 Dismantling and assembling gearbox	35
6.1 Schematic overview - gearbox	35
6.2 Assembly overview - gearbox	36
6.3 Assembly overview - gearbox housing cover and 5th/6th gear	36
6.4 Assembly overview - gearbox/transmission unit housing and selector mechanism	39
6.5 Assembly overview - input shaft, output shaft, differential and selector forks	41
6.6 Assembly overview - selector forks	43
6.7 Servicing selector forks	46
6.8 Removing gearbox housing cover and 5th/6th gear	51
6.9 Dismantling and assembling gearbox	58
6.10 Installing 5th/6th gear and gearbox housing cover	76
7 Gearbox housing, clutch housing	83
7.1 Assembly overview - gearbox housing and clutch housing	83
7.2 Assembly overview - gearbox housing cover	85
7.3 Servicing gearbox/transmission unit housing	86
7.4 Servicing gearbox housing cover	93
35 - Gears, shafts	96
1 Input shaft	96
1.1 Assembly overview - input shaft	96
1.2 Dismantling and assembling input shaft	98
1.3 Adjusting input shaft	104
1.4 Renewing input shaft oil seal	109
2 Output shaft	111
2.1 Assembly overview - output shaft	111
2.2 Dismantling and assembling output shaft	115
2.3 Adjusting output shaft	131



3	Reverse shaft	137
3.1	Assembly overview - reverse shaft	137
3.2	Dismantling and assembling reverse shaft	139
39	Final drive - differential	143
1	Oil seals	143
1.1	Overview of fitting locations - oil seals	143
1.2	Renewing left oil seal	143
1.3	Renewing right oil seal	146
2	Differential	152
2.1	Assembly overview - differential	152
2.2	Dismantling and assembling differential	154
2.3	Adjusting differential	162
3	Table of adjustments	167