

Contents

00 - Technical data	1
1 Identification	1
1.1 Gearbox identification	1
1.2 Identification of bevel box	4
2 Technical data	5
2.1 Allocation of gearbox to engine	5
2.2 Capacities	5
2.3 Calculating gear ratios	5
3 Overview - power transmission	7
3.1 Overview - power transmission, front-wheel drive	7
3.2 Overview - power transmission, all-wheel drive	8
4 Repair instructions	11
4.1 Use of impact wrenches	11
4.2 General repair instructions	11
4.3 Contact corrosion	17
30 - Clutch	18
1 Clutch mechanism	18
1.1 Assembly overview - clutch release mechanism	18
1.2 Removing and installing clutch slave cylinder together with release bearing	20
34 - Controls, housing	23
1 Gear oil	23
1.1 Distinguishing manual gearboxes for oil filling	23
1.2 Checking gear oil level	23
2 Securing to engine and gearbox support	25
3 Dismantling and assembling gearbox	26
3.1 Schematic overview - gearbox	26
3.2 Assembly overview - gearbox	27
3.3 Assembly overview - gearbox/transmission unit housing and selector mechanism	29
3.4 Assembly overview - selector unit	31
3.5 Assembly overview - input shaft, output shafts, differential and selector rods	33
3.6 Assembly overview - selector forks	37
3.7 Dismantling and assembling gearbox	38
4 Gearbox housing, clutch housing	63
4.1 Assembly overview - gearbox housing	63
4.2 Assembly overview - clutch housing	65
4.3 Servicing gearbox/transmission unit housing	67
4.4 Servicing clutch housing	77
35 - Gears, shafts	81
1 Input shaft	81
1.1 Assembly overview - input shaft	81
1.2 Dismantling and assembling input shaft	82
1.3 Renewing input shaft oil seal	88
2 Output shaft	90
2.1 Assembly overview - output shaft	90
2.2 Dismantling and assembling output shaft	98
2.3 Adjusting output shaft	129
39 - Final drive - differential	141
1 Oil seals	141



1.1	Overview of fitting locations - oil seals	141
1.2	Renewing left oil seal	143
1.3	Renewing right oil seal	145
2	Table of adjustments	153
3	Differential	154
3.1	Assembly overview - differential	154
3.2	Dismantling and assembling differential	160
3.3	Adjusting differential	175
4	Bevel box	181
4.1	Assembly overview - bevel box	181
4.2	Renewing oil seals for bevel box	185
4.3	Renewing output flange and re-determining shim for output flange	206
4.4	Renewing needle bearings (polygon bearings) and seal for needle bearing on flange shaft (right-side)	207