

## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety precautions when working on vehicles with start/stop system	1
1.2 Safety precautions when using testers and measuring instruments during a road test	1
1.3 Safety precautions when working on mechatronic unit for dual clutch gearbox J743	1
1.4 Safety precautions when tow-starting and towing	2
1.5 General safety regulations	3
<b>2 Identification</b>	<b>4</b>
2.1 Gearbox identification	4
<b>3 Repair instructions</b>	<b>5</b>
3.1 General notes	5
3.2 Rules for cleanliness	8
3.3 General repair instructions	8
3.4 Contact corrosion	10
3.5 Use of impact wrenches	10
<b>4 Technical data</b>	<b>12</b>
4.1 Capacities	12
<b>30 - Clutch</b>	<b>13</b>
<b>1 Clutch mechanism</b>	<b>13</b>
<b>2 Clutch</b>	<b>14</b>
<b>34 - Controls, housing</b>	<b>15</b>
<b>1 Mechatronic unit</b>	<b>15</b>
1.1 Assembly overview - mechatronic unit	15
1.2 Removing and installing mechatronic unit	15
<b>2 Selector mechanism</b>	<b>17</b>
2.1 Assembly overview - selector lever handle	17
2.2 Assembly overview - selector mechanism	17
2.3 Manual release from position P	18
2.4 Removing and installing selector lever handle	19
2.5 Bringing interlock button in handle into installation position	21
2.6 Removing and installing selector mechanism	23
2.7 Checking selector mechanism	24
2.8 Checking and adjusting selector lever cable	27
2.9 Renewing selector shaft oil seal	29
<b>3 Removing and installing gearbox</b>	<b>30</b>
3.1 Tightening torques for gearbox	30
3.2 Removing gearbox	31
3.3 Installing gearbox	38
<b>4 Assembly mountings</b>	<b>42</b>
4.1 Assembly overview - assembly mountings	42
<b>5 Transporting gearbox</b>	<b>45</b>
<b>6 Securing to engine and gearbox support</b>	<b>46</b>
<b>7 Gear oil</b>	<b>47</b>
7.1 Draining and filling gear oil	47
7.2 Draining and filling hydraulic fluid for mechatronic unit	49
<b>35 - Gears, shafts</b>	<b>50</b>
<b>1 Parking lock</b>	<b>50</b>
1.1 Removing and installing cover for parking lock	50



1.2	Removing and installing parking lock .....	50
<b>39</b>	<b>- Final drive - differential .....</b>	<b>51</b>
<b>1</b>	<b>Oil seals .....</b>	<b>51</b>
1.1	Overview of fitting locations - oil seals .....	51
1.2	Renewing left oil seal .....	51
1.3	Renewing right oil seal .....	53
<b>2</b>	<b>Differential .....</b>	<b>55</b>
2.1	Assembly overview - differential .....	55
2.2	Removing and installing left flange shaft .....	55
2.3	Removing and installing right flange shaft .....	57
<b>3</b>	<b>Gearbox control system .....</b>	<b>60</b>
3.1	Overview of fitting locations - gearbox control system .....	60
3.2	Basic settings for dual clutch gearbox .....	62