

Contents

| | |
|--|-----------|
| 00 - Technical data | 1 |
| 1 Identification | 1 |
| 1.1 Gearbox identification | 1 |
| 1.2 Identification of bevel box | 2 |
| 2 Technical data | 3 |
| 2.1 Capacities | 3 |
| 3 Safety information | 4 |
| 3.1 General safety regulations | 4 |
| 3.2 Safety precautions when working on vehicles with start/stop system | 4 |
| 3.3 Safety precautions when using testers and measuring instruments during a road test | 5 |
| 3.4 Safety precautions when tow-starting and towing | 5 |
| 4 Repair instructions | 6 |
| 4.1 General notes | 6 |
| 4.2 Rules for cleanliness | 6 |
| 4.3 General repair instructions | 6 |
| 4.4 Contact corrosion | 8 |
| 30 - Clutch | 9 |
| 1 Clutch | 9 |
| 1.1 Assembly overview - dual clutch | 9 |
| 1.2 Removing and installing clutch end cover | 9 |
| 1.3 Removing dual clutch | 13 |
| 1.4 Installing dual clutch | 16 |
| 34 - Controls, housing | 24 |
| 1 Mechatronic unit | 24 |
| 1.1 Assembly overview - mechatronic unit | 24 |
| 1.2 Removing and installing oil pan | 25 |
| 1.3 Removing and installing mechatronic unit | 27 |
| 2 Selector mechanism | 30 |
| 2.1 Assembly overview - selector lever handle | 30 |
| 2.2 Assembly overview - selector mechanism | 34 |
| 2.3 Manual release from position P | 36 |
| 2.4 Removing and installing selector lever handle | 38 |
| 2.5 Bringing interlock button in handle into installation position | 41 |
| 2.6 Removing and installing selector mechanism | 43 |
| 2.7 Checking selector mechanism | 45 |
| 2.8 Checking and adjusting selector lever cable | 48 |
| 2.9 Renewing seal for parking lock shaft | 49 |
| 3 Removing and installing gearbox | 53 |
| 3.1 Removing gearbox | 53 |
| 3.2 Installing gearbox | 76 |
| 3.3 Tightening torques for gearbox | 80 |
| 4 Bevel box | 84 |
| 4.1 Assembly overview - bevel box | 84 |
| 4.2 Removing bevel box | 84 |
| 4.3 Installing bevel box | 88 |
| 4.4 Tightening torques for bevel box | 89 |
| 5 Assembly mountings | 91 |
| 5.1 Assembly overview - assembly mountings | 91 |
| 6 Transporting gearbox | 93 |



| | | |
|--|---|------------|
| 7 | Securing to engine and gearbox support | 95 |
| 8 | Gear oil circuit | 96 |
| 8.1 | Assembly overview - gear oil circuit | 96 |
| 8.2 | Removing and installing gear oil cooler | 96 |
| 8.3 | Removing and installing gear oil filter | 99 |
| 8.4 | Removing and installing motor for auxiliary hydraulic pump 1 for gearbox oil V475 | 100 |
| 9 | Gear oil | 102 |
| 9.1 | Overview - drain and inspection plugs | 102 |
| 9.2 | Tools for changing gear oil | 102 |
| 9.3 | Checking gear oil level | 104 |
| 9.4 | Draining and filling gear oil | 107 |
| 35 - Gears, shafts | | 110 |
| 1 | Dismantling and assembling gears and shafts | 110 |
| 39 - Final drive - differential | | 111 |
| 1 | Oil seals | 111 |
| 1.1 | Overview of fitting locations - oil seals | 111 |
| 1.2 | Renewing left oil seal | 111 |
| 1.3 | Renewing right oil seal | 114 |
| 2 | Differential | 118 |
| 2.1 | Removing and installing right flange shaft | 118 |
| 3 | Gear oil | 120 |
| 3.1 | Checking gear oil level | 120 |
| 3.2 | Draining and filling gear oil | 120 |
| 4 | Components of bevel box | 125 |
| 4.1 | Assembly overview - components of bevel box | 125 |
| 4.2 | Renewing oil seals for bevel box | 131 |
| 4.3 | Renewing right oil seal | 131 |
| 4.4 | Renewing left oil seal | 132 |
| 4.5 | Renewing needle bearings for right flange shaft | 134 |
| 4.6 | Removing and installing output flange | 135 |
| 5 | Gearbox control system | 156 |
| 5.1 | Overview of fitting locations - gearbox control system | 156 |