

## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Identification</b>	<b>1</b>
1.1 Gearbox identification	1
1.2 Identification of torque converter	2
<b>2 Technical data</b>	<b>3</b>
2.1 Capacities	3
<b>3 Safety information</b>	<b>4</b>
3.1 General safety regulations	4
3.2 Safety precautions when working on vehicles with start/stop system	5
3.3 Safety precautions when using testers and measuring instruments during a road test	5
3.4 Safety precautions when tow-starting and towing	5
<b>4 Repair instructions</b>	<b>6</b>
4.1 General notes	6
4.2 Rules for cleanliness	6
4.3 General repair instructions	6
4.4 Contact corrosion	8
4.5 Safety functions of gearbox control unit	8
4.6 Use of impact wrenches	9
<b>5 Electrical components</b>	<b>10</b>
5.1 Overview of fitting locations - electrical components	10
<b>32 - Torque converter</b>	<b>13</b>
<b>1 Torque converter</b>	<b>13</b>
1.1 Assembly overview - torque converter	13
1.2 Removing and installing torque converter	13
1.3 Draining torque converter	14
1.4 Checking torque converter	15
1.5 Removing and installing torque converter oil seal	15
<b>37 - Controls, housing</b>	<b>18</b>
<b>1 Selector mechanism</b>	<b>18</b>
1.1 Assembly overview - selector lever handle	18
1.2 Assembly overview - selector mechanism	19
1.3 Checking selector mechanism	22
1.4 Manual release from position P	25
1.5 Removing and installing selector mechanism	28
1.6 Removing and installing selector lever handle	33
1.7 Bringing interlock button in handle into installation position	36
1.8 Removing and installing selector mechanism control	38
1.9 Checking and adjusting selector lever cable	39
1.10 Renewing selector shaft oil seal	42
<b>2 ATF circuit</b>	<b>45</b>
2.1 Assembly overview - ATF circuit	45
2.2 Removing and installing ATF cooler	45
<b>3 ATF</b>	<b>51</b>
3.1 Checking ATF level	51
3.2 Draining and filling ATF	53
<b>4 Removing and installing gearbox</b>	<b>55</b>
4.1 Tightening torques for gearbox	55
4.2 Removing gearbox	55
4.3 Installing gearbox	66
<b>5 Assembly mountings</b>	<b>69</b>



5.1	Assembly overview - assembly mountings .....	69
<b>6</b>	<b>Transporting gearbox .....</b>	<b>72</b>
<b>7</b>	<b>Securing to engine and gearbox support .....</b>	<b>73</b>
<b>38 - Gears, control .....</b>		<b>75</b>
<b>1</b>	<b>Dismantling and assembling gearbox .....</b>	<b>75</b>
1.1	Assembly overview - gearbox .....	75
<b>2</b>	<b>ATF system .....</b>	<b>76</b>
2.1	Removing and installing oil pan .....	76
<b>3</b>	<b>Valve body .....</b>	<b>80</b>
3.1	Assembly overview - valve body .....	80
3.2	Removing and installing wiring harness for senders and solenoid valves .....	82
3.3	Removing and installing valve body .....	85
3.4	Removing and installing gearbox input speed sender G182 and gearbox output speed sender G195 .....	88
<b>39 - Final drive - differential .....</b>		<b>89</b>
<b>1</b>	<b>Oil seals .....</b>	<b>89</b>
1.1	Overview of fitting locations - oil seals .....	89
1.2	Renewing left oil seal .....	89
1.3	Renewing right oil seal .....	92
<b>2</b>	<b>Gearbox control system .....</b>	<b>96</b>
2.1	Removing and installing gearbox control unit .....	96