

Contents

00 - Technical data	1
1 Identification	1
2 Safety precautions	2
3 Repair instructions	3
10 - Removing and installing engine	4
1 Removing and installing engine	4
1.1 Removing engine	4
1.2 Separating engine and gearbox	16
1.3 Securing engine to engine and gearbox support	16
1.4 Installing engine	16
2 Assembly mountings	21
2.1 Exploded view - assembly mountings	21
2.2 Supporting engine in installation position	22
2.3 Removing and installing engine mountings	23
2.4 Removing and installing gearbox mounting	24
2.5 Removing and installing pendulum support	25
2.6 Checking adjustment of assembly mountings (engine/gearbox mountings)	26
2.7 Adjusting assembly mountings	26
13 - Crankshaft group	28
1 Cylinder block (pulley end)	28
1.1 Exploded view - poly V-belt drive	28
1.2 Removing and installing poly V-belt	28
1.3 Removing and installing tensioner for poly V-belt	28
1.4 Removing and installing engine support	28
1.5 Removing and installing vibration damper	31
1.6 Renewing crankshaft oil seal (pulley end)	31
2 Cylinder block (gearbox end)	32
3 Crankshaft	33
4 Pistons and conrods	34
15 - Cylinder head, valve gear	35
1 Toothed belt drive	35
2 Cylinder head	36
3 Valve gear	37
3.1 Exploded view - valve gear	37
3.2 Measuring axial clearance of camshaft	37
3.3 Removing and installing camshaft oil seal	37
3.4 Removing and installing camshaft control valve 1 N205	38
3.5 Removing and installing valve stem oil seals	38
4 Inlet and exhaust valves	39
17 - Lubrication	40
1 Sump/oil pump	40
1.1 Exploded view - sump/oil pump	40
1.2 Engine oil	40
1.3 Removing and installing sump	40
1.4 Removing and installing oil pump	40
1.5 Removing and installing oil level and oil temperature sender G266	40
2 Engine oil cooler	41



3	Crankcase breather	42
4	Oil filter/oil pressure switches	43
19	- Cooling	44
1	Cooling system/coolant	44
1.1	Connection diagram - coolant hoses	44
1.2	Checking cooling system for leaks	46
1.3	Draining and filling cooling system	46
2	Coolant expansion tank	49
2.1	Exploded view - coolant expansion tank, engine cooling circuit	49
2.2	Removing and installing coolant expansion tank - engine cooling circuit	49
3	Coolant pump/thermostat assembly	52
4	Coolant pipes	53
5	Radiators/radiator fan	54
5.1	Exploded view - radiators/radiator fan	54
5.2	Exploded view - radiator cowl and radiator fan	59
5.3	Removing and installing radiator	59
5.4	Removing and installing radiator cowl	63
5.5	Removing and installing radiator fans	64
21	- Turbocharging/supercharging	66
1	Turbocharger	66
1.1	Exploded view - turbocharger	66
1.2	Removing and installing turbocharger	66
1.3	Removing and installing charge pressure positioner V465	66
2	Charge air system	67
24	- Mixture preparation - injection	68
1	Injection system	68
1.1	Overview of fitting locations - injection system	68
2	Air cleaner	75
2.1	Exploded view - air cleaner housing	75
2.2	Removing and installing air cleaner housing	76
3	Intake manifold	77
3.1	Exploded view - intake manifold	77
3.2	Removing and installing intake manifold	77
3.3	Removing and installing throttle valve module J338	77
3.4	Cleaning throttle valve module	77
4	Injectors	78
5	Senders and sensors	79
5.1	Removing and installing fuel pressure sender G247	79
5.2	Checking fuel pressure sender G247	79
5.3	Removing and installing intake air temperature sender G42 / intake manifold pressure sender G71	79
5.4	Removing and installing exhaust gas pressure sensor 1 G450	79
6	High-pressure pump	80
6.1	Exploded view - high-pressure pump	80
6.2	Removing and installing high-pressure pump	80
6.3	Removing and installing high-pressure pipe	80
7	Lambda probe	81
7.1	Exploded view - Lambda probe	81
7.2	Removing and installing Lambda probe	81
8	Engine control unit	82



8.1	Removing and installing engine/motor control unit J623	82
26	- Exhaust system	86
1	Exhaust pipes/silencers	86
1.1	Exploded view - silencers	86
1.2	Separating exhaust pipes/silencers	87
1.3	Removing and installing silencers	88
1.4	Stress-free alignment of exhaust system	89
1.5	Checking exhaust system for leaks	90
2	Emission control system	91
2.1	Exploded view - emission control system	91
2.2	Removing and installing catalytic converter	92
2.3	Removing and installing particulate filter	94
28	- Ignition system	95
1	Ignition system	95