

## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Identification</b> .....	<b>1</b>
1.1 Engine number/engine data .....	1
<b>2 Safety information</b> .....	<b>4</b>
2.1 Safety precautions when working on the fuel supply system .....	4
2.2 Safety precautions when working on vehicles with natural gas systems .....	4
2.3 Safety precautions when working on vehicles with start/stop system .....	5
2.4 Safety precautions when using testers and measuring instruments during a road test .....	5
2.5 Safety precautions when working on the cooling system .....	6
2.6 Safety precautions when working on the exhaust system .....	6
2.7 Safety precautions when working on the ignition system .....	7
<b>3 Repair instructions</b> .....	<b>8</b>
3.1 Rules for cleanliness .....	8
3.2 General notes .....	8
3.3 General repair instructions .....	9
3.4 Foreign material in engine .....	9
3.5 Cleaning engine .....	9
3.6 Contact corrosion .....	10
3.7 Routing and attachment of pipes, hoses and wiring .....	10
3.8 Nuts, bolts .....	10
3.9 Identification plates .....	11
3.10 Use of impact wrenches .....	11
3.11 Installing radiators and condensers .....	11
3.12 Checking vacuum system .....	11
<b>10 - Removing and installing engine</b> .....	<b>13</b>
<b>1 Removing and installing engine</b> .....	<b>13</b>
1.1 Removing engine .....	13
1.2 Separating engine and gearbox .....	48
1.3 Securing engine to engine and gearbox support .....	54
1.4 Installing engine .....	56
<b>2 Assembly mountings</b> .....	<b>61</b>
2.1 Assembly overview - assembly mountings .....	61
2.2 Supporting engine in installation position .....	64
2.3 Removing and installing engine mountings .....	72
2.4 Removing and installing gearbox mounting .....	74
2.5 Removing and installing pendulum support .....	77
2.6 Checking adjustment of assembly mountings .....	77
2.7 Adjusting assembly mountings .....	78
<b>3 Engine cover panel</b> .....	<b>81</b>
3.1 Removing and installing engine cover panel .....	81
<b>13 - Crankshaft group</b> .....	<b>82</b>
<b>1 Cylinder block (pulley end)</b> .....	<b>82</b>
1.1 Assembly overview - poly V-belt drive .....	82
1.2 Removing and installing poly V-belt .....	88
1.3 Removing and installing poly V-belt tensioner .....	92
1.4 Removing and installing vibration damper .....	94
1.5 Removing and installing engine support .....	97
1.6 Renewing crankshaft oil seal (pulley end) .....	100
<b>2 Cylinder block (gearbox end)</b> .....	<b>103</b>
2.1 Assembly overview - cylinder block (gearbox end) .....	103



2.2	Removing and installing flywheel . . . . .	106
2.3	Removing and installing sealing flange (gearbox end) . . . . .	109
<b>3</b>	<b>Crankshaft . . . . .</b>	<b>121</b>
3.1	Renewing needle bearing in crankshaft . . . . .	121
3.2	Crankshaft dimensions . . . . .	123
3.3	Measuring axial clearance of crankshaft . . . . .	123
<b>4</b>	<b>Pistons and conrods . . . . .</b>	<b>125</b>
4.1	Assembly overview - pistons and conrods . . . . .	125
4.2	Removing and installing pistons . . . . .	128
4.3	Separating parts of new conrod . . . . .	129
4.4	Removing and installing oil spray jets . . . . .	130
4.5	Checking pistons and cylinder bores . . . . .	131
4.6	Checking radial clearance of conrod bearings . . . . .	133
4.7	Setting pistons to TDC position . . . . .	134
<b>15 - Cylinder head, valve gear . . . . .</b>		<b>140</b>
<b>1</b>	<b>Toothed belt drive . . . . .</b>	<b>140</b>
1.1	Assembly overview - toothed belt guard . . . . .	140
1.2	Assembly overview - toothed belt . . . . .	141
1.3	Assembly overview - valve timing tool . . . . .	144
1.4	Removing and installing toothed belt guard . . . . .	144
1.5	Removing and installing toothed belt . . . . .	146
1.6	Pre-assembling and fitting valve timing tool . . . . .	152
1.7	Checking valve timing . . . . .	169
1.8	Adjusting valve timing . . . . .	173
1.9	Detaching toothed belt from camshaft . . . . .	184
<b>2</b>	<b>Cylinder head . . . . .</b>	<b>189</b>
2.1	Assembly overview - cylinder head . . . . .	189
2.2	Assembly overview - camshaft housing . . . . .	190
2.3	Removing and installing cylinder head . . . . .	195
2.4	Removing and installing camshaft housing . . . . .	199
2.5	Checking compression . . . . .	210
<b>3</b>	<b>Valve gear . . . . .</b>	<b>214</b>
3.1	Assembly overview - valve gear . . . . .	214
3.2	Removing and installing camshaft oil seal . . . . .	217
3.3	Removing and installing camshaft adjuster . . . . .	228
3.4	Removing and installing cam actuators . . . . .	240
3.5	Removing and installing camshaft control valve 1 N205 . . . . .	242
3.6	Removing and installing exhaust camshaft control valve 1 N318 . . . . .	243
3.7	Removing and installing valve stem oil seals . . . . .	243
3.8	Removing and installing retainer for oil seal . . . . .	260
<b>4</b>	<b>Inlet and exhaust valves . . . . .</b>	<b>264</b>
4.1	Checking valve guides . . . . .	264
4.2	Checking valves . . . . .	265
4.3	Valve dimensions . . . . .	265
<b>17 - Lubrication . . . . .</b>		<b>266</b>
<b>1</b>	<b>Sump/oil pump . . . . .</b>	<b>266</b>
1.1	Assembly overview - sump/oil pump . . . . .	266
1.2	Engine oil . . . . .	270
1.3	Removing and installing sump . . . . .	271
1.4	Removing and installing oil pump . . . . .	276
1.5	Removing and installing oil level and oil temperature sender G266 . . . . .	277
<b>2</b>	<b>Engine oil cooler . . . . .</b>	<b>279</b>
2.1	Assembly overview - engine oil cooler . . . . .	279

2.2	Removing and installing engine oil cooler .....	279
<b>3</b>	<b>Crankcase breather .....</b>	<b>281</b>
3.1	Assembly overview - crankcase breather system .....	281
3.2	Removing and installing oil separator .....	282
<b>4</b>	<b>Oil filter/oil pressure switches .....</b>	<b>287</b>
4.1	Assembly overview - oil pressure switches/oil pressure control .....	287
4.2	Checking oil pressure and oil pressure switch .....	287
4.3	Removing and installing valve for oil pressure control N428 .....	288
4.4	Removing and installing oil pressure sender G10 .....	288
<b>19 - Cooling .....</b>		<b>291</b>
1	<b>Cooling system/coolant .....</b>	<b>291</b>
1.1	Connection diagram - coolant hoses .....	291
1.2	Assembly overview - coolant expansion tank .....	293
1.3	Checking cooling system for leaks .....	294
1.4	Draining and filling cooling system .....	299
1.5	Removing and installing coolant expansion tank .....	307
2	<b>Coolant pump/thermostat assembly .....</b>	<b>310</b>
2.1	Assembly overview - coolant pump/thermostat .....	310
2.2	Assembly overview - electric coolant pump .....	312
2.3	Assembly overview - coolant temperature senders .....	313
2.4	Removing and installing electric coolant pump .....	313
2.5	Removing and installing coolant pump .....	315
2.6	Removing and installing toothed belt pulley for coolant pump .....	320
2.7	Removing and installing coolant temperature sender G62 .....	326
2.8	Removing and installing engine outlet coolant temperature sender G82 .....	328
2.9	Removing and installing radiator outlet coolant temperature sender G83 .....	330
2.10	Removing and installing engine temperature regulation module GX33 .....	331
2.11	Checking coolant pump .....	336
3	<b>Coolant pipes .....</b>	<b>342</b>
3.1	Assembly overview - coolant pipes .....	342
3.2	Removing and installing coolant pipes .....	344
4	<b>Radiator/radiator fan .....</b>	<b>354</b>
4.1	Assembly overview - radiator/radiator fan .....	354
4.2	Assembly overview - radiator cowl and radiator fan .....	357
4.3	Assembly overview - radiator blind .....	358
4.4	Removing and installing radiator .....	360
4.5	Removing and installing water radiator for charge air cooling circuit .....	366
4.6	Removing and installing radiator cowl .....	369
4.7	Removing and installing radiator fan V7 .....	372
4.8	Removing and installing radiator blind .....	372
4.9	Removing and installing radiator blind control motor (top) .....	374
4.10	Removing and installing radiator blind control motor (bottom) .....	376
<b>21 - Turbocharging/supercharging .....</b>		<b>378</b>
1	<b>Turbocharger .....</b>	<b>378</b>
1.1	Assembly overview - turbocharger .....	378
1.2	Removing and installing turbocharger .....	383
1.3	Removing and installing connection for turbocharger .....	391
1.4	Removing and installing charge pressure control module GX34 .....	393
2	<b>Charge air system .....</b>	<b>399</b>
2.1	Assembly overview - charge air system .....	399
2.2	Removing and installing charge air cooler .....	401
2.3	Removing and installing charge pressure sender GX26 .....	404
2.4	Checking charge air system for leaks .....	405



---

2.5	Removing and installing air pipe .....	409
2.6	Checking charge air cooler for leaks .....	416
<b>24 - Mixture preparation - injection</b>	.....	<b>422</b>
<b>1</b>	<b>Injection system</b> .....	<b>422</b>
1.1	Overview of fitting locations - injection system .....	422
1.2	Distinguishing between different pressure sections of natural gas fuel supply system .....	439
<b>2</b>	<b>Air filter</b> .....	<b>442</b>
2.1	Assembly overview - air filter housing .....	442
2.2	Removing and installing air filter housing .....	446
2.3	Removing and installing air duct at lock carrier .....	451
<b>3</b>	<b>Intake manifold</b> .....	<b>453</b>
3.1	Assembly overview - intake manifold .....	453
3.2	Removing and installing intake manifold .....	455
3.3	Removing and installing throttle valve module GX3 .....	466
3.4	Cleaning throttle valve module GX3 .....	468
<b>4</b>	<b>Injectors</b> .....	<b>470</b>
4.1	Assembly overview - fuel rail with injectors .....	470
4.2	Removing and installing fuel rail .....	472
4.3	Removing and installing injectors .....	473
4.4	Cleaning injectors .....	481
<b>5</b>	<b>Gas pressure regulator</b> .....	<b>483</b>
5.1	Assembly overview - gas pressure regulator .....	483
5.2	Removing and installing gas pressure regulator .....	485
5.3	Removing and installing gas tank pressure sensor G1081 .....	490
<b>6</b>	<b>Gas injection valves</b> .....	<b>492</b>
6.1	Assembly overview - gas rail .....	492
6.2	Removing and installing gas rail with gas injection valve N366/N367/N368/N369 .....	494
6.3	Removing and installing gas rail temperature and pressure sensor GX21 .....	497
<b>7</b>	<b>Senders and sensors</b> .....	<b>499</b>
7.1	Assembly overview - actuator for structure-borne sound and control unit for structure-borne sound .....	499
7.2	Removing and installing control unit for structure-borne sound J869 and actuator for structure-borne sound R214 .....	500
7.3	Removing and installing intake manifold sender GX9 .....	500
7.4	Removing and installing fuel pressure sender G247 .....	503
7.5	Checking fuel pressure sender G247 .....	504
7.6	Removing and installing exhaust gas pressure sensor 1 G450 .....	508
<b>8</b>	<b>High-pressure pump</b> .....	<b>510</b>
8.1	Assembly overview - high-pressure pump .....	510
8.2	Removing and installing high-pressure pump .....	510
8.3	Removing and installing high-pressure pipe .....	513
<b>9</b>	<b>Lambda probe</b> .....	<b>516</b>
9.1	Assembly overview - Lambda probe .....	516
9.2	Removing and installing Lambda probe .....	516
<b>10</b>	<b>Engine control unit</b> .....	<b>519</b>
10.1	Assembly overview - engine control unit .....	519
10.2	Removing and installing engine control unit J623 .....	520
<b>26 - Exhaust system</b>	.....	<b>526</b>
<b>1</b>	<b>Exhaust pipes/silencers</b> .....	<b>526</b>
1.1	Assembly overview - silencers .....	526
1.2	Removing and installing silencers .....	540
1.3	Installation position of clamp .....	549
1.4	Separating exhaust pipes/silencers .....	550

---

1.5	Stress-free alignment of exhaust system .....	555
1.6	Checking exhaust system for leaks .....	556
<b>2</b>	<b>Emission control system .....</b>	<b>557</b>
2.1	Assembly overview - emission control system .....	557
2.2	Removing and installing catalytic converter .....	560
2.3	Removing and installing particulate filter .....	565
2.4	Removing and installing exhaust flap control unit J883 .....	565
<b>28 - Ignition system .....</b>	<b>567</b>	
<b>1</b>	<b>Ignition system .....</b>	<b>567</b>
1.1	Assembly overview - ignition system .....	567
1.2	Removing and installing ignition coils .....	571
1.3	Removing and installing knock sensor 1 G61 .....	574
1.4	Removing and installing engine speed sender G28 .....	575
1.5	Removing and installing inlet camshaft position sender G1002 .....	577
1.6	Removing and installing exhaust camshaft position sender G1003 .....	580