

Contents

00 - Technical data	1
1 Identification	1
2 Safety precautions	2
3 Repair instructions	3
10 - Removing and installing engine	4
1 Removing and installing engine	4
1.1 Removing engine	4
1.2 Separating engine and gearbox	23
1.3 Securing engine to engine and gearbox support	23
1.4 Installing engine	23
2 Assembly mountings	27
2.1 Exploded view - assembly mountings	27
2.2 Supporting engine in installation position	29
2.3 Removing and installing engine mountings	30
2.4 Removing and installing gearbox mounting	31
2.5 Removing and installing pendulum support	33
2.6 Checking adjustment of assembly mountings (engine/gearbox mountings)	34
2.7 Adjusting assembly mountings	34
3 Engine cover panel	37
13 - Crankshaft group	38
1 Cylinder block (pulley end)	38
1.1 Exploded view - cylinder block (pulley end)	38
1.2 Removing and installing poly V-belt	38
1.3 Removing and installing poly V-belt tensioner	38
1.4 Removing and installing vibration damper	38
1.5 Removing and installing bracket for ancillaries	38
1.6 Removing and installing engine support	38
2 Cylinder block (gearbox end)	40
3 Crankshaft	41
4 Balance shaft	42
5 Pistons and conrods	43
15 - Cylinder head, valve gear	44
1 Timing chain cover	44
2 Chain drive	45
3 Cylinder head	46
3.1 Exploded view - cylinder head	46
3.2 Removing and installing cylinder head	46
3.3 Checking compression	46
4 Valve gear	47
5 Inlet and exhaust valves	48
17 - Lubrication	49
1 Sump/oil pump	49
1.1 Exploded view - sump/oil pump	49
1.2 Engine oil	49
1.3 Removing and installing sump (bottom section)	49
1.4 Removing and installing oil pump	49
1.5 Removing and installing sump (top section)	49



1.6	Removing and installing oil level and oil temperature sender G266	49
2	Engine oil cooler	50
3	Crankcase breather	51
4	Oil filter/oil pressure switches	52
19	Cooling	53
1	Cooling system/coolant	53
1.1	Connection diagram - coolant hoses	53
1.2	Checking cooling system for leaks	54
1.3	Draining and filling cooling system	55
2	Coolant pump/thermostat assembly	61
2.1	Exploded view - coolant pump/thermostat	61
2.2	Exploded view - electric coolant pump	61
2.3	Exploded view - coolant temperature senders	61
2.4	Removing and installing electric coolant pump	61
2.5	Removing and installing coolant pump	61
2.6	Removing and installing toothed belt for coolant pump	62
2.7	Removing and installing actuator for engine temperature regulation N493	63
2.8	Removing and installing coolant temperature sender G62	63
2.9	Removing and installing radiator outlet coolant temperature sender G83	63
2.10	Removing and installing coolant valves	63
3	Coolant pipes	64
3.1	Exploded view - coolant pipes	64
3.2	Removing and installing coolant pipes	64
3.3	Removing and installing coolant pipes for gearbox	65
4	Radiator/radiator fan	66
4.1	Exploded view - radiator/radiator fan	66
4.2	Removing and installing radiator	68
4.3	Removing and installing radiator cowl	70
4.4	Removing and installing radiator fan V7	71
21	Turbocharging/supercharging	72
1	Turbocharger	72
1.1	Exploded view - turbocharger	72
1.2	Removing and installing turbocharger	72
1.3	Removing and installing turbocharger air recirculation valve N249	73
2	Charge air system	74
2.1	Exploded view - charge air system	74
2.2	Exploded view - hose connections for charge air system	76
2.3	Removing and installing charge air cooler	76
2.4	Removing and installing charge pressure sender G31	78
2.5	Checking charge air system for leaks	79
24	Mixture preparation - injection	80
1	Injection system	80
1.1	Overview of fitting locations - injection system	80
2	Air cleaner	91
2.1	Exploded view - air cleaner housing	91
2.2	Removing and installing air cleaner housing	93
3	Intake manifold	95
3.1	Exploded view - intake manifold	95
3.2	Removing and installing intake manifold	95
3.3	Removing and installing throttle valve module J338	96
3.4	Cleaning throttle valve module	97

3.5	Checking intake manifold change-over function	97
4	Injectors	98
5	Senders and sensors	99
5.1	Removing and installing intake air temperature sender G42/intake manifold pressure sender G71	99
5.2	Removing and installing air mass meter G70	99
5.3	Removing and installing fuel pressure sender G247	101
5.4	Checking fuel pressure sender G247	102
5.5	Removing and installing fuel pressure sender for low pressure G410	102
6	High-pressure pump	103
7	Lambda probe	104
8	Engine control unit	105
8.1	Removing and installing engine/motor control unit J623	105
26	- Exhaust system	110
1	Exhaust pipes/silencers	110
1.1	Exploded view - silencers	110
1.2	Separating exhaust pipes/silencers	114
1.3	Removing and installing silencers	116
1.4	Stress-free alignment of exhaust system	118
1.5	Checking exhaust system for leaks	119
2	Emission control system	120
28	- Ignition system	121
1	Ignition system	121