

Contents

00 - Technical data	1
1 Identification	1
1.1 Engine number/engine data	1
2 Safety information	2
2.1 Safety precautions when working on the fuel supply system	2
2.2 Safety precautions when working on vehicles with start/stop system	2
2.3 Safety precautions when using testers and measuring instruments during a road test	2
2.4 Safety precautions when working on the ignition system	3
2.5 Safety precautions when working on the cooling system	3
2.6 Safety precautions when working on the exhaust system	3
3 Repair instructions	5
3.1 Rules for cleanliness	5
3.2 General notes	5
3.3 General repair instructions	6
3.4 Foreign material in engine	6
3.5 Cleaning engine	6
3.6 Contact corrosion	6
3.7 Routing and attachment of pipes, hoses and wiring	7
3.8 Nuts, bolts	7
3.9 Identification plates	7
3.10 Use of impact wrenches	7
3.11 Installing radiators and condensers	8
3.12 Checking vacuum system	8
10 - Removing and installing engine	10
1 Removing and installing engine	10
1.1 Removing engine	10
1.2 Separating engine and gearbox	10
1.3 Securing engine to engine and gearbox support	13
1.4 Installing engine	15
2 Assembly mountings	16
13 - Crankshaft group	17
1 Cylinder block (pulley end)	17
1.1 Assembly overview - poly V-belt drive	17
1.2 Removing and installing poly V-belt	21
1.3 Removing and installing poly V-belt tensioner	25
1.4 Removing and installing engine support	26
1.5 Removing and installing vibration damper	26
1.6 Renewing crankshaft oil seal (pulley end)	29
2 Cylinder block (gearbox end)	33
2.1 Assembly overview - cylinder block (gearbox end)	33
2.2 Removing and installing flywheel	34
2.3 Removing and installing sealing flange (gearbox end)	36
3 Crankshaft	47
3.1 Crankshaft dimensions	47
3.2 Renewing needle bearing in crankshaft	47
4 Pistons and conrods	50
4.1 Assembly overview - pistons and conrods	50
4.2 Removing and installing pistons	55
4.3 Checking pistons and cylinder bores	56
4.4 Checking radial clearance of conrod bearings	58



4.5	Removing and installing oil spray jets	59
4.6	Setting pistons to TDC position	60
15	- Cylinder head, valve gear	64
1	Toothed belt drive	64
1.1	Assembly overview - toothed belt guard	64
1.2	Assembly overview - toothed belt	64
1.3	Detaching toothed belt from camshaft	67
1.4	Removing and installing toothed belt	86
2	Cylinder head	109
2.1	Assembly overview - cylinder head	109
2.2	Assembly overview - camshaft housing	111
2.3	Removing and installing cylinder head	113
2.4	Removing and installing camshaft housing	117
2.5	Checking compression	123
3	Valve gear	125
3.1	Assembly overview - valve gear	125
3.2	Measuring axial clearance of camshaft	126
3.3	Removing and installing camshaft oil seal	127
3.4	Removing and installing camshaft control valve 1 N205	135
3.5	Removing and installing valve stem oil seals	135
4	Inlet and exhaust valves	146
4.1	Checking valve guides	146
4.2	Checking valves	147
4.3	Valve dimensions	147
17	- Lubrication	148
1	Sump/oil pump	148
1.1	Assembly overview - sump/oil pump	148
1.2	Engine oil	151
1.3	Removing and installing sump	152
1.4	Removing and installing oil pump	156
1.5	Removing and installing oil level and oil temperature sender G266	158
2	Engine oil cooler	159
2.1	Assembly overview - engine oil cooler	159
2.2	Removing and installing engine oil cooler	159
3	Crankcase breather	161
3.1	Assembly overview - crankcase breather system	161
3.2	Removing and installing oil separator	162
4	Oil filter/oil pressure switches	166
4.1	Assembly overview - oil filter/oil pressure switch	166
4.2	Removing and installing oil pressure sender G10	167
4.3	Removing and installing valve for oil pressure control N428	168
4.4	Checking oil pressure and oil pressure switch	169
19	- Cooling	170
1	Cooling system/coolant	170
1.1	Connection diagram - coolant hoses	170
1.2	Checking cooling system for leaks	170
1.3	Draining and filling cooling system	172
2	Coolant pump/thermostat assembly	178
2.1	Assembly overview - coolant pump/thermostat	178
2.2	Assembly overview - electric coolant pump	181
2.3	Assembly overview - coolant temperature senders	181
2.4	Removing and installing electric coolant pump	182

2.5	Removing and installing coolant pump	184
2.6	Removing and installing thermostat	189
2.7	Removing and installing toothed belt pulley for coolant pump	192
2.8	Removing and installing coolant temperature sender G62	194
2.9	Removing and installing radiator outlet coolant temperature sender G83	195
3	Coolant pipes	197
3.1	Assembly overview - coolant pipes	197
3.2	Removing and installing coolant pipes	197
4	Radiator/radiator fans	199
21 - Turbocharging/supercharging		200
1 Turbocharger		200
1.1	Assembly overview - turbocharger	200
1.2	Removing and installing turbocharger	203
1.3	Removing and installing charge pressure positioner V465	208
1.4	Removing and installing connection for turbocharger	209
2 Charge air system		211
2.1	Assembly overview - charge air system	211
2.2	Assembly overview - hose connections for charge air system	213
2.3	Removing and installing air pipe	214
2.4	Removing and installing charge air cooler	215
2.5	Removing and installing charge pressure sender GX26	216
2.6	Checking charge air system for leaks	217
24 - Mixture preparation - injection		219
1 Injection system		219
2 Air filter		220
2.1	Assembly overview - air filter housing	220
2.2	Removing and installing air filter housing	220
3 Intake manifold		221
3.1	Assembly overview - intake manifold	221
3.2	Removing and installing intake manifold	223
3.3	Removing and installing throttle valve module J338	226
3.4	Cleaning throttle valve module	227
4 Injectors		229
4.1	Assembly overview - fuel rail with injectors	229
4.2	Removing and installing fuel rail	232
4.3	Removing and installing injectors	233
4.4	Cleaning injectors	246
5 Senders and sensors		248
5.1	Removing and installing fuel pressure sender G247	248
5.2	Checking fuel pressure sender G247	249
5.3	Removing and installing intake manifold sender GX9	251
5.4	Removing and installing exhaust gas pressure sensor 1 G450	253
6 High-pressure pump		255
6.1	Assembly overview - high-pressure pump	255
6.2	Removing and installing high-pressure pump	256
6.3	Removing and installing high-pressure pipe	258
7 Lambda probe		261
7.1	Assembly overview - Lambda probe	261
7.2	Removing and installing Lambda probe	261
8 Engine control unit		264
26 - Exhaust system		265



1	Exhaust pipes/silencers	265
1.1	Assembly overview - silencers	265
1.2	Separating exhaust pipes/silencers	265
1.3	Removing and installing silencers	265
1.4	Stress-free alignment of exhaust system	265
1.5	Checking exhaust system for leaks	265
2	Emission control system	266
28	- Ignition system	267
1	Ignition system	267
1.1	Assembly overview - ignition system	267
1.2	Removing and installing ignition coils with output stages	269
1.3	Removing and installing knock sensor 1 G61	271
1.4	Removing and installing Hall senders	273
1.5	Removing and installing engine speed sender G28	274