

## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Identification</b> .....	<b>1</b>
1.1 Engine number/engine data .....	1
1.2 Engine versions .....	1
<b>2 Safety information</b> .....	<b>5</b>
2.1 Safety precautions when working on the fuel supply system .....	5
2.2 Safety precautions when working on vehicles with start/stop system .....	5
2.3 Safety precautions when using testers and measuring instruments during a road test .....	6
2.4 Safety precautions when working on the cooling system .....	6
2.5 Safety precautions when working on the exhaust system .....	6
2.6 Safety precautions when working on the ignition system .....	7
<b>3 Repair instructions</b> .....	<b>8</b>
3.1 Identification plates .....	8
3.2 Use of impact wrenches .....	8
3.3 Nuts, bolts .....	9
3.4 Rules for cleanliness .....	10
3.5 Foreign material in engine .....	10
3.6 Cleaning engine .....	10
3.7 Contact corrosion .....	10
3.8 Routing and attachment of pipes, hoses and wiring .....	11
3.9 Installing radiators and condensers .....	11
3.10 Checking vacuum system .....	11
<b>10 - Removing and installing engine</b> .....	<b>13</b>
<b>1 Removing and installing engine</b> .....	<b>13</b>
1.1 Removing engine .....	13
1.2 Separating engine and gearbox .....	13
1.3 Securing engine to engine and gearbox support .....	13
1.4 Installing engine .....	14
<b>2 Assembly mountings</b> .....	<b>15</b>
<b>3 Engine cover panel</b> .....	<b>16</b>
3.1 Removing and installing engine cover panel .....	16
<b>13 - Crankshaft group</b> .....	<b>17</b>
<b>1 Cylinder block (pulley end)</b> .....	<b>17</b>
1.1 Assembly overview - cylinder block (pulley end) .....	17
1.2 Removing and installing poly V-belt .....	19
1.3 Removing and installing poly V-belt tensioner .....	21
1.4 Removing and installing vibration damper .....	21
1.5 Removing and installing bracket for ancillaries .....	27
1.6 Removing and installing engine support .....	29
<b>2 Cylinder block (gearbox end)</b> .....	<b>30</b>
2.1 Assembly overview - cylinder block (gearbox end) .....	30
2.2 Assembly overview - drive plate .....	32
2.3 Removing and installing flywheel .....	33
2.4 Removing and installing drive plate .....	35
2.5 Removing and installing sealing flange (gearbox end) .....	37
<b>3 Crankshaft</b> .....	<b>41</b>
3.1 Assembly overview - crankshaft .....	41
3.2 Crankshaft dimensions .....	44
3.3 Allocation of main bearing shells .....	44
3.4 Renewing needle bearing in crankshaft .....	45

3.5	Measuring axial clearance of crankshaft	47
3.6	Measuring radial clearance of crankshaft	48
3.7	Removing and installing sender wheel	49
<b>4</b>	<b>Balance shaft</b>	<b>50</b>
4.1	Assembly overview - balance shaft	50
4.2	Removing and installing balance shaft	52
4.3	Renewing oil seal for balance shaft (inlet side)	56
<b>5</b>	<b>Pistons and conrods</b>	<b>59</b>
5.1	Assembly overview - pistons and conrods	59
5.2	Removing and installing pistons	63
5.3	Removing and installing oil spray jets	64
5.4	Checking pistons and cylinder bores	66
5.5	Separating parts of new conrod	67
5.6	Checking radial clearance of conrod bearings	68
<b>15</b>	<b>Cylinder head, valve gear</b>	<b>69</b>
<b>1</b>	<b>Timing chain cover</b>	<b>69</b>
1.1	Assembly overview - timing chain cover	69
1.2	Removing and installing timing chain cover	74
1.3	Renewing oil seal for vibration damper	79
<b>2</b>	<b>Chain drive</b>	<b>82</b>
2.1	Assembly overview - camshaft timing chains	82
2.2	Assembly overview - drive chain for balance shaft	87
2.3	Removing and installing bearing saddle	89
2.4	Removing and installing camshaft timing chain	102
2.5	Checking timing chain	131
2.6	Checking valve timing	133
<b>3</b>	<b>Cylinder head</b>	<b>138</b>
3.1	Assembly overview - cylinder head	138
3.2	Removing and installing cylinder head	142
3.3	Checking compression	147
<b>4</b>	<b>Valve gear</b>	<b>149</b>
4.1	Assembly overview - valve gear	149
4.2	Removing and installing camshaft	158
4.3	Installing ball for slider	201
4.4	Removing and installing cam adjustment actuators	202
4.5	Removing and installing camshaft control valve 1 N205	203
4.6	Removing and installing valve stem oil seals	203
<b>5</b>	<b>Inlet and exhaust valves</b>	<b>214</b>
5.1	Checking valve guides	214
5.2	Checking valves	214
5.3	Valve dimensions	215
<b>17</b>	<b>Lubrication</b>	<b>216</b>
<b>1</b>	<b>Sump/oil pump</b>	<b>216</b>
1.1	Assembly overview - sump/oil pump	216
1.2	Engine oil	219
1.3	Removing and installing lower part of sump	220
1.4	Removing and installing oil pump	222
1.5	Removing and installing upper part of sump	224
1.6	Removing and installing oil level and oil temperature sender G266	227
<b>2</b>	<b>Engine oil cooler</b>	<b>229</b>
2.1	Assembly overview - engine oil cooler	229
2.2	Removing and installing engine oil cooler	229
2.3	Removing and installing mechanical switching valve	230

<b>3</b>	<b>Crankcase breather</b> .....	<b>231</b>
3.1	Assembly overview - crankcase breather system .....	231
3.2	Removing and installing oil separator .....	233
3.3	Removing and installing tank breather pressure sensor 1 G950 .....	234
<b>4</b>	<b>Oil filter/oil pressure switches</b> .....	<b>235</b>
4.1	Assembly overview - oil filter .....	235
4.2	Assembly overview - oil pressure switches/oil pressure control .....	236
4.3	Removing and installing oil pressure switch F22 .....	238
4.4	Removing and installing oil pressure switch for reduced oil pressure F378 .....	238
4.5	Removing and installing stage 2 oil pressure switch F446 / stage 3 oil pressure switch F447 .....	239
4.6	Removing and installing valve for oil pressure control N428 .....	240
4.7	Removing and installing piston cooling jet control valve N522 .....	241
4.8	Checking oil pressure .....	241
<b>19 - Cooling</b> .....		<b>245</b>
<b>1</b>	<b>Cooling system/coolant</b> .....	<b>245</b>
1.1	Connection diagram - coolant hoses .....	245
1.2	Checking cooling system for leaks .....	245
1.3	Draining and filling cooling system .....	248
<b>2</b>	<b>Coolant pump/thermostat assembly</b> .....	<b>249</b>
2.1	Assembly overview - coolant pump/thermostat .....	249
2.2	Assembly overview - electric coolant pump .....	251
2.3	Assembly overview - coolant valves .....	251
2.4	Assembly overview - coolant temperature senders .....	252
2.5	Removing and installing electric coolant pump .....	252
2.6	Removing and installing coolant pump .....	253
2.7	Removing and installing toothed belt for coolant pump .....	253
2.8	Removing and installing actuator for engine temperature regulation N493 .....	254
2.9	Removing and installing coolant temperature sender G62 .....	256
2.10	Removing and installing radiator outlet coolant temperature sender G83 .....	257
2.11	Removing and installing coolant valves .....	257
<b>3</b>	<b>Coolant pipes</b> .....	<b>258</b>
<b>4</b>	<b>Radiator/radiator fans</b> .....	<b>259</b>
<b>21 - Turbocharging/supercharging</b> .....		<b>260</b>
<b>1</b>	<b>Turbocharger</b> .....	<b>260</b>
<b>2</b>	<b>Charge air system</b> .....	<b>261</b>
2.1	Assembly overview - charge air system .....	261
2.2	Assembly overview - hose connections for charge air system .....	261
2.3	Removing and installing charge air cooler .....	262
2.4	Removing and installing charge pressure sender G31 .....	262
2.5	Checking charge air system for leaks .....	262
<b>24 - Mixture preparation - injection</b> .....		<b>264</b>
<b>1</b>	<b>Injection system</b> .....	<b>264</b>
<b>2</b>	<b>Air filter</b> .....	<b>265</b>
<b>3</b>	<b>Intake manifold</b> .....	<b>266</b>
3.1	Assembly overview - intake manifold .....	266
3.2	Removing and installing intake manifold .....	269
3.3	Removing and installing throttle valve module GX3 .....	272
3.4	Cleaning throttle valve module .....	273
3.5	Removing and installing intake manifold flap valve N316 .....	274
3.6	Checking intake manifold change-over function .....	274



<b>4</b>	<b>Injectors</b> .....	<b>277</b>
4.1	Assembly overview - fuel rail with injectors .....	277
4.2	Removing and installing fuel rail .....	282
4.3	Removing and installing injectors .....	283
4.4	Cleaning injectors .....	294
<b>5</b>	<b>Senders and sensors</b> .....	<b>296</b>
5.1	Assembly overview - actuator for structure-borne sound and control unit for structure-borne sound .....	296
5.2	Removing and installing actuator for structure-borne sound R214 .....	296
5.3	Removing and installing control unit for structure-borne sound J869 .....	296
5.4	Removing and installing intake air temperature sender G42 / intake manifold pressure sender G71 .....	296
5.5	Removing and installing fuel pressure sender G247 .....	297
5.6	Checking fuel pressure sender G247 .....	298
5.7	Removing and installing fuel pressure sender for low pressure G410 .....	303
5.8	Removing and installing pressure differential sender for particulate filter G1037 .....	304
<b>6</b>	<b>High-pressure pump</b> .....	<b>305</b>
6.1	Assembly overview - high-pressure pump .....	305
6.2	Removing and installing high-pressure pump .....	311
6.3	Removing and installing high-pressure pipe .....	316
<b>7</b>	<b>Lambda probe</b> .....	<b>319</b>
7.1	Assembly overview - Lambda probe .....	319
7.2	Removing and installing Lambda probe .....	321
<b>8</b>	<b>Engine control unit</b> .....	<b>322</b>
<b>26 - Exhaust system</b> .....		<b>323</b>
<b>1</b>	<b>Exhaust pipes/silencers</b> .....	<b>323</b>
1.1	Assembly overview - silencers .....	323
1.2	Separating exhaust pipes/silencers .....	323
1.3	Removing and installing silencer .....	323
1.4	Stress-free alignment of exhaust system .....	323
1.5	Checking exhaust system for leaks .....	323
<b>2</b>	<b>Emission control system</b> .....	<b>324</b>
<b>3</b>	<b>Exhaust gas temperature regulation</b> .....	<b>325</b>
3.1	Assembly overview - exhaust gas temperature regulation .....	325
3.2	Removing and installing parts of exhaust gas temperature regulation .....	327
<b>4</b>	<b>Secondary air system</b> .....	<b>331</b>
4.1	Assembly overview - secondary air system .....	331
4.2	Removing and installing secondary air pump motor V101 .....	333
4.3	Removing and installing secondary air inlet valve N112 .....	334
4.4	Removing and installing sender 1 for secondary air pressure G609 .....	335
<b>28 - Ignition system</b> .....		<b>336</b>
<b>1</b>	<b>Ignition system</b> .....	<b>336</b>
1.1	Assembly overview - ignition system .....	336
1.2	Removing and installing ignition coils .....	338
1.3	Removing and installing knock sensor 1 G61 .....	340
1.4	Removing and installing Hall senders .....	341
1.5	Removing and installing engine speed sender G28 .....	342