

Contents

00 - Technical data	1
1 Identification	1
2 Safety information	2
3 Repair instructions	3
10 - Removing and installing engine	4
1 Removing and installing engine	4
1.1 Removing engine	4
1.2 Separating engine and gearbox	36
1.3 Securing engine to engine and gearbox support	36
1.4 Installing engine	36
2 Assembly mountings	42
2.1 Assembly overview - assembly mountings	42
2.2 Supporting engine in installation position	45
2.3 Removing and installing engine mountings	48
2.4 Removing and installing gearbox mounting	49
2.5 Removing and installing pendulum support	51
2.6 Checking adjustment of assembly mountings	52
2.7 Adjusting assembly mountings	52
3 Engine cover panel	55
13 - Crankshaft group	56
1 Cylinder block (pulley end)	56
2 Cylinder block (gearbox end)	57
3 Crankshaft	58
4 Pistons and conrods	59
15 - Cylinder head, valve gear	60
1 Toothed belt drive	60
2 Cylinder head	61
3 Valve gear	62
4 Inlet and exhaust valves	63
17 - Lubrication	64
1 Sump/oil pump	64
1.1 Assembly overview - sump/oil pump	64
1.2 Engine oil	64
1.3 Removing and installing sump	64
1.4 Removing and installing oil pump	64
1.5 Removing and installing oil level and oil temperature sender G266	64
2 Engine oil cooler	65
3 Oil filter/oil pressure switches	66
3.1 Assembly overview - oil filter housing/oil pressure switches	66
3.2 Removing and installing oil filter housing	66
3.3 Removing and installing oil pressure switch F22	67
3.4 Removing and installing oil pressure switch for reduced oil pressure F378	68
3.5 Removing and installing valve for oil pressure control N428	68
3.6 Checking oil pressure	68
19 - Cooling	69
1 Cooling system/coolant	69



1.1	Connection diagram - coolant hoses	69
1.2	Checking cooling system for leaks	71
1.3	Draining and filling cooling system without electric vacuum pump VAS 6096/2	71
1.4	Filling cooling system with electric vacuum pump VAS 6096/2	80
1.5	Checking filling quality of cooling system	88
1.6	Checking electric vacuum pump VAS 6096/2	90
1.7	Flushing cooling system	90
1.8	Flushing cooling system - quick reference guide	112
2	Coolant pump/thermostat assembly	114
2.1	Assembly overview - coolant pump/thermostat	114
2.2	Assembly overview - electric coolant pump	114
2.3	Assembly overview - coolant temperature senders	116
2.4	Removing and installing electric coolant pump	116
2.5	Removing and installing coolant pump	123
2.6	Removing and installing thermostat	123
2.7	Removing and installing coolant valve for cylinder head N489	123
2.8	Checking thermostat	123
2.9	Removing and installing coolant temperature sender G62	123
3	Coolant pipes	124
3.1	Assembly overview - coolant pipes	124
3.2	Removing and installing coolant pipes	127
4	Radiators/radiator fans	144
4.1	Assembly overview - radiators/radiator fans	144
4.2	Assembly overview - radiator cowl and radiator fans	149
4.3	Removing and installing radiator	150
4.4	Removing and installing radiator cowl	161
4.5	Removing and installing radiator fans	162
21	- Turbocharging/supercharging	164
1	Turbocharger	164
2	Charge air system	165
23	- Mixture preparation - injection	166
1	Injection system	166
1.1	Overview - fuel system	166
1.2	Overview of fitting locations - injection system	166
1.3	Filling and bleeding fuel system	178
1.4	Checking fuel system for leaks	178
2	Vacuum system	179
3	Air filter	180
3.1	Assembly overview - air filter housing	180
3.2	Removing and installing air filter housing	182
4	Intake manifold	185
4.1	Assembly overview - intake manifold	185
4.2	Removing and installing throttle valve module J338	185
4.3	Removing and installing intake manifold	185
5	Injectors/high-pressure reservoir (rail)	186
6	High-pressure pump	187
7	Senders and sensors	188
8	Lambda probe	189
9	Engine control unit	190
9.1	Removing and installing engine control unit J623	190
26	- Exhaust system	196

1	Exhaust pipes/silencers	196
1.1	Assembly overview - silencer	196
1.2	Removing and installing front exhaust pipe	204
1.3	Removing and installing rear silencer	208
1.4	Separating exhaust pipes/silencers	212
1.5	Stress-free alignment of exhaust system	214
1.6	Checking exhaust system for leaks	215
2	Emission control system	216
3	SCR (selective catalytic reduction) system	217
3.1	Assembly overview - reducing agent tank	217
3.2	Assembly overview - reducing agent supply line	223
3.3	Assembly overview - delivery unit for reducing agent	223
3.4	Draining reducing agent tank	223
3.5	Removing and installing filler pipe for reducing agent tank	228
3.6	Removing and installing reducing agent tank	235
3.7	Removing and installing delivery unit for reducing agent	242
3.8	Removing and installing injector for reducing agent N474	242
3.9	Removing and installing control unit for reducing agent heater J891	243
4	Exhaust gas temperature regulation	246
4.1	Assembly overview - exhaust gas temperature regulation	246
4.2	Removing and installing parts of exhaust gas temperature regulation	246
5	Exhaust gas recirculation	248
28	Glow plug system	249
1	Glow plug system	249