

Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when working on the fuel system	1
1.2 Safety precautions when working on vehicles with start/stop system	2
1.3 Safety precautions when using testers and measuring instruments during a road test	2
1.4 Safety precautions when working on the SCR system	2
2 Repair instructions	4
2.1 Rules for cleanliness	4
2.2 Test conditions	4
2.3 Identification plates	5
2.4 Use of impact wrenches	5
2.5 Contact corrosion	6
2.6 Routing and attachment of pipes, hoses and wiring	6
2.7 Nuts, bolts	6
20 - Fuel supply system	7
1 Fuel tank	7
1.1 Assembly overview - fuel tank	7
1.2 Draining fuel tank	18
1.3 Removing and installing fuel tank	22
1.4 Removing and installing misfuelling prevention device	41
1.5 Deactivating misfuelling prevention device	45
2 Fuel delivery unit/fuel gauge senders	48
2.1 Assembly overview - fuel delivery unit/fuel gauge senders	48
2.2 Removing and installing fuel delivery unit/fuel gauge senders	56
2.3 Bleeding fuel line for metering pump	68
2.4 Removing and installing fuel gauge sender G	69
2.5 Removing and installing fuel gauge sender 2 G169	71
3 Plug-in connectors	75
3.1 Disconnecting plug-in connectors	75
4 Activated charcoal filter system	79
4.1 Assembly overview - activated charcoal filter system	79
4.2 Assembly overview - activated charcoal filter air flushing pump	82
4.3 Removing and installing activated charcoal filter	82
4.4 Checking fuel system for leaks - Korea and China only	84
4.5 Removing and installing air filter for activated charcoal filter system	90
4.6 Removing and installing fuel system diagnostic pump	90
4.7 Removing and installing activated charcoal filter air flushing pump	91
4.8 Removing and installing cut-off valve for activated charcoal filter air flushing	92
5 Fuel filter	93
5.1 Assembly overview - fuel filter	93
5.2 Removing and installing fuel filter	95
6 Accelerator mechanism	97
6.1 Assembly overview - accelerator pedal module	97
6.2 Removing and installing accelerator pedal module GX2	98
7 Fuel pump	99
7.1 Checking fuel system pressurisation pump G6	99
7.2 Removing and installing suction-jet pump	109
7.3 Removing and installing fuel pump control unit J538	109