

001 - Basic equipment , (L0L)	1-22
1. Basic equipment , (L0L)	1
2. Heated rear window relay, Fuse holder C	2
3. Relay for power sockets, Fuse holder C	3
4. Windscreen wiper switch, Intermittent wiper switch, Steering column electronics control unit, Fuse holder C	4
5. Ignition/starter switch, Turn signal switch, Steering column electronics control unit	5
6. Cruise control system switch, Steering column electronics control unit, Ignition key withdrawal lock solenoid	6
7. Onboard supply control unit	7
8. Centre switch module in dash panel, Onboard supply control unit	8
9. Centre switch module in dash panel, Onboard supply control unit	9
10. Light switch, Rain and light sensor, Onboard supply control unit	10
11. Wiper motor control unit, Onboard supply control unit, Headlight washer system pump, Rear window wiper motor, Windscreen and rear window washer pump, Tank filler flap locking motor	11
12. Suppression capacitor, Front right brake pad wear sender, Onboard supply control unit	12
13. Bonnet contact switch, Bonnet contact switch 2, Onboard supply control unit, Left washer jet heater element, Right washer jet heater element	13
14. Reversing light switch, Brake fluid level warning contact, Ambient temperature sensor, Coolant shortage indicator sender, Windscreen washer fluid level sender, Onboard supply control unit	14
15. Brake light switch, Onboard supply control unit, Frequency modulation (FM) frequency filter in positive wire, Heated rear window	15
16. Driver vanity mirror contact switch, Front passenger vanity mirror contact switch, Cigarette lighter, 12 V socket, 12 V socket 2, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror	16
17. Interior mirror, Driver side reading light button, Front passenger side reading light button, Warning lamp for airbag deactivated on front passenger side, Front interior light, Front roof module	17
18. Rear left reading light button, Rear right reading light button, Rear interior light, Front roof module, Rear left reading light, Rear right reading light	18
19. Data bus diagnostic interface, Coupling point on left A-pillar, bottom	19
20. Data bus diagnostic interface	20
21. Treble horn, Bass horn, Wiper motor relay 2, Horn relay, Fuse holder B	21
22. Wiper motor relay 1, Fuse holder B, USB charging socket 1	22
002 - 1.4l petrol engine , CZEA	23-40
1. 1.4l petrol engine , CZEA	23
2. Starter, Alternator with voltage regulator, Battery monitor control unit, Fuse holder A	24
3. Main relay	25
4. Starter relay 1	26
5. Engine/motor control unit	27
6. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	28
7. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Fuel metering valve, Charge air cooling pump	29
8. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Exhaust camshaft control valve 1, Valve for oil pressure control, Inlet cam actuator for cylinder 2, Exhaust cam actuator for cylinder 2	30
9. Oil pressure switch, Oil pressure switch for reduced oil pressure, Knock sensor 1, Engine/motor control unit, Inlet cam actuator for cylinder 3, Exhaust cam actuator for cylinder 3	31
10. Throttle valve module, Hall sender, Hall sender 2, Engine/motor control unit	32
11. Intake manifold sender, Charge pressure sender, Engine speed sender, Charge pressure sender, Intake air temperature sender, Intake manifold pressure sender, Fuel pressure sender, Engine/motor control unit	33
12. Charge pressure control module, Coolant temperature sender, Radiator outlet coolant temperature sender, Gearbox neutral position sender, Engine/motor control unit	34
13. Accelerator pedal module, Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Accelerator position sender, Lambda probe after catalytic converter, Engine/motor control unit, Lambda probe heater, Lambda probe 1 heater after catalytic converter	35
14. Brake light switch, Clutch position sender, Engine/motor control unit	36
15. Oil level and oil temperature sender, Engine/motor control unit	37
16. Entry and start authorisation control unit, Steering column electronics control unit, Data bus diagnostic interface, Engine/motor control unit	38
17. Radiator fan control unit, Fuel pump control unit, Engine/motor control unit, Exhaust flap control unit, Radiator fan	39
18. Reversing light switch, Coolant shortage indicator sender, Fuse holder C	40
003 - 1.6l diesel engine , DDYA	41-61
1. 1.6l diesel engine . DDYA	41

2. Battery, Starter, Voltage regulator, Alternator with voltage regulator, Battery monitor control unit, Fuse 1 on fuse holder A, Fuse 5 on fuse holder A, Fuse holder B	42
3. Main relay, Fuse holder B, Fuse 3 on fuse holder B, Fuse 4 on fuse holder B, Charge air cooling pump	43
4. Fuse holder B, Fuse 5 on fuse holder B, Fuse 6 on fuse holder B, Fuse 7 on fuse holder B, Fuse 8 on fuse holder B, Fuse 9 on fuse holder B, Fuse 17 on fuse holder B, Fuse 18 on fuse holder B	44
5. High heat output relay, Starter relay 1, Starter relay 2, Fuse holder B, Fuse 22 on fuse holder B, Fuse 23 on fuse holder B	45
6. Low heat output relay, Fuse holder B	46
7. Reversing light switch, Coolant shortage indicator sender, Terminal 15 voltage supply relay, Fuse holder C	47
8. Engine/motor control unit	48
9. Engine/motor control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4	49
10. Oil pressure switch for reduced oil pressure, Engine/motor control unit, Charge pressure control solenoid valve, Valve for oil pressure control, Coolant valve for cylinder head	50
11. Oil pressure switch, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Fuel pressure regulating valve	51
12. Coolant temperature sender, Fuel temperature sender, Exhaust gas temperature sender 1, Pressure differential sender, Charge air temperature sender before charge air cooler, Charge air temperature sender after charge air cooler, Engine/motor control unit, Fuel metering valve	52
13. Exhaust gas recirculation valve 2, Engine speed sender, Charge pressure sender, Fuel pressure sender, Engine/motor control unit	53
14. Throttle valve module, Exhaust gas recirculation valve 1, Hall sender, Position sender for charge pressure positioner, Engine/motor control unit	54
15. Air mass meter, Exhaust gas temperature sender 3, Engine/motor control unit, Exhaust flap control unit	55
16. Accelerator pedal module, Gearbox neutral position sender, Engine/motor control unit	56
17. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	57
18. Oil level and oil temperature sender, Radiator fan control unit, Engine/motor control unit, Heater element for crankcase breather, Radiator fan, Auxiliary pump for heating	58
19. Brake light switch, Clutch position sender, Engine/motor control unit	59
20. Engine/motor control unit	60
21. Fuel pump control unit, Engine/motor control unit, Radiator blind control motor	61
004 - Fuse assignment , (OK0),(L0L)	62-97
1. Fuse assignment , (OK0),(L0L)	62
2. Battery, Starter, Voltage regulator, Alternator with voltage regulator, Battery monitor control unit, Fuse holder A, Fuse 1 on fuse holder A	63
3. Fuse holder A, Fuse 2 on fuse holder A, Fuse 3 on fuse holder A, Fuse 4 on fuse holder A, Fuse 5 on fuse holder A, Fuse holder B	64
4. Fuse holder B, Fuse 1 on fuse holder B, Fuse 2 on fuse holder B, Fuse 16 on fuse holder B, Fuse 17 on fuse holder B, Fuse 18 on fuse holder B, Fuse 19 on fuse holder B, Fuse 20 on fuse holder B	65
5. Automatic gearbox control unit, Main relay, Fuse holder B, Fuse 3 on fuse holder B, Fuse 21 on fuse holder B	66
6. Fuse holder B, Fuse 4 on fuse holder B, Fuse 5 on fuse holder B	67
7. Fuse holder B, Fuse 6 on fuse holder B, Fuse 7 on fuse holder B	68
8. Fuse holder B, Fuse 8 on fuse holder B, Fuse 9 on fuse holder B	69
9. Starter relay 1, Starter relay 2, Fuse holder B, Fuse 10 on fuse holder B, Fuse 22 on fuse holder B, Fuse 23 on fuse holder B	70
10. Vacuum pump relay, High heat output relay, Horn relay, Fuse holder B, Fuse 11 on fuse holder B, Fuse 12 on fuse holder B, Fuse 15 on fuse holder B	71
11. Low heat output relay, Fuse holder B	72
12. Wiper motor relay 2, Engine component power supply relay, Fuse holder B	73
13. Wiper motor relay 1, Fuse holder B	74
14. Fuse holder B, Fuse holder C	75
15. Fuse holder C	76
16. Fuse holder C	77
17. Ignition/starter switch, Fuse holder C	78
18. Fuse holder C	79
19. Heated rear window relay, Terminal 15 voltage supply relay, Fuse holder C, Heated rear window	80
20. Fuse holder C	81
21. Fuse holder C	82
22. Toll collection sender, Fuse holder C	83
23. Charging unit 1 for mobile devices, Fuse holder C	84
24. Fuse holder C	85
25. Fuse holder C	86

26. Fuse holder C	87
27. Fuse holder C	88
28. Relay for reducing agent metering system, Fuse holder C	89
29. Engine/motor control unit, Fuse holder F	90
30. Engine/motor control unit	91
31. Onboard supply control unit	92
32. Coupling point on left A-pillar, bottom	93
33. Coupling point on left A-pillar, bottom, Coupling point in engine compartment, left	94
34. Coupling point in engine compartment, left	95
35. Coupling point 1 for steering, Coupling point in engine compartment, left	96
36. Driving school mode relay, Control unit for special installations, Fuse holder D, Coupling point 1 for reducing agent metering system, Coupling point 2 for reducing agent metering system	97
005 - Convenience system, left-hand drive , (LOL)	98-125
1. Convenience system, left-hand drive , (LOL)	98
2. Driver door control unit, Coupling point for front left door, Light for sill panel moulding background lighting, driver side	99
3. Contact sensor for driver exterior door handle, Driver door control unit, Coupling point for front left door, Driver door lock unit, Driver side window regulator motor	100
4. Operating unit for window regulator in driver door, Driver door control unit	101
5. Exterior mirror adjuster, Mirror adjustment changeover switch, Driver side interior locking button for central locking system, Driver door control unit	102
6. Rear lid remote release switch, Button for deactivating interior monitoring and vehicle inclination sensor, Driver door control unit, Central locking SAFELOCK function warning lamp, Light for driver door background lighting	103
7. Driver door control unit, Light for driver side door loudspeaker trim, Driver side exterior mirror	104
8. Driver door control unit, Driver side exterior mirror	105
9. Front passenger door control unit, Lane change assist control unit, Lane change assist control unit 2, Coupling point for front right door, Light for sill panel moulding background lighting, front passenger side	106
10. Contact sensor for front passenger exterior door handle, Front passenger door control unit, Coupling point for front right door, Front passenger door lock unit, Light for passenger door background lighting	107
11. Window regulator switch in front passenger door, Front passenger side interior locking button for central locking system, Front passenger door control unit, Light for passenger side door loudspeaker trim	108
12. Front passenger door control unit, Passenger side exterior mirror, Front passenger side window regulator motor	109
13. Front passenger door control unit, Coupling point for rear left door, Passenger side exterior mirror	110
14. Rear driver side door control unit, Control unit with rear driver side window regulator motor, Coupling point for rear left door, Rear driver side window regulator motor	111
15. Operating unit in rear door, driver side, Rear driver side interior locking button for central locking system, Rear driver side door control unit	112
16. Rear driver side door control unit, Rear door lock unit, driver side	113
17. Rear passenger side door control unit, Coupling point for rear right door	114
18. Operating unit in rear door, passenger side, Rear passenger side door control unit, Control unit with rear passenger side window regulator motor	115
19. Rear passenger side interior locking button for central locking system, Rear passenger side door control unit, Rear door lock unit, passenger side	116
20. Rear passenger side door control unit, Fuse holder C, Rear door lock unit, passenger side	117
21. Terminal 15 voltage supply relay, Fuse holder C	118
22. Onboard supply control unit	119
23. Rear lid handle release button, Onboard supply control unit, Left number plate light, Right number plate light	120
24. Rear lid contact switch for anti-theft alarm, Alarm horn, Onboard supply control unit, Rear lid lock unit, Left luggage compartment light, Right luggage compartment light	121
25. Interior monitoring sensor, Anti-theft alarm sensor, Onboard supply control unit, Light 1 for front centre console background lighting, Light 2 for front centre console background lighting	122
26. Onboard supply control unit, Light 3 for front centre console background lighting, Light 4 for front centre console background lighting, Light for centre dash panel background lighting	123
27. Onboard supply control unit, Front left footwell illumination bulb, Front right footwell illumination bulb, Light for right dash panel background lighting	124
28. Data bus diagnostic interface	125
006 - Airbag systems , (LOL)	126-135
1. Airbaa svstems . (LOL)	126

2. Airbag control unit	127
3. Key-operated switch to deactivate airbag on front passenger side, Rear belt switch, driver side, Rear belt switch, passenger side, Airbag control unit	128
4. Driver side belt switch, Driver side seat position sensor, Airbag control unit, Side airbag igniter on driver side	129
5. Front passenger side belt switch, Seat occupied sensor on front passenger side, Front passenger side seat position sensor, Airbag control unit, Airbag igniter 1 on front passenger side, Side airbag igniter on front passenger side	130
6. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Rear side airbag crash sensor on driver side, Front airbag crash sensor for driver side, Front airbag crash sensor for front passenger side, Airbag control unit, Steering column electronics control unit, Airbag igniter on driver side	131
7. Rear side airbag crash sensor on passenger side, Airbag control unit, Rear belt tensioner igniter on driver side, Rear belt tensioner igniter on passenger side, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter	132
8. Driver side belt force limiter, Airbag control unit, Control unit for front left belt tensioner, Front left seat belt, Driver seat belt tensioner igniter 1	133
9. Front passenger side belt force limiter, Airbag control unit, Control unit for front right belt tensioner, Front right seat belt, Front passenger seat belt tensioner igniter 1	134
10. Airbag control unit, Warning lamp for airbag deactivated on front passenger side, Switching unit for high-voltage battery	135
007 - Data bus network	136-156
1. Data bus network	136
2. Data bus diagnostic interface	137
3. Data bus diagnostic interface, Diagnostic connection	138
4. Data bus diagnostic interface	139
5. Data bus diagnostic interface	140
6. Data bus diagnostic interface	141
7. Data bus diagnostic interface	142
8. Data bus diagnostic interface	143
9. Data bus diagnostic interface	144
10. Data bus diagnostic interface	145
11. Data bus diagnostic interface	146
12. Data bus diagnostic interface	147
13. Emergency call module control unit and communication unit, Coupling point on left A-pillar, bottom	148
14. Connection 1 (running gear CAN bus, high), in engine compartment wiring harness, Connection 1 (running gear CAN bus, low), in engine compartment wiring harness	149
15. Connection 2 (CAN bus extended high), in engine compartment wiring harness, Connection 2 (CAN bus extended low), in engine compartment wiring harness	150
16. Auxiliary hydraulic pump 1 for gearbox oil, Connection 1 (powertrain CAN bus, high), in engine compartment wiring harness, Connection 1 (powertrain CAN bus, low), in engine compartment wiring harness	151
17. Automatic gearbox control unit, Brake servo, Connection 1 (powertrain CAN bus, high), in engine compartment wiring harness, Connection 1 (powertrain CAN bus, low), in engine compartment wiring harness	152
18. Charge voltage control unit for high-voltage battery, Control unit for high-voltage battery charging unit	153
19. Power and control electronics for electric drive, Control unit for high-voltage battery charging unit, Coupling point on high-voltage battery	154
20. Connection 1 (LIN bus) in engine compartment wiring harness	155
21. Connection 2 (LIN bus) in engine compartment wiring harness	156
008 - LED headlights , (8IT)	157-164
1. LED headlights , (8IT)	157
2. Rear left vehicle level sender, Control unit for cornering light and headlight range control	158
3. Control unit for cornering light and headlight range control, Left light control unit, Left LED module for daytime running light and side light, Front left headlight, Front left turn signal bulb	159
4. Output module 1 for left LED headlight, Control unit for cornering light and headlight range control, Left light control unit, Front left headlight, Left headlight dipped beam bulb, Left headlight main beam bulb, Left headlight range control motor	160
5. Output module 1 for left LED headlight, Front left headlight, Left headlight main beam bulb, Left static cornering light	161
6. Right light control unit, Right LED module for daytime running light and side light, Front right headlight, Front right turn signal bulb	162
7. Output module 1 for right LED headlight, Right light control unit, Front right headlight, Right headlight dipped beam bulb. Right headlight main beam bulb. Right headlight range control motor	163

8. Output module 1 for right LED headlight, Front right headlight, Right headlight main beam bulb, Right static cornering light	164
009 - Auxiliary air heater , (7E6)	165-167
1. Auxiliary air heater , (7E6)	165
2. High heat output relay, Heater element fuse 2, Heater element fuse 3, Auxiliary air heater element	166
3. Low heat output relay, Heater element fuse 1	167
010 - Electrically operated rear lid , (4E7)	168-172
1. Electrically operated rear lid , (4E7)	168
2. Data bus diagnostic interface, Rear lid control unit	169
3. Operating unit for rear lid control, Onboard supply control unit, Rear lid control unit, Power latching motor for rear lid	170
4. Rear lid warning buzzer, Rear lid control unit, Rear lid drive unit	171
5. Rear lid control unit, Rear lid drive unit 2	172
011 - Auxiliary heater , (9M9)	173-176
1. Auxiliary heater , (9M9)	173
2. Auxiliary heater control unit, Metering pump	174
3. Auxiliary heater control unit, Combustion air blower, Circulation pump	175
4. Remote control receiver for auxiliary heater, Auxiliary heater aerial	176
012 - Automatic air conditioning system , (9AK)	177-185
1. Automatic air conditioning system , (9AK)	177
2. Fresh air blower control unit, Fresh air blower	178
3. Heater and air conditioning controls, Magnetic clutch relay	179
4. Heater and air conditioning controls	180
5. Heater and air conditioning controls, Left vent temperature sender, Right vent temperature sender, Footwell vent temperature sender, Evaporator output temperature sender, Air distribution flap	181
6. Heater and air conditioning controls, Defroster flap, Air recirculation flap	182
7. Heater and air conditioning controls, Front left temperature flap, Front right temperature flap	183
8. Air quality sensor, Humidity sender in fresh air intake duct, Pressure sender for refrigerant circuit, Air conditioner sensor for fine particle concentration	184
9. Air conditioning system magnetic clutch, Air conditioner compressor	185
013 - Air conditioning system with manual regulation , (KH6)	186-191
1. Air conditioning system with manual regulation , (KH6)	186
2. Heater and air conditioning controls, Magnetic clutch relay, Fresh air blower control unit, Fresh air blower	187
3. Heater and air conditioning controls, Air distribution flap	188
4. Heater and air conditioning controls, Evaporator output temperature sender, Temperature flap, Air recirculation flap	189
5. Air conditioner compressor	190
6. Pressure sender for refrigerant circuit, Air conditioner sensor for fine particle concentration	191
014 - Seat heating , (4A3)	192-195
1. Seat heating , (4A3)	192
2. Onboard supply control unit, Front left backrest, Seat heating (driver side)	193
3. Onboard supply control unit, Front right backrest, Heated seat cushion for front passenger seat	194
4. Onboard supply control unit, Data bus diagnostic interface	195
015 - Sliding sunroof (open-sky system) , (3FB)	196-197
1. Sliding sunroof (open-sky system) , (3FB)	196
2. Sunroof button, Sliding sunroof adjustment control unit, Coupling point for sliding sunroof, Sliding sunroof motor	197
016 - Halogen headlights , (8ID)	198-201
1. Halogen headlights , (8ID)	198
2. Headlight range control and instrument illumination regulator, Onboard supply control unit, Front left headlight, Left headlight range control motor	199
3. Onboard supply control unit, Bulb for left daytime running light and side light, Front left headlight, Front right headlight, Front left turn signal bulb, Left headlight dipped beam bulb, Left headlight main beam bulb, Right headlight range control motor	200
4. Onboard supply control unit, Bulb for right daytime running light and side light, Front right headlight, Front right turn signal bulb, Right headlight dipped beam bulb, Right headlight main beam bulb	201
017 - Adjustable lumbar support , (L0L),(7P1)	202-205
1. Adjustable lumbar support , (L0L),(7P1)	202
2. Driver seat lumbar support adjustment switch, Lumbar support for driver seat, Driver seat lumbar support longitudinal adjustment motor, Driver seat lumbar support height adjustment motor	203
3. Front passenger seat lumbar support adjustment switch, Front passenger seat lumbar support longitudinal adjustment motor, Front passenger seat lumbar support height adjustment motor	204
4. Fuse holder C. Front passenger seat adjustment thermal fuse 1	205

018 - Trailer coupling , (1D2),(1M5)	206-210
1. Trailer coupling , (1D2),(1M5)	206
2. Trailer detector control unit	207
3. Trailer detector control unit, Trailer socket	208
4. Trailer detector control unit, Trailer socket	209
5. Trailer detector control unit, Onboard supply control unit, Data bus diagnostic interface	210
019 - Automatic anti-dazzle interior mirror , (4L6)	211-213
1. Automatic anti-dazzle interior mirror , (4L6)	211
2. Interior mirror, Light sensor, Main beam assist control unit	212
3. Interior mirror, Humidity sender, Rain and light sensor, Driver door control unit, Front passenger door control unit, Coupling point for front left door	213
020 - Parking aid (PDC) , (7X1),(7X2)	214-217
1. Parking aid (PDC) , (7X1),(7X2)	214
2. Rear parking aid warning buzzer, Front parking aid warning buzzer, Parking aid control unit	215
3. Front right parking aid sender, Front centre right parking aid sender, Front centre left parking aid sender, Front left parking aid sender, Parking aid control unit	216
4. Rear left parking aid sender, Rear centre left parking aid sender, Rear centre right parking aid sender, Rear right parking aid sender, Parking aid control unit	217
021 - Parking aid (PDC) , (7X5)	218-223
1. Parking aid (PDC) , (7X5)	218
2. Rear parking aid warning buzzer, Front parking aid warning buzzer, Parking aid control unit	219
3. Centre switch module in dash panel, Front left parking aid sender, Front left sender for park assist steering on left side of vehicle, Parking aid control unit	220
4. Front right parking aid sender, Front centre right parking aid sender, Front centre left parking aid sender, Front right sender for park assist steering on right side of vehicle, Parking aid control unit	221
5. Rear left parking aid sender, Rear centre left parking aid sender, Rear centre right parking aid sender, Rear left park assist steering sender, Parking aid control unit	222
6. Rear right parking aid sender, Rear right park assist steering sender, Parking aid control unit	223
022 - Front camera for driver assist systems , (QK1)	224-226
1. Front camera for driver assist systems , (QK1)	224
2. Data bus diagnostic interface, Front camera for driver assist systems, Windscreen heater for front sensors	225
3. Adaptive cruise control unit	226
024 - Entry and start authorisation , (4F2),(4I3)	227-233
1. Entry and start authorisation , (4F2),(4I3)	227
2. Entry and start authorisation button, Entry and start authorisation control unit	228
3. Entry and start authorisation control unit, Onboard supply control unit	229
4. Contact sensor for driver exterior door handle, Contact sensor for front passenger exterior door handle, Entry and start authorisation control unit, Driver side aerial for entry and start system	230
5. Entry and start authorisation control unit, Passenger side aerial for entry and start system, Rear bumper aerial for entry and start system, Luggage compartment aerial for entry and start system, Interior aerial 1 for entry and start system	231
6. Entry and start authorisation control unit, Control unit for electronic steering column lock	232
7. Steering column electronics control unit	233
025 - Adaptive suspension , (2H4)	234-238
1. Adaptive suspension , (2H4)	234
2. Electronically controlled damping control unit, Front left shock absorber damping adjustment valve	235
3. Front left vehicle level sender, Front right vehicle level sender, Front left body acceleration sender, Electronically controlled damping control unit, Front right shock absorber damping adjustment valve	236
4. Rear left vehicle level sender, Front right body acceleration sender, Rear body acceleration sender, Electronically controlled damping control unit, Rear left shock absorber damping adjustment valve, Rear right shock absorber damping adjustment valve	237
5. Centre switch module in dash panel, Driving mode selection button, Onboard supply control unit, Driving mode selection warning lamp	238
026 - Interface for special functions , (7G9)	239-240
1. Interface for special functions , (7G9)	239
2. Interface control unit for vehicle location system	240
027 - Infotainment MOST bus	241-243
1. Infotainment MOST bus	241
2. Digital sound package control unit, Control unit 1 for information electronics	242
3. Control unit 1 for information electronics, TV tuner	243
028 - Multifunction steering wheel	244-248
1. Multifunction steering wheel	244

2. Turn signal switch, Cruise control system switch, Steering column electronics control unit, Data bus diagnostic interface	245
3. Ignition/starter switch, Windscreen wiper switch, Intermittent wiper switch, Onboard supply control unit, Steering column electronics control unit, Airbag igniter on driver side, Ignition key withdrawal lock solenoid	246
4. Multifunction buttons on left in steering wheel, Multifunction buttons on right in steering wheel, Tiptronic switch (shift down), Horn plate, Multifunction steering wheel control unit, Steering column electronics control unit	247
5. Multifunction buttons on left in steering wheel, Tiptronic switch (shift up), Multifunction steering wheel control unit	248
029 - Anti-lock brake system (ABS) with electronic stabilisation program (ESP) , (LOL)	249-255
1. Anti-lock brake system (ABS) with electronic stabilisation program (ESP) , (LOL)	249
2. ABS control unit	250
3. Front right speed sensor, Vacuum sender, Power and control electronics for electric drive, ABS control unit	251
4. Rear right speed sensor, Rear left speed sensor, Front left speed sensor, ABS control unit, Left parking brake motor, Right parking brake motor	252
5. Button for TCS and electronic stabilisation program, Auto hold button, ABS control unit, Switch illumination bulb	253
6. Parking brake button, ABS control unit	254
7. Control unit in dash panel insert, Data bus diagnostic interface, ABS warning lamp, Brake system warning lamp, Parking brake warning lamp, Warning lamp for electronic stabilisation program and TCS, Fuse holder C	255
030 - Tail light clusters , (8SK),(8SP),(8VM),(8VG),(LOL)	256-257
1. Tail light clusters , (8SK),(8SP),(8VM),(8VG),(LOL)	256
2. Onboard supply control unit, Left tail light cluster, Right tail light cluster	257
031 - Reversing camera (Rear Assist) , (KA2)	258-259
1. Reversing camera (Rear Assist) , (KA2)	258
2. Data bus diagnostic interface, Reversing camera system control unit, Control unit 1 for information electronics, Reversing camera	259
032 - Lane change assist , (7Y1),(7Y5)	260-263
1. Lane change assist , (7Y1),(7Y5)	260
2. Lane change assist control unit	261
3. Lane change assist control unit, Lane change assist control unit 2	262
4. Lane change assist warning lamp in driver side exterior mirror, Lane change assist warning lamp in passenger side exterior mirror, Driver side exterior mirror, Passenger side exterior mirror	263
033 - Head-up display , (KS2)	264-266
1. Head-up display , (KS2)	264
2. Control unit for head-up display	265
3. Rotary light switch, Sender for head-up display screen, Control unit for head-up display, Head-up display module, Head-up display screen motor	266
034 - All-wheel drive , (1X1)	267-268
1. All-wheel drive , (1X1)	267
2. All-wheel drive control unit, Data bus diagnostic interface, All-wheel drive coupling pump	268
035 - Dual clutch gearbox (DSG) , (0ES)	269-273
1. Dual clutch gearbox (DSG) , (0ES)	269
2. Gear selector movement sensor 1, Mechatronic unit for dual clutch gearbox, Solenoid valve 5, Valve 1 in gear train half 1, Valve 2 in gear train half 1, Valve 3 in gear train half 1, Valve 4 in gear train half 1, Valve 1 in gear train half 2, Cooling oil valve, Main pressure valve	270
3. Gearbox oil temperature sender, Automatic gearbox hydraulic pressure sender 1, Gearbox output speed sender, Gear selector movement sensor 2, Gear selector movement sensor 3, Temperature sender in control unit, Gearbox input speed sender 2, Gearbox input speed sender 1, Mechatronic unit for dual clutch gearbox, Valve 2 in gear train half 2, Valve 3 in gear train half 2	271
4. Selector lever, Selector lever locked in position P switch, Selector lever sensors control unit, Selector lever lock solenoid, Selector lever position display	272
5. Centre switch module in dash panel, Selector lever, Driving mode selection button, Data bus diagnostic interface, Driving mode selection warning lamp, Selector lever position display	273
036 - Sound system , (9VS)	274-280
1. Sound system , (9VS)	274
2. Digital sound package control unit, Control unit 1 for information electronics	275
3. Digital sound package control unit, Centre loudspeaker, Left effect loudspeaker, Right effect loudspeaker	276
4. Digital sound package control unit, Front left treble loudspeaker, Subwoofer	277
5. Digital sound package control unit, Front left bass loudspeaker, Front right treble loudspeaker, Front left mid-range loudspeaker	278
6. Digital sound package control unit. Rear left treble loudspeaker. Rear left bass loudspeaker.	279

Front right bass loudspeaker, Front right mid-range loudspeaker	
7. Digital sound package control unit, Rear right treble loudspeaker, Rear right bass loudspeaker, Microphone unit in front roof module, Noise cancellation microphone 1	280
037 - Sound system , (9VD)	281-286
1. Sound system , (9VD)	281
2. Control unit in dash panel insert, Control unit 1 for information electronics, Centre loudspeaker	282
3. Control unit 1 for information electronics, Front left treble loudspeaker, Subwoofer	283
4. Control unit 1 for information electronics, Front left bass loudspeaker, Front right treble loudspeaker	284
5. Control unit 1 for information electronics, Rear left treble loudspeaker, Rear left bass loudspeaker, Front right bass loudspeaker	285
6. Control unit 1 for information electronics, Rear right treble loudspeaker, Rear right bass loudspeaker	286
038 - Sound system , (8RE),(8RM)	287-291
1. Sound system , (8RE),(8RM)	287
2. Control unit 1 for information electronics, Front left treble loudspeaker	288
3. Control unit 1 for information electronics, Front left bass loudspeaker, Front right treble loudspeaker	289
4. Control unit 1 for information electronics, Rear left treble loudspeaker, Rear left bass loudspeaker, Front right bass loudspeaker	290
5. Control unit 1 for information electronics, Rear right treble loudspeaker, Rear right bass loudspeaker	291
039 - Manually controlled heater , (9AC)	292-294
1. Manually controlled heater , (9AC)	292
2. Heater and air conditioning controls, Fresh air blower control unit, Fresh air blower, Air recirculation flap	293
3. Heater and air conditioning controls, Temperature flap, Air distribution flap	294
040 - Electromechanical steering , (1N7)	295-297
1. Electromechanical steering , (1N7)	295
2. Steering moment sender, Power steering control unit	296
3. Onboard supply control unit, Data bus diagnostic interface	297
041 - Dual clutch gearbox (DSG) , (0IJ)	298-302
1. Dual clutch gearbox (DSG) , (0IJ)	298
2. Gearbox oil temperature sender, Temperature sender in control unit, Gearbox input speed sender 1, Mechatronic unit for dual clutch gearbox, Valve 1 in gear train half 1, Valve 1 in gear train half 2	299
3. Gear selector movement sensor 1, Mechatronic unit for dual clutch gearbox, Valve 4 in gear train half 1, Cooling oil valve, Auxiliary hydraulic pump 1 for gearbox oil	300
4. Selector lever, Selector lever locked in position P switch, Selector lever sensors control unit, Selector lever lock solenoid, Selector lever position display	301
5. Centre switch module in dash panel, Selector lever, Driving mode selection button, Data bus diagnostic interface, Driving mode selection warning lamp, Selector lever position display	302
042 - Dual clutch gearbox (DSG) , (0EG)	303-307
1. Dual clutch gearbox (DSG) , (0EG)	303
2. Mechatronic unit for dual clutch gearbox, Valve 2 in gear train half 1, Valve 3 in gear train half 1, Valve 4 in gear train half 1, Valve 1 in gear train half 2	304
3. Gearbox hydraulic pressure sender, Gear selector movement sensor 2, Gear selector movement sensor 3, Gear selector movement sensor 4, Temperature sender in control unit, Gearbox input speed sender 2, Clutch travel sender 1, Clutch travel sender 2, Gearbox input speed sender 1, Mechatronic unit for dual clutch gearbox, Valve 2 in gear train half 2, Valve 3 in gear train half 2, Valve 4 in gear train half 2, Hydraulic pump motor	305
4. Selector lever, Selector lever locked in position P switch, Onboard supply control unit, Selector lever sensors control unit, Selector lever lock solenoid, Selector lever position display	306
5. Centre switch module in dash panel, Selector lever, Driving mode selection button, Onboard supply control unit, Data bus diagnostic interface, Driving mode selection warning lamp, Selector lever position display	307
043 - 1.0l petrol engine , CHZD,CHZJ	308-324
1. 1.0l petrol engine , CHZD,CHZJ	308
2. Starter, Alternator with voltage regulator, Battery monitor control unit, Fuse holder A, Fuse holder B	309
3. Main relay, Fuse holder B, Fuse 3 on fuse holder B, Fuse 4 on fuse holder B, Fuse 6 on fuse holder B, Fuse 7 on fuse holder B, Fuse 8 on fuse holder B, Fuse 9 on fuse holder B, Fuse 17 on fuse holder B, Fuse 18 on fuse holder B	310
4. Starter relay 1, Starter relay 2, Fuse holder B, Fuse 10 on fuse holder B, Fuse 22 on fuse holder B, Fuse 23 on fuse holder B	311
5. Engine/motor control unit	312
6. Engine/motor control unit. Ignition coil 1 with output stage. Ignition coil 2 with output stage.	313

Ignition coil 3 with output stage, Spark plug 1, Spark plug 2, Coolant pump for low-temperature circuit	
7. Knock sensor 1, Radiator outlet coolant temperature sender, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Fuel metering valve	314
8. Throttle valve module, Radiator fan control unit, Engine/motor control unit, Radiator fan, Vacuum pump for brakes	315
9. Accelerator pedal module, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Exhaust camshaft control valve 1, Valve for oil pressure control	316
10. Charge pressure control module, Hall sender, Coolant temperature sender, Hall sender 2, Engine/motor control unit	317
11. Intake manifold sender, Charge pressure sender, Engine speed sender, Fuel pressure sender, Engine/motor control unit	318
12. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Gearbox neutral position sender, Engine/motor control unit	319
13. Oil pressure sender, Oil level and oil temperature sender, Engine/motor control unit	320
14. Entry and start authorisation control unit, Engine/motor control unit	321
15. Clutch position sender, Fuel pump control unit, Engine/motor control unit	322
16. Brake light switch, Reversing light switch, Coolant shortage indicator sender, Engine/motor control unit	323
17. Fuse holder C	324
044 - 2.0l diesel engine , CRFC,DFGA,DFHA,DCYA	325-352
1. 2.0l diesel engine , CRFC,DFGA,DFHA,DCYA	325
2. Battery, Starter, Voltage regulator, Alternator with voltage regulator, Battery monitor control unit, Fuse holder A, Fuse holder B	326
3. Main relay, Fuse holder B, Fuse 3 on fuse holder B, Fuse 4 on fuse holder B, Charge air cooling pump	327
4. Fuse holder B, Fuse 5 on fuse holder B, Fuse 6 on fuse holder B, Fuse 7 on fuse holder B, Fuse 8 on fuse holder B, Fuse 9 on fuse holder B, Fuse 10 on fuse holder B	328
5. High heat output relay, Starter relay 1, Starter relay 2, Fuse holder B, Fuse 17 on fuse holder B, Fuse 18 on fuse holder B, Fuse 22 on fuse holder B, Fuse 23 on fuse holder B	329
6. Low heat output relay, Fuse holder B	330
7. Terminal 15 voltage supply relay, Relay for reducing agent metering system, Fuse holder C	331
8. Engine/motor control unit	332
9. Engine/motor control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4	333
10. Exhaust gas temperature sender 4, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Charge pressure control solenoid valve	334
11. Engine/motor control unit, Camshaft control valve 1, Fuel pressure regulating valve, Fuel metering valve, Exhaust gas recirculation cooler changeover valve, Valve for oil pressure control, Coolant valve for cylinder head	335
12. Charge pressure sender, Fuel pressure sender, Pressure differential sender, Engine/motor control unit	336
13. Oil pressure switch, Coolant temperature sender, Exhaust gas temperature sender 1, Charge air temperature sender before charge air cooler, Charge air temperature sender after charge air cooler, Engine/motor control unit	337
14. Exhaust gas recirculation valve 1, Exhaust gas recirculation valve 2, Engine/motor control unit	338
15. Throttle valve module, Hall sender, Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Engine/motor control unit	339
16. Air mass meter, Fuel temperature sender, Engine/motor control unit, Exhaust flap control unit	340
17. Accelerator pedal module, Gearbox neutral position sender, Engine/motor control unit	341
18. Lambda probe 1 before catalytic converter, Water level sender, Engine/motor control unit, Heater element for crankcase breather	342
19. Lambda probe 1 after catalytic converter, Exhaust gas recirculation temperature sensor, Engine/motor control unit, Radiator fan	343
20. Oil level and oil temperature sender, Engine/motor control unit, Auxiliary pump for heating	344
21. Brake light switch, Clutch position sender, Engine/motor control unit	345
22. Engine speed sender, Engine/motor control unit	346
23. Engine/motor control unit	347
24. Fuel pump control unit, Engine/motor control unit	348
25. Control unit for NOx sender, Engine/motor control unit, Injector for reducing agent	349
26. Delivery unit for reducing agent metering system, Control unit for reducing agent heater	350
27. Delivery unit for reducing agent metering system, Pump for reducing agent, Heater for reducing agent tank (heater circuit 1), Heater for reducing agent line (heater circuit 2)	351
28. Reversing light switch, Coolant shortage indicator sender	352
045 - Radio , (I7Y)	353-359
1. Radio , (I7Y)	353
2. Driver side volume regulator. Multimedia svstem operatind unit. Displav unit button	354

3. Multimedia system operating unit, Control unit 1 for information electronics	355
4. Control unit 1 for information electronics, Connection for external audio sources, USB hub	356
5. Display unit for front information display and operating unit control unit, Control unit 1 for information electronics	357
6. Control unit in dash panel insert, Control unit 1 for information electronics, Front left microphone, Microphone for emergency call module	358
7. Aerial amplifier for mobile telephone, Telephone bracket, Roof aerial	359
046 - MMI with radio , (I8E),(I8S)	360-367
1. MMI with radio , (I8E),(I8S)	360
2. Driver side volume regulator, Multimedia system operating unit	361
3. Multimedia system operating unit, Control unit 1 for information electronics	362
4. Display unit for front information display and operating unit control unit, Control unit 1 for information electronics	363
5. Control unit 1 for information electronics, Emergency call module control unit and communication unit, Aerial amplifier 2, Microphone unit in front roof module, Microphone for emergency call module	364
6. Control unit 1 for information electronics, Aerial amplifier 3, Roof aerial	365
7. Control unit 1 for information electronics, Telephone aerial, Aerial amplifier for mobile telephone, LTE aerial 2	366
8. Control unit 1 for information electronics, Aerial amplifier for mobile telephone, Telephone bracket	367
047 - MMI navigation plus , (I8H),(I8L)	368-378
1. MMI navigation plus , (I8H),(I8L)	368
2. Driver side volume regulator, Multimedia system operating unit	369
3. Multimedia system operating unit, Control unit 1 for information electronics	370
4. Control unit 1 for information electronics	371
5. Control unit in dash panel insert, Control unit 1 for information electronics	372
6. Control unit in dash panel insert, Digital sound package control unit, Control unit 1 for information electronics, Front left microphone, Microphone unit in front roof module	373
7. Display unit for front information display and operating unit control unit, Control unit 1 for information electronics	374
8. Control unit 1 for information electronics, Emergency call module control unit and communication unit, Aerial amplifier 3, Microphone for emergency call module	375
9. Control unit 1 for information electronics, Aerial amplifier 2, Roof aerial	376
10. Control unit 1 for information electronics, LTE aerial 2	377
11. Control unit 1 for information electronics, Telephone aerial, Aerial amplifier for mobile telephone	378
048 - Dash panel insert , (9S4),(9S5),(9S6)	379-382
1. Dash panel insert , (9S4),(9S5),(9S6)	379
2. Immobiliser reader coil, Fuel gauge, Control unit in dash panel insert, Data bus diagnostic interface	380
3. Fuel gauge sender, Fuel delivery unit, Control unit in dash panel insert	381
4. Fuel delivery unit, Fuel gauge sender 2, Control unit in dash panel insert	382
049 - Dash panel insert , (9S8)	383-386
1. Dash panel insert , (9S8)	383
2. Immobiliser reader coil, Fuel gauge sender, Fuel delivery unit, Fuel gauge, Control unit in dash panel insert, Data bus diagnostic interface	384
3. Fuel gauge sender, Fuel delivery unit, Fuel gauge sender 2, Control unit in dash panel insert	385
4. Dash panel insert operating button, Control unit in dash panel insert, Digital sound package control unit, Control unit 1 for information electronics	386
050 - Fuel system , (1A5),(1A7),(9S8)	387-389
1. Fuel system , (1A5),(1A7),(9S8)	387
2. Main relay, Fuel pump control unit, Engine/motor control unit	388
3. Fuel gauge sender, Fuel delivery unit, Fuel gauge, Fuel system pressurisation pump, Fuel gauge sender 2, Control unit in dash panel insert, Fuel pump control unit	389
051 - Fuel system , (0F5),(1A8),(9S8)	390-392
1. Fuel system , (0F5),(1A8),(9S8)	390
2. Battery, Main relay, Fuel pump control unit, Engine/motor control unit, Fuse holder B	391
3. Fuel gauge sender, Fuel delivery unit, Fuel gauge, Fuel system pressurisation pump, Fuel gauge sender 2, Fuel pump control unit	392
052 - Fuel system , (1A5),(1A7),(9S4),(9S5),(9S6)	393-395
1. Fuel system , (1A5),(1A7),(9S4),(9S5),(9S6)	393
2. Main relay, Fuel pump control unit, Engine/motor control unit	394
3. Fuel gauge sender, Fuel delivery unit, Fuel gauge, Fuel system pressurisation pump, Fuel gauge sender 2, Control unit in dash panel insert, Fuel pump control unit	395
053 - Fuel system , (0F5),(1A8),(9S4),(9S5),(9S6)	396-398
1. Fuel svstem . (0F5).(1A8).(9S4).(9S5).(9S6)	396

2. Battery, Main relay, Fuel pump control unit, Engine/motor control unit, Fuse holder B	397
3. Fuel gauge sender, Fuel delivery unit, Fuel gauge, Fuel system pressurisation pump, Fuel gauge sender 2, Fuel pump control unit	398
054 - TV tuner , (QV1)	399-401
1. TV tuner , (QV1)	399
2. TV tuner	400
3. Aerial amplifier, TV aerial 1, TV tuner, Aerial amplifier 2, Aerial amplifier 3	401
055 - Basic equipment, right-hand drive , (LOR)	402-421
1. Basic equipment, right-hand drive , (LOR)	402
2. Heated rear window relay, Fuse holder C	403
3. Relay for power sockets, Fuse holder C	404
4. Ignition/starter switch, Windscreen wiper switch, Turn signal switch, Intermittent wiper switch, Steering column electronics control unit, Fuse holder C	405
5. Cruise control system switch, Onboard supply control unit, Steering column electronics control unit, Ignition key withdrawal lock solenoid	406
6. Onboard supply control unit	407
7. Centre switch module in dash panel, Onboard supply control unit	408
8. Centre switch module in dash panel, Onboard supply control unit	409
9. Light switch, Rain and light sensor, Onboard supply control unit	410
10. Wiper motor control unit, Onboard supply control unit, Headlight washer system pump, Rear window wiper motor, Windscreen and rear window washer pump, Tank filler flap locking motor	411
11. Suppression capacitor, Front right brake pad wear sender, Onboard supply control unit	412
12. Bonnet contact switch, Bonnet contact switch 2, Onboard supply control unit, Left washer jet heater element, Right washer jet heater element	413
13. Reversing light switch, Brake fluid level warning contact, Ambient temperature sensor, Coolant shortage indicator sender, Windscreen washer fluid level sender, Onboard supply control unit	414
14. Brake light switch, Onboard supply control unit, Frequency modulation (FM) frequency filter in positive wire, Heated rear window	415
15. Driver vanity mirror contact switch, Front passenger vanity mirror contact switch, Cigarette lighter, 12 V socket, 12 V socket 2, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror	416
16. Interior mirror, Driver side reading light button, Front passenger side reading light button, Warning lamp for airbag deactivated on front passenger side, Front interior light, Front roof module	417
17. Rear left reading light button, Rear right reading light button, Rear interior light, Front roof module, Rear left reading light, Rear right reading light	418
18. Data bus diagnostic interface, Coupling point on left A-pillar, bottom	419
19. Treble horn, Bass horn, Wiper motor relay 2, Horn relay, Fuse holder B	420
20. Wiper motor relay 1, Fuse holder B, USB charging socket 1	421
056 - Convenience system, right-hand drive , (LOR)	422-448
1. Convenience system, right-hand drive , (LOR)	422
2. Driver door control unit, Coupling point for front right door, Light for sill panel moulding background lighting, driver side	423
3. Contact sensor for driver exterior door handle, Driver door control unit, Coupling point for front right door, Driver door lock unit, Driver side window regulator motor	424
4. Operating unit for window regulator in driver door, Driver door control unit	425
5. Exterior mirror adjuster, Mirror adjustment changeover switch, Driver side interior locking button for central locking system, Driver door control unit	426
6. Rear lid remote release switch, Button for deactivating interior monitoring and vehicle inclination sensor, Driver door control unit, Central locking SAFELOCK function warning lamp	427
7. Driver door control unit, Light for driver side door loudspeaker trim, Driver side exterior mirror, Light for driver door background lighting	428
8. Driver door control unit, Driver side exterior mirror	429
9. Front passenger door control unit, Lane change assist control unit, Lane change assist control unit 2, Coupling point for front left door, Light for sill panel moulding background lighting, front passenger side	430
10. Contact sensor for front passenger exterior door handle, Front passenger door control unit, Coupling point for front left door, Front passenger door lock unit	431
11. Window regulator switch in front passenger door, Front passenger door control unit, Light for passenger side door loudspeaker trim, Light for passenger door background lighting	432
12. Front passenger door control unit, Passenger side exterior mirror, Front passenger side window regulator motor	433
13. Front passenger door control unit, Passenger side exterior mirror	434
14. Rear driver side door control unit, Coupling point for rear right door	435
15. Operating unit in rear door, driver side, Rear driver side door control unit, Control unit with rear driver side window regulator motor, Rear driver side window regulator motor	436
16. Rear driver side door control unit. Rear door lock unit. driver side	437

17. Rear passenger side door control unit, Coupling point for rear left door	438
18. Operating unit in rear door, passenger side, Rear passenger side door control unit, Control unit with rear passenger side window regulator motor	439
19. Rear passenger side door control unit, Rear door lock unit, passenger side	440
20. Terminal 15 voltage supply relay, Fuse holder C	441
21. Onboard supply control unit, Fuse holder C	442
22. Onboard supply control unit, Left number plate light, Right number plate light	443
23. Rear lid handle release button, Rear lid contact switch for anti-theft alarm, Onboard supply control unit, Rear lid lock unit, Left luggage compartment light, Right luggage compartment light	444
24. Interior monitoring sensor, Anti-theft alarm sensor, Onboard supply control unit, Light 1 for front centre console background lighting, Light 2 for front centre console background lighting	445
25. Onboard supply control unit, Light 3 for front centre console background lighting, Light 4 for front centre console background lighting, Light for centre dash panel background lighting	446
26. Onboard supply control unit, Front left footwell illumination bulb, Front right footwell illumination bulb, Light for right dash panel background lighting	447
27. Alarm horn, Onboard supply control unit, Data bus diagnostic interface	448
057 - Fuse assignment for RHD vehicles , (L0R)	449-484
1. Fuse assignment for RHD vehicles , (L0R)	449
2. Battery, Starter, Voltage regulator, Alternator with voltage regulator, Battery monitor control unit, Fuse holder A, Fuse 1 on fuse holder A	450
3. Fuse holder A, Fuse 2 on fuse holder A, Fuse 3 on fuse holder A, Fuse 4 on fuse holder A, Fuse 5 on fuse holder A, Fuse holder B	451
4. Fuse holder B, Fuse 1 on fuse holder B, Fuse 2 on fuse holder B, Fuse 16 on fuse holder B, Fuse 17 on fuse holder B, Fuse 18 on fuse holder B, Fuse 19 on fuse holder B	452
5. Automatic gearbox control unit, Main relay, Fuse holder B, Fuse 3 on fuse holder B, Fuse 20 on fuse holder B, Fuse 21 on fuse holder B	453
6. Fuse holder B, Fuse 4 on fuse holder B, Fuse 5 on fuse holder B	454
7. Fuse holder B, Fuse 6 on fuse holder B, Fuse 7 on fuse holder B	455
8. Fuse holder B, Fuse 8 on fuse holder B, Fuse 9 on fuse holder B	456
9. Starter relay 1, Starter relay 2, Fuse holder B, Fuse 10 on fuse holder B, Fuse 22 on fuse holder B, Fuse 23 on fuse holder B	457
10. High heat output relay, Horn relay, Fuse holder B, Fuse 11 on fuse holder B, Fuse 12 on fuse holder B, Fuse 15 on fuse holder B	458
11. Low heat output relay, Fuse holder B	459
12. Wiper motor relay 2, Engine component power supply relay, Fuse holder B	460
13. Wiper motor relay 1, Fuse holder B	461
14. Fuse holder B, Fuse holder C	462
15. Ignition key withdrawal lock solenoid, Fuse holder C	463
16. Fuse holder C	464
17. Ignition/starter switch, Steering column electronics control unit, Fuse holder C	465
18. Fuse holder C	466
19. Heated rear window relay, Terminal 15 voltage supply relay, Fuse holder C	467
20. Fuse holder C	468
21. Fuse holder C	469
22. Fuse holder C	470
23. Chip card reader control unit, Charging unit 1 for mobile devices, Fuse holder C	471
24. Fuse holder C	472
25. Fuse holder C	473
26. Fuse holder C	474
27. Fuse holder C	475
28. Relay for reducing agent metering system, Fuse holder C	476
29. Engine/motor control unit, Fuse holder F	477
30. Engine/motor control unit	478
31. Onboard supply control unit	479
32. Coupling point on left A-pillar, bottom	480
33. Coupling point on left A-pillar, bottom, Coupling point in engine compartment, left	481
34. Coupling point in engine compartment, left	482
35. Coupling point 1 for steering, Coupling point in engine compartment, left	483
36. Coupling point 1 for reducing agent metering system, Coupling point 2 for reducing agent metering system	484
058 - Anti-lock brake system (ABS) with electronic stabilisation program (ESP) , (L0R)	485-491
1. Anti-lock brake system (ABS) with electronic stabilisation program (ESP) , (L0R)	485
2. ABS control unit	486
3. Front right speed sensor, Vacuum sender, ABS control unit	487
4. Rear right speed sensor, Rear left speed sensor, Front left speed sensor, ABS control unit, Left parking brake motor. Right parking brake motor	488

5. Button for TCS and electronic stabilisation program, Auto hold button, ABS control unit, Switch illumination bulb	489
6. Parking brake button, ABS control unit	490
7. Control unit in dash panel insert, Data bus diagnostic interface, ABS warning lamp, Brake system warning lamp, Parking brake warning lamp, Warning lamp for electronic stabilisation program and TCS, Fuse holder C	491
059 - Airbag systems for RHD vehicles , (L0R)	492-501
1. Airbag systems for RHD vehicles , (L0R)	492
2. Airbag control unit	493
3. Key-operated switch to deactivate airbag on front passenger side, Rear belt switch, driver side, Rear belt switch, passenger side, Airbag control unit	494
4. Driver side belt switch, Driver side seat position sensor, Airbag control unit, Side airbag igniter on driver side	495
5. Front passenger side belt switch, Seat occupied sensor on front passenger side, Front passenger side seat position sensor, Airbag control unit, Airbag igniter 1 on front passenger side, Side airbag igniter on front passenger side	496
6. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Front airbag crash sensor for driver side, Front airbag crash sensor for front passenger side, Airbag control unit, Steering column electronics control unit, Airbag igniter on driver side	497
7. Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on passenger side, Airbag control unit, Rear belt tensioner igniter on driver side, Rear belt tensioner igniter on passenger side	498
8. Front passenger side belt force limiter, Airbag control unit, Control unit for front left belt tensioner, Front left seat belt, Front passenger seat belt tensioner igniter 1	499
9. Driver side belt force limiter, Airbag control unit, Control unit for front right belt tensioner, Front right seat belt, Driver seat belt tensioner igniter 1	500
10. Airbag control unit, Warning lamp for airbag deactivated on front passenger side, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter	501
060 - Adjustable lumbar support , (7P1),(L0R)	502-504
1. Adjustable lumbar support , (7P1),(L0R)	502
2. Driver seat lumbar support adjustment switch, Front passenger seat lumbar support adjustment switch, Lumbar support for driver seat, Driver seat lumbar support longitudinal adjustment motor, Driver seat lumbar support height adjustment motor	503
3. Front passenger seat lumbar support adjustment switch, Front passenger seat lumbar support longitudinal adjustment motor, Front passenger seat lumbar support height adjustment motor	504
061 - Tail light clusters , (L0R),(8SA),(8VA)	505-506
1. Tail light clusters , (L0R),(8SA),(8VA)	505
2. Interior mirror, Onboard supply control unit, Left tail light cluster, Right tail light cluster	506
062 - Tail light clusters , (L0R),(8SP),(8VM),(8VG)	507-508
1. Tail light clusters , (L0R),(8SP),(8VM),(8VG)	507
2. Onboard supply control unit, Left tail light cluster, Right tail light cluster	508
063 - 2.0l petrol engine , CZPB	509-529
1. 2.0l petrol engine , CZPB	509
2. Starter, Alternator with voltage regulator, Battery monitor control unit, Fuse holder A, Fuse holder B	510
3. Main relay, Fuse holder B	511
4. Starter relay 1, Starter relay 2, Fuse holder B	512
5. Engine/motor control unit, Engine component power supply relay, Fuse holder B	513
6. Accelerator pedal module, Engine/motor control unit, Fuel metering valve	514
7. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	515
8. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Injector 2, cylinder 1, Injector 2, cylinder 2, Injector 2, cylinder 3	516
9. Cam adjustment actuator 1, Cam adjustment actuator 2, Cam adjustment actuator 3, Cam adjustment actuator 4, Cam adjustment actuator 5, Engine/motor control unit, Injector 2, cylinder 4	517
10. Oil pressure switch, Cam adjustment actuator 6, Cam adjustment actuator 7, Cam adjustment actuator 8, Oil pressure switch for reduced oil pressure, Stage 3 oil pressure switch, Engine/motor control unit	518
11. Hall sender, Fuel pressure sender, Intake manifold flap potentiometer, Fuel pressure sender for low pressure, Engine/motor control unit	519
12. Charge pressure control module, Knock sensor 1, Coolant temperature sender, Radiator outlet coolant temperature sender, Hall sender 3, Engine/motor control unit	520
13. Intake manifold sender, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Exhaust camshaft control valve 1, Continued coolant circulation pump	521
14. Engine/motor control unit, Coolant shut-off valve, Turbocharger air recirculation valve, Intake manifold flap valve. Valve for oil pressure control. Piston cooling jet control valve	522

15. Engine/motor control unit	523
16. Charge pressure sender, Oil level and oil temperature sender, Engine/motor control unit, Coolant valve for gearbox	524
17. Engine speed sender, Air mass meter, Engine/motor control unit	525
18. Throttle valve module, Engine temperature regulation module, Engine/motor control unit	526
19. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit, Radiator fan	527
20. Brake light switch, Engine/motor control unit	528
21. Coolant shortage indicator sender	529
064 - LED headlights , (8IT)	530-538
1. LED headlights , (8IT)	530
2. Control unit for cornering light and headlight range control	531
3. Control unit for cornering light and headlight range control, Emergency call module control unit and communication unit, Left light control unit, Left LED module for daytime running light and side light, Front left headlight, Front left turn signal bulb	532
4. Output module 1 for left LED headlight, Control unit for cornering light and headlight range control, Left light control unit, Left LED module for daytime running light and side light, Front left headlight, Left headlight dipped beam bulb, Left headlight range control motor	533
5. Output module 1 for left LED headlight, Front left headlight, Left headlight main beam bulb, Left static cornering light	534
6. Right light control unit, Right LED module for daytime running light and side light, Front right headlight, Front right turn signal bulb	535
7. Output module 1 for right LED headlight, Right light control unit, Front right headlight, Right headlight dipped beam bulb, Right headlight main beam bulb, Right headlight range control motor	536
8. Output module 1 for right LED headlight, Rear left vehicle level sender, Front right headlight, Right headlight main beam bulb, Right static cornering light	537
9. Light for left signature lighting, Light for right signature lighting	538
065 - 1.6l diesel engine , DGTA,DGTE	539-563
1. 1.6l diesel engine , DGTA,DGTE	539
2. Battery, Starter, Voltage regulator, Alternator with voltage regulator, Battery monitor control unit, Fuse 1 on fuse holder A, Fuse 5 on fuse holder A, Fuse holder B	540
3. Main relay, Fuse holder B, Fuse 3 on fuse holder B, Fuse 4 on fuse holder B, Charge air cooling pump	541
4. Fuse holder B, Fuse 5 on fuse holder B, Fuse 6 on fuse holder B, Fuse 7 on fuse holder B, Fuse 8 on fuse holder B, Fuse 9 on fuse holder B, Fuse 17 on fuse holder B, Fuse 18 on fuse holder B	542
5. High heat output relay, Starter relay 1, Starter relay 2, Fuse holder B, Fuse 22 on fuse holder B, Fuse 23 on fuse holder B	543
6. Low heat output relay, Fuse holder B	544
7. Terminal 15 voltage supply relay, Relay for reducing agent metering system, Fuse holder C	545
8. Engine/motor control unit	546
9. Engine/motor control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4	547
10. Oil pressure switch for reduced oil pressure, Engine/motor control unit, Charge pressure control solenoid valve, Injector for reducing agent	548
11. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Valve for oil pressure control, Coolant valve for cylinder head	549
12. Oil pressure switch, Coolant temperature sender, Exhaust gas temperature sender 1, Charge air temperature sender before charge air cooler, Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve	550
13. Charge pressure sender, Fuel temperature sender, Fuel pressure sender, Pressure differential sender, Charge air temperature sender after charge air cooler, Engine/motor control unit	551
14. Throttle valve module, Exhaust gas recirculation valve 1, Exhaust gas recirculation valve 2, Engine speed sender, Engine/motor control unit	552
15. Hall sender, Water level sender, Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Position sender for charge pressure positioner, Exhaust gas temperature sender 4, Engine/motor control unit	553
16. Air mass meter, Gearbox neutral position sender, Engine/motor control unit, Exhaust flap control unit	554
17. Accelerator pedal module, Lambda probe 1 before catalytic converter, Engine/motor control unit	555
18. Oil level and oil temperature sender, Radiator fan control unit, Engine/motor control unit, Radiator fan, Auxiliary pump for heating	556
19. Brake light switch, Clutch position sender, Engine/motor control unit	557
20. Engine/motor control unit	558
21. Fuel pump control unit, Engine/motor control unit	559
22. Control unit for NOx sender, Control unit 2 for NOx sender, Engine/motor control unit, Heater element for crankcase breather	560
23. Delivery unit for reducing agent metering system. Control unit for reducing agent heater	561

24. Delivery unit for reducing agent metering system, Pump for reducing agent, Heater for reducing agent tank (heater circuit 1), Heater for reducing agent line (heater circuit 2)	562
25. Reversing light switch, Coolant shortage indicator sender	563
066 - 2.0l diesel engine , DFGA,DFHA	564-590
1. 2.0l diesel engine , DFGA,DFHA	564
2. Battery, Starter, Voltage regulator, Alternator with voltage regulator, Battery monitor control unit, Fuse holder A, Fuse holder B	565
3. Main relay, Fuse holder B, Fuse 3 on fuse holder B, Fuse 4 on fuse holder B, Charge air cooling pump	566
4. Fuse holder B, Fuse 5 on fuse holder B, Fuse 6 on fuse holder B, Fuse 7 on fuse holder B, Fuse 8 on fuse holder B, Fuse 9 on fuse holder B, Fuse 10 on fuse holder B	567
5. High heat output relay, Starter relay 1, Starter relay 2, Fuse holder B, Fuse 17 on fuse holder B, Fuse 18 on fuse holder B, Fuse 22 on fuse holder B, Fuse 23 on fuse holder B	568
6. Low heat output relay, Fuse holder B	569
7. Terminal 15 voltage supply relay, Relay for reducing agent metering system, Fuse holder C	570
8. Engine/motor control unit	571
9. Engine/motor control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4	572
10. Exhaust gas temperature sender 4, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Charge pressure control solenoid valve	573
11. Engine/motor control unit, Camshaft control valve 1, Fuel pressure regulating valve, Fuel metering valve, Valve for oil pressure control, Coolant valve for cylinder head	574
12. Engine speed sender, Charge pressure sender, Fuel pressure sender, Pressure differential sender, Engine/motor control unit	575
13. Oil pressure switch, Coolant temperature sender, Exhaust gas temperature sender 1, Charge air temperature sender before charge air cooler, Charge air temperature sender after charge air cooler, Engine/motor control unit	576
14. Exhaust gas recirculation valve 1, Exhaust gas recirculation valve 2, Engine/motor control unit	577
15. Throttle valve module, Hall sender, Fuel temperature sender, Exhaust gas temperature sender 2, Engine/motor control unit	578
16. Exhaust gas temperature sender 3, Engine/motor control unit, Exhaust flap control unit	579
17. Water level sender, Gearbox neutral position sender, Engine/motor control unit	580
18. Accelerator pedal module, Lambda probe 1 before catalytic converter, Engine/motor control unit	581
19. Air mass meter, Engine/motor control unit, Heater element for crankcase breather, Radiator fan	582
20. Oil level and oil temperature sender, Engine/motor control unit, Auxiliary pump for heating	583
21. Brake light switch, Clutch position sender, Engine/motor control unit	584
22. Engine/motor control unit	585
23. Fuel pump control unit, Engine/motor control unit	586
24. Control unit for NOx sender, Control unit 2 for NOx sender, Engine/motor control unit	587
25. Reversing light switch, Coolant shortage indicator sender, Engine/motor control unit, Control unit for reducing agent heater, Injector for reducing agent	588
26. Delivery unit for reducing agent metering system, Control unit for reducing agent heater, Heater for reducing agent tank (heater circuit 1)	589
27. Delivery unit for reducing agent metering system, Pump for reducing agent, Heater for reducing agent line (heater circuit 2)	590
067 - Driving aids for disabled persons, connection for control signals, voltage supply for disabled person equipment , (F0X)	591-592
1. Driving aids for disabled persons, connection for control signals, voltage supply for disabled person equipment , (F0X)	591
2. Control unit for special installations, Fuse holder D	592
068 - Driving school , (F5F)	593-596
1. Driving school , (F5F)	593
2. Driving school mode relay, Fuse holder C, Fuse holder D	594
3. Footwell light switch, Driving school mode warning buzzer, Onboard supply control unit, Driving school mode relay, Warning lamp, Driving school vehicle footwell illumination	595
4. Warning buzzer switch	596
069 - 1.5l petrol engine , DADA,DPCA	597-617
1. 1.5l petrol engine , DADA,DPCA	597
2. Starter, Alternator with voltage regulator, Battery monitor control unit, Fuse holder A, Fuse holder B	598
3. Main relay, Fuse holder B	599
4. Starter relay 1, Starter relay 2, Fuse holder B	600
5. Engine/motor control unit, Fuse holder B, Vacuum pump for brakes	601
6. Engine/motor control unit	602
7. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	603
8. Intake manifold sender. Hall sender. Intake manifold pressure sender. Hall sender 3. Engine/motor	604

control unit, Charge air cooling pump	
9. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Activated charcoal filter solenoid valve 1, Fuel metering valve	605
10. Engine/motor control unit, Camshaft control valve 1, Exhaust camshaft control valve 1, Valve for oil pressure control, Inlet cam actuator for cylinder 2, Exhaust cam actuator for cylinder 2	606
11. Engine speed sender, Knock sensor 1, Exhaust gas pressure sensor 1, Engine/motor control unit, Inlet cam actuator for cylinder 3, Exhaust cam actuator for cylinder 3	607
12. Oil pressure sender, Charge pressure sender, Charge pressure control module, Fuel pressure sender, Engine/motor control unit	608
13. Engine temperature regulation module, Coolant temperature sender, Engine outlet coolant temperature sender, Radiator outlet coolant temperature sender, Gearbox neutral position sender, Engine/motor control unit	609
14. Accelerator pedal module, Throttle valve module, Engine/motor control unit	610
15. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	611
16. Brake light switch, Clutch position sender, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	612
17. Engine/motor control unit	613
18. Oil level and oil temperature sender, Data bus diagnostic interface, Engine/motor control unit	614
19. Entry and start authorisation control unit, Steering column electronics control unit, Fuel pump control unit, Engine/motor control unit, Exhaust flap control unit	615
20. Pressure sensor for activated charcoal filter air flushing, Engine/motor control unit, Radiator fan	616
21. Reversing light switch, Coolant shortage indicator sender, Onboard supply control unit, Fuse holder C	617
070 - 2.0l petrol engine , DKZA	618-638
1. 2.0l petrol engine , DKZA	618
2. Starter, Alternator with voltage regulator, Battery monitor control unit, Fuse holder A, Fuse holder B	619
3. Main relay, Fuse holder B	620
4. Starter relay 1, Starter relay 2, Fuse holder B	621
5. Engine/motor control unit, Engine component power supply relay, Fuse holder B, Fuse holder C	622
6. Accelerator pedal module, Engine/motor control unit, Fuel metering valve	623
7. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	624
8. Oil pressure switch, Oil pressure switch for reduced oil pressure, Stage 3 oil pressure switch, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	625
9. Cam adjustment actuator 1, Cam adjustment actuator 2, Engine/motor control unit, Injector 2, cylinder 1, Injector 2, cylinder 2, Injector 2, cylinder 3, Injector 2, cylinder 4	626
10. Cam adjustment actuator 3, Cam adjustment actuator 4, Cam adjustment actuator 5, Cam adjustment actuator 6, Cam adjustment actuator 7, Cam adjustment actuator 8, Knock sensor 1, Engine/motor control unit	627
11. Intake manifold sender, Fuel pressure sender for low pressure, Pressure differential sender for particulate filter, Engine/motor control unit	628
12. Hall sender, Coolant temperature sender, Radiator outlet coolant temperature sender, Fuel pressure sender, Intake manifold flap potentiometer, Engine/motor control unit	629
13. Charge pressure control module, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Exhaust camshaft control valve 1, Continued coolant circulation pump	630
14. Engine/motor control unit, Turbocharger air recirculation valve, Intake manifold flap valve, Valve for oil pressure control, Piston cooling jet control valve	631
15. Charge pressure sender, Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Coolant valve for gearbox	632
16. Oil level and oil temperature sender, Hall sender 3, Entry and start authorisation control unit, Steering column electronics control unit, Fuel pump control unit, Engine/motor control unit	633
17. Engine speed sender, Air mass meter, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine/motor control unit	634
18. Throttle valve module, Engine temperature regulation module, Engine/motor control unit	635
19. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit, Radiator fan	636
20. Brake light switch, Data bus diagnostic interface, Engine/motor control unit	637
21. Coolant shortage indicator sender, Onboard supply control unit	638
071 - Multifunction steering wheel	639-644
1. Multifunction steering wheel	639
2. Ignition/starter switch. Turn signal switch. Cruise control system switch. Onboard supply control	640

unit, Steering column electronics control unit, Ignition key withdrawal lock solenoid	
3. Ignition/starter switch, Windscreen wiper switch, Intermittent wiper switch, Horn plate, Steering column electronics control unit, Data bus diagnostic interface, Airbag igniter on driver side	641
4. Multifunction steering wheel control unit, Steering column electronics control unit	642
5. Multifunction buttons on left in steering wheel, Multifunction buttons on right in steering wheel, Tiptronic switch (shift up), Tiptronic switch (shift down), Multifunction steering wheel control unit	643
6. Control unit for steering wheel contact detection	644
072 - Assist systems , (6K2),(6K4)	645-646
1. Assist systems , (6K2),(6K4)	645
2. Adaptive cruise control unit, Front camera for driver assist systems	646
073 - 2.0l petrol engine , DNUE	647-667
1. 2.0l petrol engine , DNUE	647
2. Starter, Alternator with voltage regulator, Fuse holder A, Fuse holder B	648
3. Main relay, Fuse holder B	649
4. Starter relay 1, Starter relay 2, Fuse holder B	650
5. Engine/motor control unit, Engine component power supply relay, Fuse holder B, Fuse holder C	651
6. Accelerator pedal module, Engine/motor control unit	652
7. Engine/motor control unit, Mechatronic unit for dual clutch gearbox	653
8. Oil pressure switch, Oil pressure switch for reduced oil pressure, Stage 3 oil pressure switch, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	654
9. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	655
10. Cam adjustment actuator 1, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Exhaust camshaft control valve 1, Continued coolant circulation pump	656
11. Cam adjustment actuator 2, Cam adjustment actuator 3, Cam adjustment actuator 4, Cam adjustment actuator 5, Cam adjustment actuator 6, Cam adjustment actuator 7, Cam adjustment actuator 8, Engine/motor control unit	657
12. Intake manifold sender, Engine/motor control unit, Turbocharger air recirculation valve, Intake manifold flap valve, Valve for oil pressure control, Piston cooling jet control valve	658
13. Throttle valve module, Engine speed sender, Knock sensor 1, Hall sender 3, Engine/motor control unit	659
14. Engine temperature regulation module, Charge pressure control module, Coolant temperature sender, Radiator outlet coolant temperature sender, Engine/motor control unit	660
15. Hall sender, Fuel pressure sender, Intake manifold flap potentiometer, Pressure differential sender for particulate filter, Engine/motor control unit	661
16. Charge pressure sender, Engine/motor control unit, Fuel metering valve, Coolant valve for gearbox	662
17. Ignition/starter switch, Entry and start authorisation control unit, Steering column electronics control unit, Engine/motor control unit, Exhaust flap control unit, Exhaust flap control unit 2	663
18. Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Fuel pump control unit, Engine/motor control unit, Radiator fan	664
19. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	665
20. Brake pedal position sender, Data bus diagnostic interface, Engine/motor control unit	666
21. Coolant shortage indicator sender, Oil level and oil temperature sender, Onboard supply control unit	667
074 - 1.4l petrol engine , CSSA,CSTA	668-683
1. 1.4l petrol engine , CSSA,CSTA	668
2. Starter, Alternator with voltage regulator, Battery monitor control unit, Fuse holder A	669
3. Main relay	670
4. Starter relay 1, Starter relay 2	671
5. Engine/motor control unit	672
6. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	673
7. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Fuel metering valve, Charge air cooling pump	674
8. Oil pressure switch, Oil pressure switch for reduced oil pressure, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Exhaust camshaft control valve 1, Valve for oil pressure control	675
9. Throttle valve module, Hall sender, Knock sensor 1, Engine/motor control unit	676
10. Intake manifold sender, Charge pressure sender, Charge pressure sender, Intake air temperature sender, Intake manifold pressure sender, Hall sender 2, Fuel pressure sender, Engine/motor control unit	677
11. Engine speed sender. Charge pressure control module. Coolant temperature sender. Radiator outlet	678

coolant temperature sender, Engine/motor control unit	
12. Accelerator pedal module, Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Accelerator position sender, Lambda probe after catalytic converter, Engine/motor control unit, Lambda probe heater, Lambda probe 1 heater after catalytic converter	679
13. Brake light switch, Engine/motor control unit	680
14. Oil level and oil temperature sender, Data bus diagnostic interface, Engine/motor control unit	681
15. Radiator fan control unit, Steering column electronics control unit, Fuel pump control unit, Engine/motor control unit, Radiator fan	682
16. Reversing light switch, Coolant shortage indicator sender, Onboard supply control unit, Fuse holder C	683
075 - 1.0l petrol engine , DKRA,DKRF	684-701
1. 1.0l petrol engine , DKRA,DKRF	684
2. Starter, Alternator with voltage regulator, Battery monitor control unit, Fuse holder A, Fuse holder B	685
3. Main relay, Fuse holder B	686
4. Starter relay 1, Starter relay 2, Fuse holder B	687
5. Engine/motor control unit	688
6. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Spark plug 1, Spark plug 2, Charge air cooling pump	689
7. Knock sensor 1, Radiator outlet coolant temperature sender, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Fuel metering valve	690
8. Throttle valve module, Engine/motor control unit, Radiator fan, Vacuum pump for brakes	691
9. Accelerator pedal module, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Exhaust camshaft control valve 1, Valve for oil pressure control	692
10. Intake manifold sender, Hall sender, Coolant temperature sender, Hall sender 3, Engine/motor control unit	693
11. Charge pressure sender, Engine speed sender, Fuel pressure sender, Exhaust gas pressure sensor 1, Engine/motor control unit	694
12. Oil pressure sender, Charge pressure control module, Gearbox neutral position sender, Engine/motor control unit	695
13. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	696
14. Oil level and oil temperature sender, Engine/motor control unit	697
15. Steering column electronics control unit, Data bus diagnostic interface, Fuel pump control unit, Engine/motor control unit	698
16. Brake light switch, Clutch position sender, ABS control unit, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	699
17. Reversing light switch, Coolant shortage indicator sender, Pressure sensor for activated charcoal filter air flushing, Onboard supply control unit, Engine/motor control unit	700
18. Fuse holder C	701
076 - 1.4l petrol engine , CSTA,DJKA,DJRA,DJSA	702-719
1. 1.4l petrol engine , CSTA,DJKA,DJRA,DJSA	702
2. Starter, Alternator with voltage regulator, Battery monitor control unit, Fuse holder A, Fuse holder B	703
3. Main relay, Fuse holder B	704
4. Starter relay 1, Starter relay 2, Fuse holder B	705
5. Vacuum pump relay, Terminal 15 voltage supply relay, Fuse holder B, Fuse holder C, Vacuum pump for brakes	706
6. Engine/motor control unit	707
7. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	708
8. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Fuel pressure regulating valve, Continued coolant circulation pump	709
9. Knock sensor 1, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Exhaust camshaft control valve 1, Valve for oil pressure control	710
10. Throttle valve module, Engine speed sender, Coolant temperature sender, Fuel pressure sender, Engine/motor control unit	711
11. Intake manifold sender, Hall sender, Radiator outlet coolant temperature sender, Hall sender 2, Engine/motor control unit	712
12. Charge pressure sender, Charge pressure control module, Oil level and oil temperature sender, Engine/motor control unit	713
13. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	714
14. Oil pressure switch, Oil pressure switch for reduced oil pressure, Automatic gearbox control unit, Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Heater element for crankcase breather	715

15. Data bus diagnostic interface, Engine/motor control unit, Radiator fan	716
16. Ignition/starter switch, Fuel tank leak detection module, Entry and start authorisation control unit, Steering column electronics control unit, Fuel pump control unit, Engine/motor control unit	717
17. Brake pedal switch, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Pressure differential sender for particulate filter, Engine/motor control unit	718
18. Reversing light switch, Accelerator pedal module, Coolant shortage indicator sender, Onboard supply control unit, Engine/motor control unit	719
077 - Adjustable driver and front passenger seats , (0K0),(3L5)	720-725
1. Adjustable driver and front passenger seats , (0K0),(3L5)	720
2. Driver seat adjustment operating unit	721
3. Driver seat adjustment operating unit, Driver seat longitudinal adjustment motor, Driver seat backrest adjustment motor, Driver seat rake adjustment motor	722
4. Driver seat lumbar support adjustment switch, Front passenger seat lumbar support adjustment switch, Lumbar support for driver seat, Driver seat lumbar support longitudinal adjustment motor, Driver seat lumbar support height adjustment motor	723
5. Front passenger seat adjustment operating unit, Front passenger seat longitudinal adjustment motor, Front passenger seat backrest adjustment motor, Front passenger seat height adjustment motor	724
6. Front passenger seat adjustment operating unit	725
078 - Adjustable driver and front passenger seats , (0K9),(3L5)	726-731
1. Adjustable driver and front passenger seats , (0K9),(3L5)	726
2. Driver seat adjustment operating unit	727
3. Driver seat adjustment operating unit, Driver seat longitudinal adjustment motor, Driver seat backrest adjustment motor, Driver seat rake adjustment motor	728
4. Driver seat lumbar support adjustment switch, Front passenger seat lumbar support adjustment switch, Lumbar support for driver seat, Driver seat lumbar support longitudinal adjustment motor, Driver seat lumbar support height adjustment motor	729
5. Front passenger seat adjustment operating unit, Front passenger seat longitudinal adjustment motor, Front passenger seat backrest adjustment motor, Front passenger seat height adjustment motor	730
6. Front passenger seat adjustment operating unit	731
079 - Communication , (714)	732-734
1. Communication , (714)	732
2. Emergency call module control unit and communication unit	733
3. Data bus diagnostic interface, Control unit for cornering light and headlight range control, Emergency call module control unit and communication unit, Emergency call module aerial, Emergency call module aerial 2	734
080 - Electric drive system , (0K9)	735-745
1. Electric drive system , (0K9)	735
2. Main relay, Fuse holder B	736
3. Radiator outlet coolant temperature sender, Temperature sender after electric drive motor, Engine/motor control unit	737
4. Accelerator pedal module, Engine/motor control unit	738
5. Entry and start authorisation control unit, Steering column electronics control unit, Engine/motor control unit, Coolant circulation pump before power and control electronics for electric drive, Coolant circulation pump before high-voltage heater (PTC)	739
6. Power and control electronics for electric drive, ABS control unit, Power steering control unit, Engine/motor control unit, Fuse holder A, Fuse 5 on fuse holder A	740
7. Power and control electronics for electric drive, Three-phase current drive, Electric drive motor	741
8. Drive motor temperature sender, Drive motor rotor position sender 1, Power and control electronics for electric drive, Three-phase current drive	742
9. Onboard supply control unit	743
10. Selector lever, Charge voltage control unit for high-voltage battery, Selector lever lock solenoid	744
11. Selector lever, Selector lever position display	745
081 - Engine sound generator , (0K9)	746-747
1. Engine sound generator , (0K9)	746
2. Data bus diagnostic interface, Engine sound generator control unit, Actuator 1 for engine sound generator	747
082 - Heated windscreen , (4GX)	748-749
1. Heated windscreen , (4GX)	748
2. Heated windscreen relay, Onboard supply control unit, Fuse holder B, Heated windscreen	749
083 - Electromechanical brake servo , (0K9)	750-754
1. Electromechanical brake servo , (0K9)	750
2. Brake servo control unit, Brake servo, Fuse holder B	751
3. Onboard supply control unit, Engine/motor control unit, Brake servo	752
4. Data bus diagnostic interface, Brake servo	753
5. Control unit for brake pressure accumulator. Brake servo. Brake svstem pressure accumulator.	754

Motor in brake pressure accumulator for energy recovery	
084 - Air conditioning system for models with high-voltage system , (0K9),(9AK)	755-761
1. Air conditioning system for models with high-voltage system , (0K9),(9AK)	755
2. Heater and air conditioning controls, Fresh air blower control unit, Fresh air blower	756
3. Heater and air conditioning controls, Left vent temperature sender, Right vent temperature sender, Footwell vent temperature sender, Evaporator output temperature sender	757
4. Heater and air conditioning controls, Air distribution flap, Defroster flap	758
5. Heater and air conditioning controls, Front left temperature flap, Air recirculation flap	759
6. Heater and air conditioning controls, Air quality sensor, Humidity sender in fresh air intake duct, Pressure sender for refrigerant circuit, Front right temperature flap	760
7. Air conditioning system relay, Control unit for air conditioner compressor, High-voltage heater (PTC) control unit, Fuse holder B	761
085 - High-voltage battery system , (0K9)	762-788
1. High-voltage battery system , (0K9)	762
2. Airbag control unit, Control unit for high-voltage battery charging unit, Fuse holder C, Maintenance connector for high-voltage system	763
3. Data bus diagnostic interface, High-voltage heater (PTC) control unit	764
4. High-voltage battery 1, Power and control electronics for electric drive, Electric drive control unit	765
5. High-voltage battery 1, High-voltage battery charging socket 1	766
6. High-voltage battery 1, Battery regulation control unit, Switching unit for high-voltage battery	767
7. High-voltage battery 1, Battery regulation control unit, Switching unit for high-voltage battery, Coupling point on high-voltage battery	768
8. High-voltage battery 1, Battery regulation control unit, DC charge contactor 1, DC charge contactor 2, Switching unit for high-voltage battery	769
9. High-voltage battery 1, Battery regulation control unit, Precharge contactor for high-voltage battery, High-voltage battery power contactor 1, Protection resistor for high-voltage battery, Switching unit for high-voltage battery	770
10. High-voltage battery 1, Current sensor for high-voltage battery, Battery regulation control unit, High-voltage battery power contactor 2, Switching unit for high-voltage battery, High-voltage system fuse 1	771
11. High-voltage battery 1, Switching unit for high-voltage battery	772
12. High-voltage battery 1, Battery module 1, Battery modules control unit	773
13. High-voltage battery 1, Battery module 2, Battery modules control unit	774
14. High-voltage battery 1, Battery module 3, Battery modules control unit	775
15. High-voltage battery 1, Battery module 4, Battery modules control unit	776
16. High-voltage battery 1, Battery module 13, Battery modules control unit	777
17. High-voltage battery 1, Battery module 14, Battery modules control unit	778
18. High-voltage battery 1, Battery module 15, Battery modules control unit	779
19. High-voltage battery 1, Battery module 16, Battery modules control unit	780
20. High-voltage battery 1, Battery module 5, Battery modules control unit 2	781
21. High-voltage battery 1, Battery module 6, Battery modules control unit 2	782
22. High-voltage battery 1, Battery module 7, Battery modules control unit 2	783
23. High-voltage battery 1, Battery module 8, Battery modules control unit 2	784
24. High-voltage battery 1, Battery module 9, Battery modules control unit 2	785
25. High-voltage battery 1, Battery module 10, Battery modules control unit 2	786
26. High-voltage battery 1, Battery module 11, Battery modules control unit 2	787
27. High-voltage battery 1, Battery module 12, Battery modules control unit 2	788
086 - High-voltage system , (0K9)	789-799
1. High-voltage system , (0K9)	789
2. Fuse holder A, Fuse holder C, Coupling point on high-voltage battery	790
3. Data bus diagnostic interface, Coupling point on high-voltage battery	791
4. ABS control unit, Maintenance connector for high-voltage system	792
5. Heater and air conditioning controls, Air conditioning system relay, Fuse holder B	793
6. Power and control electronics for electric drive, Electric drive control unit	794
7. Power and control electronics for electric drive	795
8. Power and control electronics for electric drive, Coupling point on high-voltage battery	796
9. Control unit for air conditioner compressor, Control unit for high-voltage battery charging unit, Electrical air conditioner compressor	797
10. High-voltage heater (PTC) control unit, Control unit for high-voltage battery charging unit, High-voltage heater (PTC)	798
11. Control unit for high-voltage battery charging unit	799
087 - Charging sockets for high-voltage system , (ES8)	800-807
1. Charging sockets for high-voltage system , (ES8)	800
2. Control unit for high-voltage battery charging unit, Fuse holder B, Fuse holder C	801
3. Engine/motor control unit. Control unit for high-voltage battery charging unit	802

4. Control unit for high-voltage battery charging unit, Coupling point on high-voltage battery, High-voltage battery charging socket 1	803
5. Temperature sender for charging socket 1, Charge voltage control unit for high-voltage battery, High-voltage battery charging socket 1	804
6. Actuator for high-voltage charging socket lock 2, Temperature sender for charging socket 2, Charge voltage control unit for high-voltage battery, High-voltage battery charging socket 1, High-voltage battery charging socket 2	805
7. Module for battery charge selector buttons, Actuator for high-voltage charging flap lock 1, Charge voltage control unit for high-voltage battery	806
8. Data bus diagnostic interface, Charge voltage control unit for high-voltage battery	807
088 - Fuse assignment , (0K9)	808-832
1. Fuse assignment , (0K9)	808
2. Battery, Battery monitor control unit, Fuse holder A	809
3. Fuse holder A, Fuse holder B	810
4. Main relay, Fuse holder B	811
5. Fuse holder B	812
6. Fuse holder B	813
7. Horn relay, Fuse holder B	814
8. Air conditioning system relay, Wiper motor relay 2, Fuse holder B	815
9. Wiper motor relay 1, Fuse holder B	816
10. Fuse holder B, Fuse holder C	817
11. Fuse holder C	818
12. Fuse holder C	819
13. Fuse holder C	820
14. Fuse holder C	821
15. Heated rear window relay, Terminal 15 voltage supply relay, Fuse holder C	822
16. Fuse holder C	823
17. Fuse holder C	824
18. Fuse holder C	825
19. Chip card reader control unit, Fuse holder C	826
20. Fuse holder C	827
21. Relay for power sockets, Fuse holder C	828
22. Fuse holder C	829
23. Fuse holder C	830
24. Onboard supply control unit	831
25. Coupling point on left A-pillar, bottom	832
089 - Front camera for driver assist systems , (QK1)	833-835
1. Front camera for driver assist systems , (QK1)	833
2. Data bus diagnostic interface, Front camera for driver assist systems, Windscreen heater for front sensors	834
3. Adaptive cruise control unit	835
090 - All-wheel drive , (1X1)	836-837
1. All-wheel drive , (1X1)	836
2. All-wheel drive control unit, Data bus diagnostic interface, All-wheel drive coupling pump	837
091 - Headlights , (8IY),(8IT)	838-843
1. Headlights , (8IY),(8IT)	838
2. Control unit for cornering light and headlight range control	839
3. Control unit for cornering light and headlight range control	840
4. Output module 1 for left LED headlight, Front left headlight, Left headlight range control motor	841
5. Output module 1 for right LED headlight, Onboard supply control unit, Front right headlight, Right headlight range control motor	842
6. Rear left vehicle level sender, Front left vehicle level sender, Onboard supply control unit	843
092 - Headlights , (8EX)	844-849
1. Headlights , (8EX)	844
2. Data bus diagnostic interface, Control unit for cornering light and headlight range control	845
3. Control unit for cornering light and headlight range control	846
4. Output module 1 for left LED headlight, Left LED module for daytime running light and side light, Front left headlight, Left headlight range control motor	847
5. Output module 1 for right LED headlight, Onboard supply control unit, Right LED module for daytime running light and side light, Front right headlight, Right headlight range control motor	848
6. Rear left vehicle level sender, Onboard supply control unit	849
093 - Emergency call module , (I7Y),(I8L),(I8S),(I8E)	850-854
1. Emergency call module , (I7Y),(I8L),(I8S),(I8E)	850
2. Airbag control unit, Emergency call module control unit and communication unit, Loudspeaker for emergency call module, Front roof module	851
3. Emergency assistance call button. Emergency call module control unit and communication unit.	852

Microphone unit in front roof module, Emergency call module aerial 2, Front roof module	853
4. Control unit 1 for information electronics, Emergency call module control unit and communication unit	854
5. Control unit 1 for information electronics, Emergency call module control unit and communication unit, GPS aerial, Roof aerial, Emergency call module aerial	855-860
094 - Automatic gearbox , (0IH)	855
1. Automatic gearbox , (0IH)	856
2. Automatic gearbox control unit, Gearbox, Solenoid valve 1, Solenoid valve 2, Solenoid valve 4, Solenoid valve 5, Selector lever lock solenoid, Ignition key withdrawal lock solenoid, Fuse holder B, Fuse holder C	857
3. Oil pressure switch for automatic gearbox, Gearbox input speed sender 1, Automatic gearbox control unit, Gearbox, Solenoid valve 3	858
4. Automatic gearbox control unit, Gearbox	859
5. Selector lever, Selector lever locked in position P switch, Automatic gearbox control unit	860
6. Automatic gearbox control unit, Onboard supply control unit, Data bus diagnostic interface, Engine/motor control unit	861-877
095 - 1.0l petrol engine , DLAA	861
1. 1.0l petrol engine , DLAA	862
2. Starter, Alternator with voltage regulator, Battery monitor control unit, Fuse holder A, Fuse holder B	863
3. Main relay, Fuse holder B	864
4. Starter relay 1, Starter relay 2, Fuse holder B, Fuse holder C	865
5. Engine/motor control unit	866
6. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Spark plug 1, Spark plug 2, Charge air cooling pump	867
7. Knock sensor 1, Radiator outlet coolant temperature sender, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Fuel metering valve	868
8. Throttle valve module, Gearbox neutral position sender, Engine/motor control unit, Radiator fan	869
9. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Exhaust camshaft control valve 1, Valve for oil pressure control, Piston cooling jet control valve, Inlet camshaft control valve 1	870
10. Accelerator pedal module, Charge pressure control module, Coolant temperature sender, Engine/motor control unit	871
11. Oil pressure sender, Charge pressure sender, Engine speed sender, Engine outlet coolant temperature sender, Fuel pressure sender, Engine/motor control unit	872
12. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Exhaust gas pressure sensor 1, Engine/motor control unit	873
13. Oil level and oil temperature sender, Engine/motor control unit	874
14. Steering column electronics control unit, Data bus diagnostic interface, Fuel pump control unit, Engine/motor control unit	875
15. Brake light switch, Clutch position sender, ABS control unit, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	876
16. Intake manifold sender, Pressure sensor for activated charcoal filter air flushing, Inlet camshaft position sender, Exhaust camshaft position sender, Engine/motor control unit	877
17. Reversing light switch, Coolant shortage indicator sender, Engine temperature regulation module, Onboard supply control unit, Engine/motor control unit	878-905
096 - 2.0l diesel engine , DTRB,DTRD,DTTC,DXRB,DXRC	878
1. 2.0l diesel engine , DTRB,DTRD,DTTC,DXRB,DXRC	879
2. Battery, Starter, Alternator with voltage regulator, Voltage regulator, Battery monitor control unit, Fuse holder A, Fuse holder B	880
3. Main relay, Fuse holder B, Fuse 3 on fuse holder B, Fuse 4 on fuse holder B	881
4. Fuse holder B, Fuse 6 on fuse holder B, Fuse 7 on fuse holder B, Fuse 8 on fuse holder B, Fuse 10 on fuse holder B, Fuse 17 on fuse holder B	882
5. High heat output relay, Starter relay 1, Starter relay 2, Fuse holder B, Fuse 18 on fuse holder B, Fuse 22 on fuse holder B, Fuse 23 on fuse holder B	883
6. Low heat output relay, Fuse holder B	884
7. Terminal 15 voltage supply relay, Relay for reducing agent metering system, Fuse holder C	885
8. Engine/motor control unit, Valve for oil pressure control, Charge air cooling pump, Auxiliary pump for heating	886
9. Engine/motor control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4	887
10. Fuel pressure sender, Engine/motor control unit, Fuel metering valve	888
11. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	889
12. Engine speed sender, Charge pressure sender, Engine/motor control unit, Fuel pressure regulating valve, Coolant valve for cylinder head, Actuator for engine temperature regulation, Piston cooling jet control valve	

13. Throttle valve module, Temperature and pressure sender for low-pressure fuel system, Fuel temperature sender, Engine/motor control unit	890
14. Exhaust gas recirculation valve 1, Exhaust gas recirculation valve 2, Engine/motor control unit, Turbocharger 1 control unit	891
15. Hall sender, Exhaust gas temperature sender 1, Exhaust gas temperature sender 2, Temperature sensor 2 for exhaust gas recirculation, Temperature sender for engine temperature regulation, Coolant temperature sender 2, Engine/motor control unit	892
16. Coolant temperature sender, Air mass meter, Exhaust gas temperature sender 3, Charge air temperature sender before charge air cooler, Charge air temperature sender after charge air cooler, Engine/motor control unit	893
17. Lambda probe 1 before catalytic converter, Oil pressure sender, Pressure differential sender, Exhaust gas temperature sender 4, Engine/motor control unit	894
18. Water level sender, Gearbox neutral position sender, Engine/motor control unit	895
19. Accelerator pedal module, Oil level and oil temperature sender, Engine/motor control unit, Injector 2 for reducing agent	896
20. Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Heater element for crankcase breather, Injector for reducing agent, Radiator fan	897
21. Brake light switch, Clutch position sender, Engine/motor control unit	898
22. Engine/motor control unit	899
23. Engine/motor control unit, Exhaust flap control unit	900
24. Fuel pump control unit, Engine/motor control unit	901
25. Control unit for NOx sender, Control unit 2 for NOx sender, Particulate sensor, NOx sender 3, Engine/motor control unit, Control unit for NOx sender 2	902
26. Reversing light switch, Coolant shortage indicator sender	903
27. Delivery unit for reducing agent metering system, Control unit for reducing agent heater	904
28. Delivery unit for reducing agent metering system, Pump for reducing agent, Heater for reducing agent tank (heater circuit 1), Heater for reducing agent line (heater circuit 2)	905
097 - Fuel system , (0F5),(1A8),(9S8)	906-908
1. Fuel system , (0F5),(1A8),(9S8)	906
2. Battery, Main relay, Fuel pump control unit, Engine/motor control unit, Fuse holder B	907
3. Fuel gauge sender, Fuel delivery unit, Fuel gauge, Fuel system pressurisation pump, Fuel gauge sender 2, Fuel pump control unit	908
098 - Fuel system , (0F5),(1A8),(9S4),(9S5),(9S6)	909-911
1. Fuel system , (0F5),(1A8),(9S4),(9S5),(9S6)	909
2. Battery, Main relay, Fuel pump control unit, Engine/motor control unit, Fuse holder B	910
3. Fuel gauge sender, Fuel delivery unit, Fuel gauge, Fuel system pressurisation pump, Fuel gauge sender 2, Fuel pump control unit	911
099 - Tail light clusters , (L0L),(8SA),(8VA)	912-913
1. Tail light clusters , (L0L),(8SA),(8VA)	912
2. Interior mirror, Onboard supply control unit, Left tail light cluster, Right tail light cluster	913
100 - Fuel system , (0F1)	914-916
1. Fuel system , (0F1)	914
2. Battery, Main relay, Fuel pump control unit, Engine/motor control unit, Fuse holder B	915
3. Fuel gauge sender, Fuel delivery unit, Fuel gauge, Fuel system pressurisation pump, Fuel gauge sender 2, Fuel pump control unit	916
101 - 2.0l petrol engine , DNFC	917-937
1. 2.0l petrol engine , DNFC	917
2. Starter, Alternator with voltage regulator, Battery monitor control unit, Fuse holder A, Fuse holder B	918
3. Main relay, Fuse holder B	919
4. Starter relay 1, Starter relay 2, Fuse holder B	920
5. Engine/motor control unit, Engine component power supply relay, Fuse holder B, Fuse holder C	921
6. Accelerator pedal module, Engine/motor control unit	922
7. Knock sensor 1, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	923
8. Oil pressure switch, Oil pressure switch for reduced oil pressure, Stage 2 oil pressure switch, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	924
9. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	925
10. Cam adjustment actuator 1, Cam adjustment actuator 2, Cam adjustment actuator 3, Cam adjustment actuator 4, Engine/motor control unit, Coolant valve for gearbox, Coolant circulation pump	926
11. Cam adjustment actuator 5, Cam adjustment actuator 6, Cam adjustment actuator 7, Cam adjustment actuator 8, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Exhaust camshaft control valve 1	927
12. Intake manifold sender, Oil level and oil temperature sender, Engine/motor control unit, Turbocharger air recirculation valve. Intake manifold flap valve. Valve for oil pressure control	928

13. Throttle valve module, Engine speed sender, Engine temperature regulation module, Engine/motor control unit	929
14. Charge pressure sender, Dual exhaust gas temperature sensor 1, Radiator outlet coolant temperature sender, Engine/motor control unit	930
15. Hall sender, Fuel pressure sender, Intake manifold flap potentiometer, Engine/motor control unit, Piston cooling jet control valve	931
16. Coolant temperature sender, Sender 1 for turbocharger speed, Pressure differential sender for particulate filter, Engine/motor control unit, Fuel metering valve	932
17. Ignition/starter switch, Entry and start authorisation control unit, Steering column electronics control unit, Engine/motor control unit, Exhaust flap control unit, Exhaust flap control unit 2	933
18. Data bus diagnostic interface, Engine/motor control unit, Coupling point for fuel tank, Radiator fan	934
19. Brake light switch, Charge pressure control module, Hall sender 3, Engine/motor control unit	935
20. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Coolant shortage indicator sender, Onboard supply control unit, Engine/motor control unit	936
21. Control unit for structure-borne sound, Actuator for structure-borne sound	937
102 - 2.0l petrol engine , DNNA	938-956
1. 2.0l petrol engine , DNNA	938
2. Starter, Alternator with voltage regulator, Battery monitor control unit, Fuse holder A, Fuse holder B	939
3. Main relay, Fuse holder B	940
4. Starter relay 1, Starter relay 2, Fuse holder B	941
5. Engine/motor control unit, Engine component power supply relay, Fuse holder B, Fuse holder C	942
6. Accelerator pedal module, Engine/motor control unit	943
7. Radiator outlet coolant temperature sender, Oil level and oil temperature sender, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	944
8. Oil pressure switch, Stage 2 oil pressure switch, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	945
9. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	946
10. Cam adjustment actuator 1, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Turbocharger air recirculation valve, Exhaust camshaft control valve 1, Coolant valve for gearbox, Continued coolant circulation pump	947
11. Cam adjustment actuator 2, Cam adjustment actuator 3, Cam adjustment actuator 4, Cam adjustment actuator 5, Cam adjustment actuator 6, Cam adjustment actuator 7, Cam adjustment actuator 8, Engine/motor control unit	948
12. Intake manifold sender, Knock sensor 1, Coolant temperature sender, Engine/motor control unit, Intake manifold flap valve, Valve for oil pressure control	949
13. Throttle valve module, Engine speed sender, Pressure differential sender for particulate filter, Engine/motor control unit, Fuel metering valve	950
14. Engine temperature regulation module, Charge pressure control module, Hall sender 3, Engine/motor control unit	951
15. Hall sender, Fuel pressure sender, Intake manifold flap potentiometer, Engine/motor control unit, Piston cooling jet control valve	952
16. Charge pressure sender, Dual exhaust gas temperature sensor 1, Engine/motor control unit, Radiator fan	953
17. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Fuel pump control unit, Engine/motor control unit	954
18. Ignition/starter switch, Entry and start authorisation control unit, Steering column electronics control unit, Data bus diagnostic interface, Engine/motor control unit	955
19. Brake light switch, Coolant shortage indicator sender, Onboard supply control unit, Engine/motor control unit	956
103 - Multifunction steering wheel , (1XP)	957-962
1. Multifunction steering wheel , (1XP)	957
2. Turn signal switch, Cruise control system switch, Onboard supply control unit, Steering column electronics control unit, Ignition key withdrawal lock solenoid	958
3. Ignition/starter switch, Windscreen wiper switch, Intermittent wiper switch, Horn plate, Steering column electronics control unit, Data bus diagnostic interface, Airbag igniter on driver side	959
4. Multifunction steering wheel control unit, Steering column electronics control unit	960
5. Multifunction buttons on left in steering wheel, Multifunction buttons on right in steering wheel, Tiptronic switch (shift up), Tiptronic switch (shift down), Multifunction steering wheel control unit	961
6. Control unit for steering wheel contact detection	962
104 - Toll detection system , (9B1)	963-964
1. Toll detection system , (9B1)	963
2. Toll collection sender	964

105 - 1.5l petrol engine , DXDB	965-985
1. 1.5l petrol engine , DXDB	965
2. Starter, Alternator with voltage regulator, Battery monitor control unit, Fuse holder A, Fuse holder B	966
3. Main relay, Fuse holder B, Charge air cooling pump	967
4. Starter relay 1, Starter relay 2, Fuse holder B	968
5. Engine/motor control unit	969
6. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	970
7. Intake manifold sender, Function unit for active oil separation, Intake manifold pressure sender, Inlet camshaft position sender, Exhaust camshaft position sender, Engine/motor control unit	971
8. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Activated charcoal filter solenoid valve 1, Fuel metering valve	972
9. Engine/motor control unit, Exhaust camshaft control valve 1, Valve for oil pressure control, Inlet cam actuator for cylinder 2, Exhaust cam actuator for cylinder 2, Inlet camshaft control valve 1	973
10. Engine/motor control unit, Inlet cam actuator for cylinder 3, Exhaust cam actuator for cylinder 3	974
11. Engine speed sender, Knock sensor 1, Fuel pressure sender, Exhaust gas pressure sensor 1, Engine/motor control unit	975
12. Oil pressure sender, Charge pressure sender, Charge pressure control module, Engine/motor control unit	976
13. Pressure sensor for activated charcoal filter air flushing, Coolant temperature sender, Engine outlet coolant temperature sender, Radiator outlet coolant temperature sender, Engine/motor control unit	977
14. Dual exhaust gas temperature sensor 1, Pressure differential sender for particulate filter, Engine/motor control unit	978
15. Engine temperature regulation module, Oil level and oil temperature sender, Gearbox neutral position sender, Engine/motor control unit	979
16. Accelerator pedal module, Throttle valve module, Engine/motor control unit	980
17. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	981
18. Brake light switch, Clutch position sender, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	982
19. Entry and start authorisation control unit, Steering column electronics control unit, Fuel pump control unit, Engine/motor control unit	983
20. Data bus diagnostic interface, Engine/motor control unit, Radiator fan	984
21. Reversing light switch, Coolant shortage indicator sender, Onboard supply control unit, Fuse holder C	985
106 - 1.5l petrol engine , DSVA	986-1005
1. 1.5l petrol engine , DSVA	986
2. Starter, Alternator with voltage regulator, Battery monitor control unit, Fuse holder A, Fuse holder B	987
3. Main relay, Fuse holder B, Charge air cooling pump	988
4. Fuse holder B, Activated charcoal filter air flushing pump	989
5. Engine/motor control unit, Starter relay 1, Starter relay 2, Fuse holder B	990
6. Engine/motor control unit	991
7. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	992
8. Intake manifold sender, Function unit for active oil separation, Intake manifold pressure sender, Inlet camshaft position sender, Exhaust camshaft position sender, Engine/motor control unit	993
9. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Activated charcoal filter solenoid valve 1, Fuel metering valve	994
10. Coolant temperature sender, Engine outlet coolant temperature sender, Engine/motor control unit, Exhaust camshaft control valve 1, Valve for oil pressure control, Inlet camshaft control valve 1, Cut-off valve for activated charcoal filter air flushing	995
11. Engine speed sender, Knock sensor 1, Fuel pressure sender, Exhaust gas pressure sensor 1, Engine/motor control unit	996
12. Oil pressure sender, Charge pressure sender, Charge pressure control module, Radiator outlet coolant temperature sender, Engine/motor control unit	997
13. Dual exhaust gas temperature sensor 1, Pressure sensor for activated charcoal filter air flushing, Pressure differential sender for particulate filter, Engine/motor control unit	998
14. Engine temperature regulation module, Oil level and oil temperature sender, Engine/motor control unit	999
15. Accelerator pedal module, Throttle valve module, Engine/motor control unit	1000
16. Lambda probe 1 after catalytic converter. Lambda probe 1 before catalytic converter.	1001

Engine/motor control unit	
17. Brake light switch, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	1002
18. Fuel tank leak detection module, Entry and start authorisation control unit, Steering column electronics control unit, Fuel pump control unit, Engine/motor control unit	1003
19. Data bus diagnostic interface, Engine/motor control unit, Radiator fan	1004
20. Coolant shortage indicator sender, Onboard supply control unit, Fuse holder C	1005
107 - USB connections for data transfer , (ER1),(ER2),(ER3),(ER6),(ER7),(ER8),(ER9)	1006-1008
1. USB connections for data transfer , (ER1),(ER2),(ER3),(ER6),(ER7),(ER8),(ER9)	1006
2. Control unit 1 for information electronics, USB hub, USB connection 1	1007
3. Control unit 1 for information electronics, Connection for external audio sources, USB hub	1008
108 - USB connections for data transfer , (ER5)	1009-1011
1. USB connections for data transfer , (ER5)	1009
2. Chip card reader control unit, USB hub, USB connection 1	1010
3. Control unit 1 for information electronics, USB hub, USB connection 2	1011
109 - Communication, Japan , (ER5)	1012-1013
1. Communication, Japan , (ER5)	1012
2. Chip card reader control unit, Control unit 1 for information electronics, Traffic data aerial, Dedicated short-range communication aerial, USB hub	1013
110 - 1.0l petrol engine , DUSA	1014-1033
1. 1.0l petrol engine , DUSA	1014
2. Starter, Alternator with voltage regulator, Battery monitor control unit, Fuse holder A, Fuse holder B	1015
3. Main relay, Fuse holder B	1016
4. Engine/motor control unit, Starter relay 1, Starter relay 2, Fuse holder B	1017
5. Engine/motor control unit, Charge air cooling pump	1018
6. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Fuel metering valve, Ignition coil 3 with output stage, Spark plug 1, Spark plug 2	1019
7. Knock sensor 1, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3	1020
8. Accelerator pedal module, Throttle valve module, Engine/motor control unit	1021
9. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Exhaust camshaft control valve 1, Valve for oil pressure control, Piston cooling jet control valve, Inlet camshaft control valve 1	1022
10. Charge pressure control module, Coolant temperature sender, Engine outlet coolant temperature sender, Engine/motor control unit	1023
11. Oil pressure sender, Charge pressure sender, Engine speed sender, Engine/motor control unit	1024
12. Radiator outlet coolant temperature sender, Fuel pressure sender, Exhaust gas pressure sensor 1, Gearbox neutral position sender, Engine/motor control unit	1025
13. Pressure sensor for activated charcoal filter air flushing, Temperature sender before particulate filter, Engine/motor control unit	1026
14. Engine temperature regulation module, Engine/motor control unit	1027
15. Intake manifold sender, Inlet camshaft position sender, Exhaust camshaft position sender, Engine/motor control unit	1028
16. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	1029
17. Steering column electronics control unit, Data bus diagnostic interface, Fuel pump control unit, Engine/motor control unit	1030
18. Brake light switch, Clutch position sender, ABS control unit, Engine/motor control unit	1031
19. Oil level and oil temperature sender, Engine/motor control unit, Fuse holder C, Radiator fan	1032
20. Reversing light switch, Coolant shortage indicator sender, Onboard supply control unit	1033
111 - Airbag systems for RHD vehicles , (8T6),(8T7),(8T8),(L0R)	1034-1043
1. Airbag systems for RHD vehicles , (8T6),(8T7),(8T8),(L0R)	1034
2. Airbag control unit, Data bus diagnostic interface	1035
3. Key-operated switch to deactivate airbag on front passenger side, Rear belt switch, driver side, Rear belt switch, passenger side, Airbag control unit	1036
4. Driver side belt switch, Driver side seat position sensor, Airbag control unit, Side airbag igniter on driver side	1037
5. Front passenger side belt switch, Seat occupied sensor on front passenger side, Front passenger side seat position sensor, Airbag control unit, Airbag igniter 1 on front passenger side, Side airbag igniter on front passenger side	1038
6. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Front airbag crash sensor for driver side, Front airbag crash sensor for front passenger side, Airbag control unit, Steering column electronics control unit, Airbag igniter on driver side	1039
7. Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on passenger side, Airbag control unit, Rear belt tensioner igniter on driver side, Rear belt tensioner igniter on passenger side	1040

8. Front passenger side belt force limiter, Airbag control unit, Control unit for front left belt tensioner, Front left seat belt, Front passenger seat belt tensioner igniter 1	1041
9. Driver side belt force limiter, Airbag control unit, Control unit for front right belt tensioner, Front right seat belt, Driver seat belt tensioner igniter 1	1042
10. Airbag control unit, Warning lamp for airbag deactivated on front passenger side, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter	1043
112 - Airbag systems , (8T6),(8T7),(8T8),(L0L)	1044-1052
1. Airbag systems , (8T6),(8T7),(8T8),(L0L)	1044
2. Airbag control unit	1045
3. Key-operated switch to deactivate airbag on front passenger side, Rear belt switch, driver side, Rear belt switch, passenger side, Airbag control unit	1046
4. Driver side belt switch, Driver side seat position sensor, Airbag control unit, Side airbag igniter on driver side	1047
5. Front passenger side belt switch, Seat occupied sensor on front passenger side, Front passenger side seat position sensor, Airbag control unit, Airbag igniter 1 on front passenger side, Side airbag igniter on front passenger side	1048
6. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Front airbag crash sensor for driver side, Front airbag crash sensor for front passenger side, Airbag control unit, Steering column electronics control unit, Airbag igniter on driver side	1049
7. Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on passenger side, Airbag control unit, Rear belt tensioner igniter on driver side, Rear belt tensioner igniter on passenger side, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter	1050
8. Driver side belt force limiter, Airbag control unit, Control unit for front left belt tensioner, Front left seat belt, Driver seat belt tensioner igniter 1	1051
9. Front passenger side belt force limiter, Airbag control unit, Control unit for front right belt tensioner, Warning lamp for airbag deactivated on front passenger side, Front right seat belt, Front passenger seat belt tensioner igniter 1	1052
113 - Data bus network	1053-1069
1. Data bus network	1053
2. Data bus diagnostic interface	1054
3. Data bus diagnostic interface, Diagnostic connection	1055
4. Data bus diagnostic interface	1056
5. Data bus diagnostic interface	1057
6. Data bus diagnostic interface	1058
7. Data bus diagnostic interface	1059
8. Data bus diagnostic interface, Emergency call module control unit and communication unit	1060
9. Data bus diagnostic interface	1061
10. Data bus diagnostic interface	1062
11. Data bus diagnostic interface, Charging unit 1 for mobile devices	1063
12. Data bus diagnostic interface	1064
13. Coupling point on left A-pillar, bottom, Connection 1 (running gear CAN bus, high), in engine compartment wiring harness, Connection 1 (running gear CAN bus, low), in engine compartment wiring harness	1065
14. Connection 2 (CAN bus extended high), in engine compartment wiring harness, Connection 2 (CAN bus extended low), in engine compartment wiring harness	1066
15. Auxiliary hydraulic pump 1 for gearbox oil, Connection 1 (powertrain CAN bus, high), in engine compartment wiring harness, Connection 1 (powertrain CAN bus, low), in engine compartment wiring harness	1067
16. Automatic gearbox control unit, Connection 1 (powertrain CAN bus, high), in engine compartment wiring harness, Connection 1 (powertrain CAN bus, low), in engine compartment wiring harness, Connection 2 (LIN bus) in engine compartment wiring harness	1068
17. Connection 1 (LIN bus) in engine compartment wiring harness	1069
114 - MMI with radio , (I8Y)	1070-1075
1. MMI with radio , (I8Y)	1070
2. Driver side volume regulator, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Fuse holder C	1071
3. Data bus diagnostic interface, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics	1072
4. Control unit in dash panel insert, Control unit 1 for information electronics, Emergency call module control unit and communication unit	1073
5. Control unit in dash panel insert, Control unit 1 for information electronics, Internal vehicle communication aerial, Internal vehicle communication aerial 2	1074
6. Control unit 1 for information electronics, Aerial amplifier 2, Aerial amplifier 3	1075
115 - Mobile telephone systems , (9ZE),(9ZV),(I8Y)	1076-1078
1. Mobile telephone systems , (9ZE),(9ZV),(I8Y)	1076
2. Control unit 1 for information electronics. Charging unit 1 for mobile devices. Fuse holder C	1077

3. Control unit 1 for information electronics, Charging unit 1 for mobile devices, Aerial amplifier for mobile telephone, Right aerial module	1078
116 - Emergency call module , (I8Y)	1079-1083
1. Emergency call module , (I8Y)	1079
2. Airbag control unit, Emergency call module control unit and communication unit, Loudspeaker for emergency call module, Front roof module	1080
3. Emergency assistance call button, Control unit for cornering light and headlight range control, Emergency call module control unit and communication unit, Microphone unit in front roof module, Emergency call module aerial 2, Front roof module	1081
4. Control unit 1 for information electronics, Emergency call module control unit and communication unit	1082
5. Emergency call module control unit and communication unit, GPS aerial, Roof aerial, Emergency call module aerial	1083
117 - Dash panel insert , (9S8),(9S9)	1084-1088
1. Dash panel insert , (9S8),(9S9)	1084
2. Immobiliser reader coil, Fuel gauge, Control unit in dash panel insert, Data bus diagnostic interface	1085
3. Fuel gauge sender, Fuel delivery unit, Control unit in dash panel insert	1086
4. Fuel delivery unit, Fuel gauge sender 2, Control unit in dash panel insert	1087
5. Control unit in dash panel insert, Control unit 1 for information electronics	1088
118 - Sound system , (9VS),(I8Y)	1089-1094
1. Sound system , (9VS),(I8Y)	1089
2. Control unit 1 for information electronics, Front left treble loudspeaker, Front right treble loudspeaker, Fuse holder C	1090
3. Control unit 1 for information electronics, Microphone unit in front roof module, Centre loudspeaker	1091
4. Digital sound package control unit, Subwoofer	1092
5. Digital sound package control unit, Front left bass loudspeaker, Front right bass loudspeaker, Front left mid-range loudspeaker, Front right mid-range loudspeaker	1093
6. Digital sound package control unit, Rear left treble loudspeaker, Rear left bass loudspeaker, Rear right treble loudspeaker, Rear right bass loudspeaker	1094
119 - USB connections for data transfer , (I8Y)	1095-1096
1. USB connections for data transfer , (I8Y)	1095
2. Onboard supply control unit, Control unit 1 for information electronics, USB hub	1096
801 - - Fitting locations: Earth points - 3	1097-1117
1. Earth points	1097-1117
1.1 Earth points in front part of vehicle	1097-1107
1.1.1 Earth points in front part, view from left	1097
1.1.2 Earth points in front part, view from right	1098
1.1.3 Additional earth points in front part, models with electric drive (0K9)	1099
1.1.4 1.0l petrol engine	1100
1.1.5 1.4l petrol engine	1101
1.1.6 1.5l petrol engine	1102
1.1.7 2.0l petrol engine, CZPB, DKZA, DNFC, DNUE	1103
1.1.8 2.0l petrol engine, DNNA	1104
1.1.9 Manual gearbox	1105
1.1.10 Dual clutch gearbox, OEG	1106
1.1.11 Dual clutch gearbox, OES, 0IJ	1107
1.2 Earth points in middle part of vehicle	1108-1111
1.2.1 Earth points in middle part, view from left	1109
1.2.2 Earth points in middle part, view from right	1109
1.2.3 Earth point, on steering wheel	1110
1.2.4 Earth point on roof	1111
1.3 Earth points in rear part of vehicle	1112-1114
1.3.1 Earth points in rear part, view from left	1113
1.3.2 Earth points in rear part, view from right	1113
1.3.3 Additional earth points in rear part, models with electric drive (0K9)	1114
1.4 Earth points, underbody, for models with electric drive (0K9)	1115
1.5 Earth points in high-voltage battery 1 -AX2- for models with electric drive (0K9)	1116-1117
802 - -Fitting locations: Fuses - 3	1118-1182
1. Fuses	1118-1182
1.1 Overview of fuses	1118
1.2 Fitting location fuse holder A -SA-	1119
1.3 Fuse assignment on fuse holder A -SA-	1120
1.4 Fitting location of fuse holder B -SB-	1121
1.5 Fuse assignment for fuse holder B -SB-. from June 2016	1122-1124

1.6 Fuse assignment for fuse holder B -SB-, from June 2017	1125-1127
1.7 Fuse assignment of fuse holder B -SB-, from July 2018	1128-1132
1.8 Fuse assignment for fuse holder B -SB-, from June 2019	1133-1137
1.9 Fuse assignment of fuse holder B -SB-, from September 2020	1138-1142
1.10 Fuse assignment of fuse holder B -SB-, from July 2022	1143-1148
1.11 Fuse assignment of fuse holder B -SB-, from April 2023	1149-1153
1.12	1154
1.13 Fitting location of fuse holder C -SC-	1154-1155
1.13.1 Fitting location, fuse holder C -SC-, left-hand drive	1154
1.13.2 Fitting location, fuse holder C -SC-, right-hand drive	1155
1.14 Fuse assignment for fuse holder C -SC-, from June 2016	1156-1158
1.15 Fuse assignment for fuse holder C -SC-, from June 2017	1159-1160
1.16 Fuse assignment of fuse holder C -SC-, from July 2018	1161-1163
1.17 Fuse assignment for fuse holder C -SC-, from June 2019	1164-1166
1.18 Fuse assignment of fuse holder C -SC-, from September 2020	1167-1170
1.19 Fuse assignment of fuse holder C -SC-, from April 2023	1171-1173
1.20 Fitting location, fuse holder D -SD-	1174
1.21 Fuse assignment on fuse holder D -SD-	1175
1.22 Fuse holder F -SF-	1176-1177
1.22.1 Fitting location, fuse holder F -SF-, left-hand drive	1176
1.22.2 Fitting location, fuse holder F -SF-, right-hand drive	1177
1.23 Fuse assignment on fuse holder F -SF-	1178
1.24 Fitting location of high-voltage system fuse 1 -S350-	1179
1.25 Fuse assignment of high-voltage system fuse 1 -S350-	1180
1.26 Fitting location of high-voltage system fuse 3 -S353-	1180
1.27 Fuse assignment of high-voltage system fuse 3 -S353-	1181-1182
803 - -Fitting locations: Relays - 3	1183-1188
1. Relays	1183-1188
1.1 Overview of relay carriers	1183
1.2 Location and position of relays Relay and fuse carrier 1 -SR1-	1184
1.3 Relay and fuse carrier 2 -SR2-	1185-1186
1.3.1 Relay and fuse carrier 2 -SR2-, left-hand drive models	1185
1.3.2 Relay and fuse carrier 2 -SR2-, right-hand drive	1186
1.4 Fitting location, heated windscreen relay -J47-	1187
1.5 Fitting location and relay assignment in high-voltage battery junction box -SX6-	1188
804 - -Fitting locations: Control units in front part of vehicle - 3	1189-1241
1. Control units in front part of vehicle	1189-1241
1.1 Overview of control units in front part of vehicle	1189-1192
1.2 Fitting location, control unit for NOx sender -GX30-	1193-1194
1.3 Fitting location, control unit 2 for NOx sender -GX46-	1195
1.4 Fitting location, ABS control unit -J104-	1196-1197
1.5 Fitting location automatic gearbox control unit -J217-	1198-1200
1.6 Fitting location, auxiliary heater control unit -J364-	1201-1202
1.7 Fitting location, battery monitor control unit -J367-	1203-1204
1.8 Fitting location, control unit for wiper motor -J400-	1205
1.9 Fitting location, adaptive cruise control unit -J428-	1206-1207
1.10 Fitting location, power steering control unit -J500-	1208-1209
1.11 Fitting location, engine control unit -J623-	1210-1212
1.11.1 Fitting location, engine control unit -J623-, 154-pin	1210
1.11.2 Fitting location, engine control unit -J623-, 196-pin	1211-1212
1.12 Fitting location, mechatronic unit for dual clutch gearbox -J743-	1213-1216
1.12.1 Fitting location, mechatronic unit for dual clutch gearbox -J743-, dual clutch gearbox 0EG	1213
1.12.2 Fitting location, mechatronic unit for dual clutch gearbox -J743-, dual clutch gearbox 0ES	1214
1.12.3 Fitting location, mechatronic unit for dual clutch gearbox -J743-, dual clutch gearbox 0IJ	1215-1216
1.13 Fitting location, control unit for air conditioning compressor -J842-	1217-1218
1.14 Fitting location, high-voltage heater (PTC) control unit -J848-	1219-1220
1.15 Fitting location, control unit for structure-borne sound -J869-	1221-1222
1.16 Fitting location, high-voltage battery charger control unit -J1050-	1223-1225
1.17 Fitting location, power and control electronics for electric drive -JX1-	1226-1227
1.18 Fitting location, control units on front headlight -MX1/-MX2-	1228-1230
1.18.1 Fitting location, control units on front headlight -MX1/-MX2-, before product upgrade	1228-1229
1.18.2 Fitting location, control units on front headlight -MX1/-MX2-, from product upgrade	1230
1.19 Fitting location, brake servo -NX6-	1231-1233
1.20 Fitting location maintenance connector for high-voltage system -TW-	1234
1.21 Fitting location, radiator fan -VX57-	1235-1238
1.21.1 Fitting location, radiator fan -VX57-. single fan	1235-1236

1.21.2 Fitting location, radiator fan -VX57-, dual fan	1237-1238
1.22 Fitting location, brake system pressure accumulator -VX70-	1239-1241
805 - - Fitting locations: Control units in middle part of vehicle - 3	1242-1364
1. Control units in middle part of vehicle	1242-1364
1.1 Overview of control units in middle part of vehicle	1242-1247
1.2 Fitting location Heater and air conditioning controls -EX21-	1248-1251
1.3 Fitting location of particle sensor -G784-	1252-1253
1.4 Fitting location, control unit 2 for NOx sender -GX46-	1254-1255
1.5 Fitting location, control unit 3 for NOx sender -GX50-	1256-1257
1.6 Fitting location, fresh air blower control unit -J126-	1258-1259
1.7 Fitting location, airbag control unit -J234-	1260
1.8 Fitting location, sliding sunroof adjustment control unit -J245-	1261
1.9 Fitting location, electronically controlled damping control unit -J250-	1262-1263
1.10 Fitting location, control unit in dash panel insert -J285-	1264-1269
1.10.1 Fitting location, control unit in dash panel insert -J285-, except Audi virtual cockpit 9S4/9S5/9S6	1265
1.10.2 Fitting location, control unit in dash panel insert -J285-, Audi virtual cockpit 9S8 only, up to February 2024	1266-1267
1.10.3 Fitting location, control unit in dash panel insert -J285-, Audi virtual cockpit 9S8, 9S9 only, from March 2024	1268-1269
1.11 Fitting location, driver door control unit -J386-	1270-1272
1.12 Fitting location, front passenger door control unit -J387-	1273-1276
1.13 Fitting location Control unit for parking aid -J446-	1277-1281
1.13.1 Fitting location, Control unit for parking aid -J446-, left-hand drive models	1277-1279
1.13.2 Fitting location, Control unit for parking aid -J446-, right-hand drive models	1280-1281
1.14 Fitting location, multifunction steering wheel control unit -J453-	1282-1283
1.15 Fitting location, entry and start authorisation control unit -J518-	1284-1287
1.15.1 Fitting location, entry and start authorisation control unit -J518-, left-hand drive models	1284-1285
1.15.2 Fitting location, entry and start authorisation control unit -J518-, right-hand drive models	1286-1287
1.16 Fitting location, onboard supply control unit -J519-	1288-1293
1.17 Fitting location, digital sound package control unit -J525-	1294-1296
1.18 Fitting location, steering column electronics control unit -J527-	1297-1300
1.18.1 Fitting location, steering column electronics control unit -J527-, up to May 2021	1297-1298
1.18.2 Fitting location steering column electronics control unit -J527-, from May 2021	1299-1300
1.19 Fitting location, roof electronics control unit -J528-	1301-1304
1.19.1 Fitting location, roof electronics control unit -J528-, without additional lights	1301-1302
1.19.2 Fitting location, roof electronics control unit -J528-, with additional lights	1303-1304
1.20 Fitting location, data bus diagnostic interface -J533-	1305-1313
1.20.1 Fitting location, data bus diagnostic interface -J533- left-hand drive models, up to February 2024	1305-1306
1.20.2 Fitting location, data bus diagnostic interface -J533-, left-hand drive models, from March 2024	1307-1309
1.20.3 Fitting location, data bus diagnostic interface -J533- right-hand drive models, up to February 2024	1310
1.20.4 Fitting location, data bus diagnostic interface -J533-, right-hand drive models, from March 2024	1311-1313
1.21 Fitting location, fuel pump control unit -J538-	1314-1317
1.21.1 Fitting location, fuel pump control unit -J538-, except models with petrol engine, engine code DNFC	1314-1315
1.21.2 Fitting location, fuel pump control unit -J538-, models with petrol engine, engine code DNFC	1316-1317
1.22 Fitting location, selector lever sensors control unit -J587-	1318-1319
1.23 Fitting location, chip card reader control unit -J676-	1320-1321
1.24 Fitting location, control unit for cornering light and headlight range control -J745-	1322-1329
1.24.1 Fitting location, control unit for cornering light and headlight range control -J745-, left-hand drive models, up to October 2017	1322-1323
1.24.2 Fitting location, control unit for cornering light and headlight range control -J745-, left-hand drive models, from November 2017	1324-1325
1.24.3 Fitting location, control unit for cornering light and headlight range control -J745-, right-hand drive models, up to October 2017	1326-1327
1.24.4 Fitting location, control unit for cornering light and headlight range control -J745-, right-hand drive models, from November 2017	1328-1329
1.25 Fitting location, control unit for electronic steering column lock -J764-	1330-1331
1.26 Fitting location, control unit 1 for information electronics -J794-	1332-1338
1.26.1 Fitting location, control unit 1 for information electronics -J794-, up to February 2024	1332-1334
1.26.2 Fitting location, control unit 1 for information electronics -J794-, from March 2024	1335-1338
1.27 Fitting location. battery regulation control unit -J840-	1339-1340

1.28 Fitting location Main beam assist control unit -J844-	1341-1342
1.29 Fitting location, control units for front belt tensioners -J854-/-J855-	1343-1344
1.30 Fitting location, exhaust flap control unit -J883-	1345-1346
1.31 Fitting location, control unit for heads-up display -J898-	1347
1.32 Fitting location Rear driver side door control unit -J926-	1348-1350
1.33 Fitting location Rear passenger side door control unit -J927-	1351-1352
1.34 Fitting location, engine sound generator control unit -J943-	1353-1354
1.35 Fitting location emergency call module control unit and communication unit -J949-	1355-1357
1.36 Fitting location, control unit for steering wheel contact detection -J1158-	1358
1.37 Fitting location, battery module control unit -J1208-	1359-1360
1.38 Fitting location, battery module control unit 2 -J1209-	1361-1362
1.39 Fitting location, front camera for driver assist systems -R242-	1363-1364
806 - - Fitting locations: Control units in rear part of vehicle - 3	1365-1393
1. Control units in rear part of vehicle	1365-1393
1.1 Overview of control units in rear part of vehicle	1365-1366
1.2 Fitting location, trailer detector control unit -J345-	1367-1368
1.3 Fitting location, all-wheel drive control unit -J492-	1369-1372
1.3.1 Fitting location, all-wheel drive control unit -J492-, before product upgrade	1370
1.3.2 Fitting location, all-wheel drive control unit -J492-, from product upgrade	1371-1372
1.4 Fitting location, digital sound package control unit -J525-	1373-1374
1.5 Fitting location, rear lid control unit -J605-	1375-1377
1.6 Fitting location, lane change assist control unit -J769-/-J770-	1378
1.7 Fitting location Reversing camera system control unit -J772-	1379-1380
1.8 Fitting location, interface control unit for vehicle location system -J843-	1381-1382
1.9 Fitting location, control unit for reducing agent heater -J891-	1383-1384
1.10 Fitting location, charge voltage control unit for high-voltage battery -J966-	1385-1386
1.11 Fitting location TV tuner -R78-	1387-1388
1.12 Fitting location, remote control receiver for auxiliary heater -R64-	1389-1390
1.13 Fitting location, aerial amplifier for mobile telephone -R86-	1391-1393
807 - -Fitting locations: Coupling points - 3	1394-1423
1. Coupling points	1394-1423
1.1 Coupling point 1 for steering -TLENK1-	1394
1.2 Coupling point for gearbox oil cooling -TGOK-	1394
1.3 Coupling point on left in engine compartment -TML-	1395
1.4 Coupling point 1 for alternator -TGEN1-	1396
1.5 Coupling point on engine, top -TMO-	1397
1.6 Coupling point on front left door -TTVL-	1398
1.7 Coupling point on front right door -TTVR-	1399
1.8 Coupling point on rear left door -TTHL-	1400
1.9 Coupling point on rear right door -TTHR-	1401
1.10 Coupling point on left A-pillar, bottom -TALU-	1402
1.11 Coupling point right A-pillar, bottom -TARU-	1403
1.12 Coupling point in interior, left -TIL-	1404
1.13 4-pin connector -T4-	1405
1.14 Coupling point for front left seat -TSVL-	1406
1.15 Coupling point for front right seat -TSVR-	1407
1.16 Diagnostic connection -U31-	1408
1.17 Coupling point for sliding sunroof -TSD-	1409
1.18 Coupling point for roof -TH-	1410
1.19 Coupling point for all-wheel drive -TSAA-	1411
1.20 Coupling point for fuel tank -TAK-	1412-1413
1.20.1 Coupling point for fuel tank -TAK-, except models with petrol engine, engine code DNFC	1412
1.20.2 Coupling point for fuel tank -TAK-, models with petrol engine, engine code DNFC	1413
1.21 Coupling point for exhaust flap control unit -TAGK-	1414
1.22 Coupling point on right C-pillar -TCR-	1415
1.23 Coupling point on front left bumper -TSFVL-	1416
1.24 Coupling point on rear left bumper -TSFHL-	1417
1.25 Coupling point 1 for reducing agent metering system -TSCR1-	1418
1.26 Coupling point 2 for reducing agent metering system -TSCR2-	1419
1.27 Coupling point on high-voltage battery -TAHV-	1420-1421
1.28 Coupling point in high-voltage battery -TIHV-	1422-1423