

Contents

1	General information	1
1.1	--- Change history ---	1
1.2	General notes on Maintenance Manuals	1
1.3	Cleaning engine	2
1.4	Engine number	2
1.5	Vehicle identification number	3
1.6	Vehicle data sticker	4
2	Preparations	6
2.1	Vehicle: raising	6
2.2	Engine cover panel: removing and installing	7
2.3	Noise insulation: removing and installing	9
2.4	Window regulators: activating automatic open/close function	10
2.5	Vehicle diagnostic tester: connecting	10
3	Maintenance	13
3.1	Diesel particulate filter: reading out ash deposit volume	16
3.2	ERA-GLONASS: checking emergency call function	17
3.3	Event memory: reading out	18
3.4	Navigation system (MMI basic): releasing eject button and running CD for languages	18
3.5	MMI navigation system: unloading hard disk	18
3.6	MMI navigation system: checking correct position on navigation map and setting if necessary	19
3.7	Service interval display: resetting service event	19
3.8	Diagnostic work: performing	19
3.9	Transport mode: deactivating	20
3.10	Transport mode: checking activation and activating if necessary	20
3.11	Battery: reading out status	21
3.12	Connecting vehicle diagnostic tester and sending diagnostic log	21
3.13	Battery: checking electrolyte level	22
3.14	Battery: connecting stationary battery charger (min. 30A, charging voltage max. 14.8 V on IV characteristic curve)	27
3.15	Battery: determining and recording state of charge (SOC)	30
3.16	Mirror hanger indicating defective battery: renewing battery on affected vehicles	34
3.17	Data sheet for Radio Equipment Directive: printing and placing in glove compartment	34
3.18	Brake fluid: changing	35
3.19	Brake fluid (vehicles older than 12 months): changing	40
3.20	Brake fluid: checking fluid level	40
3.21	Brake system: checking condition of brake hoses, and checking that caps are fitted on bleeder screws	40
3.22	Brake pads: checking thickness	41
3.23	Brake discs: checking for surface rust and operating brakes to clean if necessary	42
3.24	Parking brake: releasing	43
3.25	Tyres: checking condition, age and wear pattern, and checking and recording tread depth	43
3.26	Tyres: checking tyre pressures and adjusting if necessary	44
3.27	Tyres (except spare wheel): checking tyre pressures and adjusting to 3.5 bar if necessary	45
3.28	Tyre Pressure Loss Indicator: storing changed tyre pressures	46
3.29	Tyre repair kit: checking that set is complete, and checking and recording expiry date	46
3.30	Wheel bolts: tightening to specified torque	46
3.31	Suspension struts on front and rear axle: removing locking elements and correctly fitting bump stops	47
3.32	Axles (front and rear): checking components for play, secure attachment and damage, and checking protective boots	49
3.33	Engine, gearbox, final drive and steering: checking for leaks and damage	52
3.34	Vehicle (from below): checking for damage	53
3.35	Underbody: checking trim, wheel housing liners, side members and pipes/wiring for damage, and checking that they are properly secured	53



3.36	Roof insert - panoramic sliding sunroof: checking, cleaning and lubricating	53
3.37	Water drains - panoramic sliding sunroof: checking	57
3.38	Door hinges with separate door arrester: cleaning and lubricating	58
3.39	Bonnet arrester hook: lubricating	59
3.40	Windscreen/rear window washer system: checking spray pattern and adjusting if necessary	60
3.41	Wiper blades: checking for damage	61
3.42	Headlight washer system: checking operation	61
3.43	Headlights: checking for correct adjustment	61
3.44	Headlights and reversing lights, brake lights, side lights, number plate lights, turn signals, hazard warning lights: checking operation	63
3.45	Luggage compartment lighting: checking operation	64
3.46	Luggage compartment: removing protective film and felt pieces	64
3.47	Glove compartment light, interior lighting and reading light: checking operation	64
3.48	Horn: checking operation	64
3.49	Passenger airbag: checking key switch on/off and setting to "on"	65
3.50	Owner's literature: checking that all documents are present	65
3.51	Service wallet: affixing vehicle data sticker	65
3.52	Service Schedule: entering Delivery Inspection	66
3.53	Seat belts: checking that retaining rivets are fitted, and checking locking action of automatic belt retractor	66
3.54	Vehicle interior: removing protective covers for seats and carpet	66
3.55	Vehicle interior: checking that it is clean and cleaning if necessary	66
3.56	Vehicle interior: removing any objects other than those protecting interior surfaces	67
3.57	Vehicle interior and exterior: checking for and documenting any damage	67
3.58	Instrument cluster: checking warning lamps	67
3.59	Warning triangle: checking availability	67
3.60	First-aid kit: checking and recording expiry date	67
3.61	Vehicle keys: checking operation and recording number of keys given to customer	68
3.62	Vehicle key: removing from ignition lock	68
3.63	Vehicle key(s), wheel covers and owner's literature: checking availability and recording number present	68
3.64	Sun visors: checking that they are folded up and folding up if necessary	68
3.65	Luggage compartment cover and sun blind: checking that they are rolled up and rolling up if necessary	69
3.66	Engine oil: draining	69
3.67	Engine oil: extracting	73
3.68	Engine oil: renewing oil filter	74
3.69	Engine oil: filling up	80
3.70	Engine oil: checking oil level and correcting if necessary	80
3.71	Spark plugs: renewing	81
3.72	Coolant level: checking (coolant level must reach at least top marking on coolant expansion tank)	90
3.73	Air filter: renewing filter element and cleaning housing	93
3.74	Dust and pollen filter: renewing	99
3.75	Fuel filter: renewing	100
3.76	Fuel filter: draining	102
3.77	Fuel tank: adding fuel additive	103
3.78	Reducing agent (AdBlue®): filling up tank completely	104
3.79	Vehicle doors: removing edge protection	108
3.80	Vehicle exterior: checking unprotected areas for dirt, and cleaning if necessary	108
3.81	Vehicle exterior: removing protective film	108
3.82	Vehicle cover: checking position and correcting if necessary	109
3.83	Vehicle cover: removing according to manufacturer's instructions	109
3.84	Paintwork, trims, side windows and wiper blades: checking cleanliness	109
3.85	Body: checking vehicle paintwork for damage and corrosion from below and with bonnet, rear lid and doors open	109

3.86	Vehicles parked outdoors: locking	109
3.87	Road test	109
3.88	Stock vehicles: observing measures specified in maintenance table for stock vehicles (see "Before handing vehicle over to customer")	110
3.89	Accessories: installing	110
3.90	Checklist "Documentation of cleaning and care routine": checking that list is present	111
3.91	"Stock vehicle maintenance" checklist: signing and placing in vehicle wallet	111
3.92	Cleaning and care: checking that required measures have been carried out on time	111
3.93	Stock vehicle care management: deciding and recording date of next check	111
3.94	Display instruments: setting time and date	111
3.95	Manual gearbox/automatic gearbox: selecting 1st gear/park	111
3.96	Dual clutch gearbox (S tronic): changing ATF	111
3.97	Dual clutch gearbox (S tronic): changing gear oil and renewing oil filter	112
3.98	All-wheel drive coupling: changing oil	112
3.99	Instrument cluster: resetting driver information system	112
3.100	Poly V-belt for ancillaries: renewing	112
3.101	Toothed belt for coolant pump drive: checking	112
3.102	Toothed belt for camshaft drive: renewing	113
3.103	Toothed belt for camshaft drive and tensioning roller: renewing	113
4	Exhaust emissions test	114
4.1	Petrol engines: performing exhaust emissions test	114
4.2	Diesel engines: performing exhaust emissions test - up to EU5	122
4.3	Diesel engines: performing exhaust emissions test - from EU6 onwards	131
5	Periodic technical inspection (PTI)	133