

Contents

00 - Technical data	1
1 Identification	1
1.1 PR number and type of brake system	1
2 Safety precautions	2
2.1 Safety precautions when working on vehicles with start/stop system	2
2.2 Safety precautions when using testers and measuring instruments during a road test	2
3 Repair notes	3
3.1 Rules for cleanliness	3
3.2 General repair instructions	3
3.3 Contact corrosion	3
4 Technical data	4
4.1 Technical data for brakes	4
5 Brake test	6
5.1 General notes	6
5.2 Testing vehicles with front-wheel drive	6
5.3 Testing vehicles with four-wheel drive	6
5.4 Testing parking brake	7
45 - Anti-lock brake system	9
1 General notes	9
1.1 Notes for repair work on the ABS	9
2 Overview of fitting locations	10
2.1 Overview of fitting locations - ABS/ESP	10
2.2 Fitting location of diagnostic connection	12
3 Control unit and hydraulic unit	13
3.1 Note for ABS control unit J104	13
3.2 Exploded view - control unit and hydraulic unit	13
3.3 Removing and installing ABS control unit J104 with ABS hydraulic unit N55	16
3.4 Separating control unit from hydraulic unit	22
3.5 Attaching control unit to hydraulic unit	25
4 Sensors	28
4.1 Exploded view - front wheel speed sensor	28
4.2 Exploded view - rear wheel speed sensor	29
4.3 Removing and installing front wheel speed sensor G45 / G47	30
4.4 Removing and installing rear wheel speed sensor G44 / G46	31
46 - Brakes - mechanism	32
1 Front brakes	32
1.1 Exploded view - front brakes	32
1.2 Vibration dampers on brake caliper	36
1.3 Removing and installing brake pads	38
1.4 Removing and installing brake caliper	46
1.5 Renewing brake caliper	51
1.6 Removing and installing brake disc	58
1.7 Removing and installing splash plate	60
2 Rear brakes	62
2.1 Exploded view - rear brakes	62
2.2 Removing and installing brake pads	66
2.3 Removing and installing brake caliper	74
2.4 Renewing brake caliper	79
2.5 Removing and installing brake disc	86
2.6 Removing and installing splash plate	89



2.7	Renewing protective caps and guide pins	90
3	Parking brake	91
3.1	Exploded view - parking brake	91
3.2	Removing and installing parking brake motor V282 / V283	92
3.3	Releasing parking brake manually	94
4	Brake pedal	96
4.1	Exploded view - brake pedal	96
4.2	Removing and installing mounting bracket	97
4.3	Separating brake pedal from brake servo	97
4.4	Connecting brake pedal to brake servo	98
4.5	Removing and installing brake pedal	99
47 - Brakes - hydraulics		100
1	Front brake caliper	100
1.1	Exploded view - front brake caliper	100
1.2	Removing and installing brake caliper piston	101
2	Rear brake caliper	107
2.1	Exploded view - rear brake caliper	107
2.2	Removing and installing brake caliper piston	108
3	Brake servo / brake master cylinder	111
3.1	Exploded view - brake servo / brake master cylinder	111
3.2	Removing and installing brake light switch	112
3.3	Removing and installing brake servo	113
3.4	Removing and installing brake master cylinder	115
3.5	Removing and installing brake fluid reservoir	118
4	Vacuum system	121
4.1	Exploded view - electric vacuum pump	121
4.2	Exploded view - vacuum pump	122
4.3	Checking non-return valve	124
4.4	Removing and installing non-return valve	125
4.5	Removing and installing vacuum sender G608	126
4.6	Checking vacuum system	127
4.7	Removing and installing electric vacuum pump	131
4.8	Removing and installing vacuum pump	132
5	Brake lines	137
5.1	Connection points	137
5.2	Routing of brake lines	137
5.3	Repairing brake lines	138
6	Hydraulic system	143
6.1	General notes on brake fluid	143
6.2	Pre-bleeding hydraulic system	144
6.3	Bleeding hydraulic system	144
6.4	Leak test	150