

Contents

00 - Technical data	1
1 Safety precautions	1
1.1 Safety precautions when working on vehicles with start/stop system	1
1.2 Safety precautions when using testers and measuring instruments during a road test	1
1.3 Safety precautions when handling gas discharge bulbs	2
2 Repair instructions	4
2.1 Contact corrosion	4
2.2 Routing and attachment of lines and wiring	4
2.3 General notes	4
3 Battery	5
3.1 Battery - general notes	5
3.2 Battery types	5
27 - Starter, current supply, CCS	6
1 Battery	6
1.1 Exploded view - battery	6
1.2 Disconnecting and connecting battery	10
1.3 Removing and installing earth cable with battery monitor control unit J367	14
1.4 Removing and installing battery	17
1.5 Removing and installing battery tray	30
1.6 Checking battery	31
1.7 Charging battery	32
2 Jump-start terminal	35
2.1 Exploded view - jump-start terminal	35
2.2 Removing and installing jump-start terminal	36
3 Alternator	37
3.1 Exploded view - alternator	37
3.2 Removing and installing alternator	38
3.3 Checking alternator	49
4 Starter	51
4.1 Exploded view - starter	51
4.2 Removing and installing starter	53
5 Start/stop system	59
5.1 Overview of fitting locations - start/stop system	59
5.2 Removing and installing voltage stabiliser	60
90 - Gauges, instruments	61
1 Dash panel insert	61
1.1 Exploded view - dash panel insert	61
1.2 Removing and installing dash panel insert with control unit in dash panel insert J285	62
1.3 Pin assignment on multi-pin connectors in dash panel insert	64
1.4 Pin assignment on fuel gauge senders	65
1.5 Pin assignment on coolant temperature sender	65
1.6 Removing and installing ambient temperature sensor	66
2 Clock	67
2.1 Removing and installing radio-controlled clock receiver	67
3 Horn	68
3.1 Exploded view - horn	68
3.2 Removing and installing treble horn H2 / bass horn H7	69
92 - Windscreen wash/wipe system	71
1 Windscreen wiper system	71



1.1	Exploded view - windscreen wiper system	71
1.2	Moving windscreen wipers to service position	74
1.3	Removing and installing wiper blade	74
1.4	Removing and installing wiper arms	75
1.5	Adjusting wiper arms	76
1.6	Removing and installing wiper motor V	77
1.7	Renewing windscreen wiper motor	78
1.8	Removing and installing rain and light sensor	78
2	Windscreen washer system	82
2.1	Exploded view - windscreen washer system	82
2.2	Removing and installing washer fluid reservoir	84
2.3	Removing and installing windscreen washer fluid level sender	86
2.4	Removing and installing washer pump	87
2.5	Removing and installing washer jets	88
2.6	Adjusting washer jets	88
3	Rear window wiper system	89
3.1	Exploded view - rear window wiper system	89
3.2	Removing and installing wiper blade	90
3.3	Removing and installing wiper arm	90
3.4	Adjusting wiper arm	91
3.5	Removing and installing rear window wiper motor V12	92
4	Rear window washer system	93
4.1	Exploded view - rear window washer system	93
4.2	Removing and installing washer jet	94
4.3	Adjusting washer jet	94
5	Headlight washer system	95
5.1	Exploded view - headlight washer system	95
5.2	Removing and installing headlight washer system pump V11	95
5.3	Removing and installing washer jets	96
6	Washer fluid hoses	101
6.1	Repairing washer fluid hoses	101
94	Lights, bulbs, switches - exterior	102
1	Headlights	102
1.1	Exploded view - headlights	102
1.2	Removing and installing headlights	112
1.3	Adjusting headlights	115
1.4	Removing and installing front turn signal bulb M5 / M7	124
1.5	Removing and installing side light bulb M1 / M3	126
1.6	Removing and installing headlight dipped beam bulb	127
1.7	Removing and installing headlight main beam bulb M30 / M32	128
1.8	Removing and installing gas discharge bulb L13 / L14	128
1.9	Removing and installing LED module for daytime running light and side light L176 / L177	131
1.10	Removing and installing all-weather light bulb M109 / M110	134
1.11	Removing and installing gas discharge bulb control unit J343 / J344	135
1.12	Removing and installing output module for headlight J667 / J668	136
1.13	Removing and installing control unit for daytime running light and side light J860 / J861	137
1.14	Removing and installing output module for headlight	139
1.15	Removing and installing headlight range control motor V48 / V49	140
1.16	Removing and installing headlight fan	144
1.17	Installing repair kit for headlight housing	144
1.18	Adapting headlights for driving on the left side of the road	145
1.19	Adapting headlights for driving on the right side of the road	147

2	Fog lights	150
2.1	Exploded view - fog light	150
2.2	Removing and installing fog lights	150
2.3	Removing and installing fog light bulb L22 / L23	152
2.4	Adjusting fog lights	152
3	Side marker lights	154
3.1	Overview - side marker lights	154
3.2	Removing and installing front side marker light	155
4	Lights in exterior mirror	156
4.1	Exploded view - lights in exterior mirror	156
4.2	Removing and installing exterior mirror turn signal bulb L131 / L132	157
5	Tail light cluster	158
5.1	Exploded view - tail light cluster on rear lid	158
5.2	Exploded view - tail light cluster on body	160
5.3	Removing and installing tail light cluster on rear lid	161
5.4	Removing and installing bulb carrier	162
5.5	Removing and installing tail light cluster	163
5.6	Removing and installing rear lid closed sender G525 / G526	164
6	High-level brake light	165
6.1	Exploded view - high-level brake light	165
6.2	Removing and installing high-level brake light bulb	166
7	Number plate light	167
7.1	Removing and installing number plate light X4 / X5	167
8	Entry and start authorisation	168
8.1	Overview of fitting locations - entry and start authorisation system	168
8.2	Overview of fitting locations - keyless entry system	170
8.3	Exploded view - exterior door handle for keyless entry system	172
8.4	Removing and installing front exterior door handle switches	173
8.5	Removing and installing entry and start authorisation control unit J518	173
8.6	Removing and installing interior aerial 1 for entry and start system R138	175
8.7	Removing and installing driver side aerial for entry and start system R134	176
8.8	Removing and installing passenger side aerial for entry and start system R135	176
8.9	Removing and installing interior aerial 2 for entry and start system R139	176
8.10	Removing and installing rear bumper aerial for entry and start system R136	177
9	Steering column switch module	178
9.1	Exploded view - steering column switch module	178
9.2	Removing and installing lock cylinder	181
9.3	Removing and installing ignition key withdrawal lock solenoid N376	182
9.4	Removing and installing ignition/starter switch	182
9.5	Removing and installing steering column switch module	183
9.6	Removing and installing steering column electronics control unit J527	186
9.7	Removing and installing steering column combination switch	189
9.8	Pin assignment on steering column electronics control unit	190
9.9	Removing and installing steering lock housing	193
10	Parking aid	195
10.1	Overview - parking aid	195
10.2	Removing and installing parking aid control unit J446	197
10.3	Removing and installing front parking aid warning buzzer H22	198
10.4	Removing and installing rear parking aid warning buzzer H15	198
10.5	Removing and installing front parking aid senders	199
10.6	Removing and installing rear parking aid senders	202
11	Park assist steering	204
11.1	Overview - park assist steering	204
11.2	Removing and installing front sender	205



11.3	Removing and installing rear sender	205
12	Automatic headlight range control	206
12.1	Overview - automatic headlight range control	206
12.2	Removing and installing headlight range control unit	207
96	Lights, bulbs, switches - interior	208
1	Lights	209
1.1	Overview of fitting locations - lights in dash panel	210
1.2	Overview of fitting locations - lights in front doors	211
1.3	Overview of fitting locations - lights in rear doors	212
1.4	Overview of fitting locations - background lighting in doors	213
1.5	Overview of fitting locations - lights in centre console	215
1.6	Overview of fitting locations - lights in roof trim	216
1.7	Overview of fitting locations - lights in luggage compartment	217
1.8	Removing and installing glove compartment light W6	217
1.9	Renewing bulb for glove compartment light W6	218
1.10	Removing and installing footwell light W9 / W10	218
1.11	Removing and installing central locking SAFELOCK function warning lamp K133	219
1.12	Removing and installing door opener illumination bulb L108 / L109	219
1.13	Removing and installing front entry light W31 / W32	220
1.14	Removing and installing door warning lamp W30 / W36	220
1.15	Removing and installing door opener illumination bulb L110 / L111	221
1.16	Removing and installing rear entry light W33 / W34	221
1.17	Removing and installing rear door warning lamp W37 / W38	221
1.18	Removing and installing storage compartment illumination bulb L120	222
1.19	Removing and installing cup holder illumination bulb L121 / L215	223
1.20	Removing and installing front door ambient lighting bulb L164 / L165	223
1.21	Removing and installing door storage compartment illumination bulb L160 / L161	224
1.22	Removing and installing loudspeaker background lighting bulb L211 / L212	225
1.23	Removing and installing rear door ambient lighting bulb L166 / L167	227
1.24	Removing and installing rear door storage compartment illumination bulb L170 / L171	227
1.25	Removing and installing selector lever position display Y26	228
1.26	Removing and installing rear footwell light W45 / W46	228
1.27	Removing and installing luggage compartment light W18 / W35	228
1.28	Removing and installing illuminated vanity mirror W20 / W14	229
1.29	Renewing bulb for front interior light W1 / W13 / W19	230
1.30	Renewing bulb for rear reading light W11 / W12	230
1.31	Removing and installing LED for background lighting	230
2	Controls	232
2.1	Overview of fitting locations - controls in dash panel	233
2.2	Overview of fitting locations - controls in front doors	234
2.3	Overview of fitting locations - controls in rear doors	235
2.4	Overview of fitting locations - controls in centre console	236
2.5	Overview of fitting locations - controls in roof trim	237
2.6	Overview of fitting locations - controls in luggage compartment	238
2.7	Removing and installing light switch E1	239
2.8	Removing and installing switch and instrument illumination regulator E20	239
2.9	Removing and installing TCS and ESP button E256	240
2.10	Removing and installing switches in dash panel	240
2.11	Removing and installing hazard warning lights button E229	241
2.12	Removing and installing glove compartment light switch E26	242
2.13	Removing and installing mirror adjustment switch E43 / E168	242
2.14	Removing and installing operating unit for window regulator in driver door E512	243
2.15	Removing and installing window regulator switch in front passenger door E107	243
2.16	Removing and installing driver side interior locking button for central locking system E308	243

2.17	Removing and installing rear lid release switch E165	244
2.18	Removing and installing interior monitoring deactivation switch E183	244
2.19	Removing and installing window regulator switches E52 / E54	245
2.20	Removing and installing central locking button E600	245
2.21	Removing and installing entry and start authorisation button E408	245
2.22	Removing and installing electromechanical parking brake button E538 / auto-hold button E540	246
2.23	Removing and installing release button for rear lid lock cylinder F248	246
2.24	Removing and installing button to close rear lid in luggage compartment E406	247
2.25	Removing and installing rear lid warning buzzer H32	248
2.26	Removing and installing rear lid contact switch	248
2.27	Removing and installing contact switch for vanity mirror F147 / F148	248
2.28	Removing and installing sunroof button E325	248
2.29	Removing and installing interior light/reading light (front)	249
2.30	Removing and installing interior light/reading light (rear)	249
3	Anti-theft alarm system	250
3.1	Overview - interior monitoring	250
3.2	Removing and installing alarm horn H12	251
3.3	Removing and installing anti-theft alarm sensor G578	251
4	Immobiliser	252
4.1	Removing and installing immobiliser reader coil	252
5	Lane change assist	253
5.1	Overview - lane change assist	253
5.2	Removing and installing button for lane change assist E530	254
5.3	Removing and installing lane change assist warning lamp in exterior mirror K233 / K234	254
5.4	Removing and installing lane change assist control unit J769 / J770	255
5.5	Calibrating lane change assist	255
6	Front camera for driver assist systems	262
6.1	Overview of fitting locations - front camera for driver assist systems	262
6.2	Removing and installing front camera for driver assist systems R242	263
7	Towing bracket	267
7.1	Overview - trailer socket, trailer detector control unit	267
7.2	Removing and installing LED warning lamp	268
8	Cigarette lighter, socket	269
8.1	Exploded view - cigarette lighter, 12 V socket	269
8.2	Removing and installing cigarette lighter U1	270
8.3	Removing and installing cigarette lighter illumination bulb L28	272
8.4	Removing and installing socket illumination bulb L42	272
8.5	Removing and installing 12 V socket U5	273
8.6	Removing and installing 12 V socket 2 U18	274
8.7	Removing and installing electric socket U	276
8.8	Renewing electric socket U	276
97 - Wiring		278
1	Relay carriers, fuse carriers, electronics boxes	278
1.1	Overview of fitting locations - relay carriers, fuse carriers, electronics boxes	278
1.2	Removing and installing electronics box	282
1.3	Removing and installing coupling station for electronics box	283
1.4	Removing and installing suppression filter C24	284
1.5	Removing and installing fuse holder C SC	285
1.6	Removing and installing relay and fuse carrier behind dash panel (driver side)	286
2	Control units	289
2.1	Overview of fitting locations - control units	289
2.2	Removing and installing onboard supply control unit J519	290



2.3	Removing and installing data bus diagnostic interface J533	291
3	Connectors	293
3.1	Overview of fitting locations - connectors	293
3.2	Unplugging door disconnecter (left-side)	294
3.3	Repairing electrical wiring harnesses and electrical connectors	294
4	Releasing and dismantling connector housings	295
5	Cleaning contact surfaces	296
6	Repairing aerial wires	297
7	Fibre optic cables	298
8	Vehicle diagnostic, testing and information systems	299