

Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when working on the high-voltage system	1
1.2 Safety precautions when working in the vicinity of high-voltage components	2
1.3 Safety precautions when working on vehicles with start/stop system	2
1.4 Safety precautions when using testers and measuring instruments during a road test	3
2 Repair instructions	4
2.1 Identification plates	4
2.2 Use of impact wrenches	4
2.3 Rules for cleanliness	5
2.4 General notes	5
2.5 Contact corrosion	5
2.6 Routing and attachment of lines and wiring	5
91 - Radio, telephone, navigation	7
1 Infotainment system	7
1.1 Layout - infotainment system	7
1.2 Overview of fitting locations - infotainment system	9
1.3 Removing and installing infotainment system display	12
1.4 Removing and installing control unit 1 for information electronics J794	18
1.5 Pin assignment	19
2 Sound system	27
2.1 Layout - sound system	27
2.2 Overview of fitting locations - sound system	32
2.3 Removing and installing digital sound package control unit/amplifier	34
2.4 Removing and installing rear treble loudspeakers R14/R16	35
2.5 Removing and installing front treble loudspeakers R20/R22	36
2.6 Removing and installing front mid-range loudspeakers	37
2.7 Removing and installing rear mid-range and bass loudspeakers	39
2.8 Removing and installing subwoofer R211	40
2.9 Removing and installing effect loudspeakers	41
2.10 Removing and installing centre loudspeaker	42
2.11 Pin assignment	42
3 Aerial systems	45
3.1 Layout - aerial systems	45
3.2 Overview of fitting locations - aerial systems	46
3.3 Removing and installing aerial amplifier	49
3.4 Removing and installing roof aerial	51
3.5 Removing and installing window aerial suppression filter C18	52
3.6 Removing and installing traffic data aerial	53
3.7 Removing and installing internet access aerial R266	54
3.8 Removing and installing emergency call module aerial R263	55
3.9 Removing and installing GPS aerial 2 R268	55
3.10 Pin assignment	57
4 Radio	61
4.1 Layout - radio	61
4.2 Assembly overview - radio	63
4.3 Removing and installing radio	68
4.4 Pin assignment	71
5 DVD/CD changer	82
5.1 Removing and installing CD changer	82
5.2 Pin assignment	83

6	Telephone system	85
6.1	Layout - telephone	85
6.2	Overview of fitting locations - telephone system	88
6.3	Assembly overview - microphone unit	89
6.4	Removing and installing microphone unit in front roof module R164	90
6.5	Removing and installing aerial amplifier for mobile telephone R86	91
6.6	Removing and installing telephone bracket R126	92
6.7	Pin assignment	94
7	Navigation system	115
7.1	Layout - navigation system	115
7.2	Overview of fitting locations - navigation system	118
7.3	Removing and installing chip card reader control unit	120
7.4	Pin assignment	122
8	TV system	133
8.1	Layout - TV system	133
8.2	Overview of fitting locations - TV system	136
8.3	Removing and installing TV tuner	139
8.4	Removing and installing TV card reader	141
8.5	Pin assignment	142
9	Reversing camera system	148
9.1	Layout - reversing camera system	148
9.2	Assembly overview - reversing camera system	149
9.3	Removing and installing reversing camera R189	150
9.4	Removing and installing reversing camera system control unit J772	151
9.5	Calibrating reversing camera system	152
9.6	Pin assignment	159
10	Multifunction steering wheel	160
10.1	Layout - multifunction steering wheel	160
10.2	Assembly overview - multi-function steering wheel	160
10.3	Removing and installing multifunction buttons in steering wheel E441/E440	161
10.4	Removing and installing tiptronic switches in steering wheel E439/E438	165
11	Connection for external multimedia devices	166
11.1	Layout - external multimedia devices	166
11.2	Removing and installing connection for external audio sources R199	167
11.3	Connectors on connection for external multimedia devices	170
12	Mobile online services	173
12.1	Layout - mobile online services	173
12.2	Overview of fitting locations - mobile online services	175
12.3	Removing and installing internet access control unit J666	177
12.4	Removing and installing emergency call module control unit and communication unit J949	179
12.5	Emergency assistance call button E276	180
12.6	Loudspeaker for emergency call module R335	181
12.7	Pin assignment	182