

Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when working on vehicles with start/stop system	2
1.2 Safety precautions when working on pyrotechnic components	3
1.3 Storing, transporting and disposing of airbag units, belt tensioner units and battery isolators (pyrotechnic components)	5
1.4 Additional safety regulations for side airbags	5
1.5 Additional safety regulations for curtain airbags	6
1.6 Safety regulations for crash sensors (pressure sensors) for front side airbag	6
1.7 Additional safety regulations for working on seat occupied sensor controlling deactivation of front passenger airbag - country-specific version	7
1.8 Procedure for dealing with seat occupied sensor controlling deactivation of front passenger airbag following an accident - country-specific version	7
1.9 Renewing pyrotechnic, electrical and mechanical components of the restraint system following an accident	8
1.10 Checking airbag mounting components following an accident	9
1.11 Accident in which no airbag was triggered	10
1.12 Checking seat belts	10
1.13 Checking belt webbing	10
1.14 Checking automatic belt retractor (locking action)	11
1.15 Visual inspection of belt buckle	12
1.16 Functional check of belt buckle	12
1.17 Checking guide fittings and latch plate	12
1.18 Checking securing components and anchorage points following an accident	13
1.19 Checking child seat restraint function of seat belt for additional child seats (not for driver seat belt; country-specific version)	13
1.20 Checking child seat anchors following an accident	13
1.21 Safety regulations for automatic anti-dazzle interior mirror	14
2 Repair instructions	15
2.1 Contact corrosion	15
2.2 Routing and attachment of pipes, hoses and wiring	15
68 - Interior equipment	16
1 Storage compartments/covers/trim panels	16
1.1 Overview of fitting locations - storage compartments/covers/trim panels	16
1.2 Assembly overview - dash panel cover (driver side)	17
1.3 Assembly overview - steering column trim	18
1.4 Assembly overview - glove compartment	19
1.5 Removing and installing dash panel cover (driver side)	21
1.6 Removing and installing gap cover for dash panel insert	22
1.7 Removing and installing upper steering column trim	24
1.8 Removing and installing lower steering column trim	25
1.9 Removing and installing glove compartment opening mechanism	26
1.10 Removing and installing glove compartment	27
1.11 Removing and installing glove compartment cover	30
1.12 Removing and installing restrictor for glove compartment cover	31
2 Equipment	32
2.1 Assembly overview - sun visors	32
2.2 Assembly overview - luggage compartment cover	32
2.3 Removing and installing sun visor	34
2.4 Removing and installing sun visor centre mount	34
2.5 Removing and installing grab handle	35
2.6 Removing and installing handle for luggage compartment cover	36
3 Centre console	38



3.1	Assembly overview - centre console	38
3.2	Removing and installing rear centre console trim	43
3.3	Removing and installing front ashtray	45
3.4	Removing and installing centre console insert	45
3.5	Removing and installing front centre console storage compartment	47
3.6	Removing and installing front centre console footwell trim	51
3.7	Removing and installing centre console	52
3.8	Removing and installing trim panel for centre console	58
3.9	Removing and installing cup holder	59
3.10	Removing and installing rear centre console storage compartment	59
3.11	Removing and installing bracket for centre console	60
4	Front centre armrest	62
4.1	Assembly overview - front centre armrest	62
4.2	Removing and installing front centre armrest	63
4.3	Removing and installing upper part of centre armrest	65
5	Interior mirror	67
5.1	Assembly overview - interior mirror	67
5.2	Removing and installing interior mirror	70
5.3	Switching automatic anti-dazzle function on and off	74
5.4	Switching compass display on and off	75
5.5	Setting magnetic deflection zone	75
5.6	Calibrating digital compass	76
5.7	Adjusting automatic anti-dazzle interior mirror for right-hand drive or left-hand drive vehicles	76
5.8	Selecting the applicable deflection zone from the map	77
5.9	Checking operation of automatic anti-dazzle interior mirror	83
69	Passenger protection	85
1	Seat belts	85
1.1	Overview of fitting locations - seat belts and anchorage points	85
1.2	Assembly overview - front three-point seat belt	87
1.3	Assembly overview - rear outer three-point seat belt	91
1.4	Assembly overview - rear centre three-point seat belt	91
1.5	Assembly overview - front belt buckle	92
1.6	Assembly overview - rear belt buckle	93
1.7	Removing and installing front three-point seat belt	95
1.8	Removing and installing rear three-point seat belt	99
1.9	Removing and installing front belt guide	102
1.10	Removing and installing rear belt guide	103
1.11	Removing and installing front belt end fitting	105
1.12	Removing and installing rear outer belt end fitting	108
1.13	Removing and installing belt height adjuster	108
1.14	Removing and installing front belt buckle	110
1.15	Removing and installing rear belt buckle	111
2	Child seat anchors	113
2.1	Assembly overview - front child seat anchors	113
2.2	Assembly overview - rear child seat anchors	115
2.3	Removing and installing front child seat anchor	117
2.4	Removing and installing rear child seat anchor	119
3	Airbag system	122
3.1	Overview of fitting locations - airbag system	122
4	Airbag control unit	125
4.1	Assembly overview - airbag control unit	125
4.2	Removing and installing airbag control unit J234	125
5	Battery isolation igniter	128

5.1	Assembly overview - battery isolation igniter	128
5.2	Removing and installing battery isolation igniter	128
6	Driver airbag	132
6.1	Assembly overview - driver airbag	132
6.2	Removing and installing airbag unit with igniters	134
6.3	Renewing connector at airbag	137
7	Front passenger airbag	140
7.1	Assembly overview - front passenger airbag	140
7.2	Removing and installing front passenger airbag unit with igniters	142
7.3	Removing and installing key-operated switch to deactivate airbag on front passenger side	144
8	Side airbags	147
8.1	Assembly overview - front side airbag	147
8.2	Assembly overview - rear side airbag	147
8.3	Removing and installing front side airbag with igniter	148
8.4	Removing and installing rear side airbag with igniter	150
9	Curtain airbags	152
9.1	Assembly overview - curtain airbag	152
9.2	Removing and installing curtain airbag with igniter	153
10	Crash sensors for airbags	159
10.1	Overview of fitting locations - crash sensors for airbags	159
10.2	Removing and installing front airbag crash sensor for driver side G283	162
10.3	Removing and installing front side airbag crash sensor G179/G180	166
10.4	Removing and installing rear side airbag crash sensor G256/G257	170
11	Seat position sensor	172
11.1	Assembly overview - seat position sensor	172
11.2	Removing and installing seat position sensor	172
12	Belt-fastened recognition system	175
12.1	Removing and installing seat occupied sensor on front passenger side G128	175
13	Seat occupied recognition system	178
13.1	Overview of fitting locations - seat occupied recognition system	178
13.2	Removing and installing seat occupied sensor	180
14	Deformation element	185
14.1	Assembly overview - deformation element	185
14.2	Removing and installing deformation element	187
70	Trim, insulation	191
1	Front door trim	191
1.1	Assembly overview - front door trim	191
1.2	Removing and installing mid-range loudspeaker trim	195
1.3	Removing and installing treble loudspeaker trim	195
1.4	Removing and installing bass loudspeaker trim	196
1.5	Removing and installing trim panel	197
1.6	Removing and installing front door trim	197
1.7	Removing and installing front armrest	202
1.8	Removing and installing front door puller	203
1.9	Removing and installing interior door handle	205
1.10	Removing and installing window frame trim	205
2	Rear door trim	208
2.1	Assembly overview - rear door trim	208
2.2	Removing and installing interior door handle	211
2.3	Removing and installing rear door trim	211
2.4	Removing and installing rear armrest	215
2.5	Removing and installing rear door puller	216
2.6	Removing and installing window frame trim	216



3	Dash panel	219
3.1	Overview of fitting locations - dash panel	219
3.2	Assembly overview - dash panel	219
3.3	Removing and installing dash panel cover (side)	222
3.4	Removing and installing trim panel for dash panel	223
3.5	Removing and installing loudspeaker trim	224
3.6	Removing and installing dash panel	227
3.7	Removing and installing dash panel vents	232
3.8	Removing and installing front centre defroster vent	234
3.9	Removing and installing side defroster vent	235
4	Central tube for dash panel	236
4.1	Assembly overview - central tube for dash panel	236
4.2	Removing and installing central tube for dash panel	238
5	Passenger compartment trim panels	243
5.1	Overview of fitting locations - passenger compartment trim panels	243
5.2	Assembly overview - sill panel moulding	244
5.3	Assembly overview - A-pillar trim	246
5.4	Assembly overview - B-pillar trim	247
5.5	Assembly overview - C-pillar trim	248
5.6	Assembly overview - D-pillar trim	249
5.7	Assembly overview - foot rest and floor covering	250
5.8	Assembly overview - rear shelf	251
5.9	Removing and installing sill panel moulding	252
5.10	Removing and installing A-pillar trim	255
5.11	Removing and installing B-pillar trim	257
5.12	Removing and installing C-pillar trim	260
5.13	Removing and installing D-pillar trim	261
5.14	Removing and installing foot rest	263
5.15	Removing and installing floor covering	264
5.16	Removing and installing rear shelf	266
6	Luggage compartment trim panels	267
6.1	Overview of fitting locations - luggage compartment trim panels	267
6.2	Assembly overview - luggage compartment side trim	268
6.3	Assembly overview - luggage compartment floor	269
6.4	Assembly overview - lower rear lid trim	270
6.5	Assembly overview - upper rear lid trim	272
6.6	Assembly overview - lock carrier trim	272
6.7	Removing and installing lower rear lid trim	273
6.8	Removing and installing upper rear lid trim	275
6.9	Removing and installing luggage compartment side trim	276
6.10	Removing and installing luggage compartment floor	278
6.11	Removing and installing fastening ring	279
6.12	Removing and installing bag hook	280
6.13	Removing and installing grip for rear luggage compartment floor	280
6.14	Removing and installing cover for warning triangle	282
6.15	Removing and installing tail light cover	282
6.16	Removing and installing trim for rear lid lock	283
6.17	Removing and installing lock carrier trim	283
7	Roof trim panels	285
7.1	Overview of fitting locations - roof trim	285
7.2	Assembly overview - moulded headliner	285
7.3	Removing and installing moulded headliner	287
7.4	Attaching roof reinforcement to body	291
72	Seat frames	293

1	Overview - seat versions	293
1.1	Overview of fitting locations - seat versions	293
1.2	Attaching front seat to seat repair stand	295
2	Front seats	297
2.1	Overview of fitting locations - electrical and electronic components	297
2.2	Assembly overview - front seat	302
2.3	Assembly overview - front seat backrest	308
2.4	Assembly overview - head restraint	313
2.5	Assembly overview - seat pan	315
2.6	Removing and installing front seat	330
2.7	Connecting and disconnecting airbag adapter	337
2.8	Removing and installing seat height adjustment unit	342
2.9	Removing and installing seat rake adjustment unit	347
2.10	Removing and installing backrest adjustment unit	352
2.11	Removing and installing front seat backrest	357
2.12	Removing and installing head restraint	365
2.13	Removing and installing head restraint guide	366
2.14	Dismantling and assembling seat pan	368
2.15	Removing and installing backrest release mechanism	392
2.16	Removing and installing lumbar support adjustment switch E176/E177	393
2.17	Removing and installing lumbar support adjustment motor V125/V126/V129/V130	393
2.18	Removing and installing heated front seats control unit J774	395
3	Rear seats	396
3.1	Assembly overview - bench seat/individual seats	396
3.2	Assembly overview - locking mechanism	397
3.3	Assembly overview - head restraint and head restraint guide	398
3.4	Assembly overview - rear seat backrest	399
3.5	Assembly overview - centre armrest	401
3.6	Removing and installing bench seat/individual seats	403
3.7	Removing and installing head restraint	404
3.8	Removing and installing head restraint guide	405
3.9	Removing and installing rear seat backrest	406
3.10	Removing and installing trim for locking mechanism	410
3.11	Removing and installing locking mechanism for rear seat backrest	412
3.12	Removing and installing trim frame for load-through hatch	412
3.13	Removing and installing flap for load-through hatch	413
3.14	Removing and installing centre armrest	415
74	Seat - padding, covers	417
1	Covers and padding on front seats	417
1.1	Assembly overview - seat pan cover and padding	417
1.2	Assembly overview - backrest cover and padding	420
1.3	Assembly overview - head restraint cover and padding	421
1.4	Assembly overview - seat heater elements	422
1.5	Removing and installing seat pan cover and padding	424
1.6	Removing and installing backrest cover and padding	427
1.7	Separating seat pan cover and padding	429
1.8	Separating backrest cover and padding	431
1.9	Removing and installing head restraint cover and padding	432
1.10	Removing and installing seat heater element Z6/Z8	435
1.11	Removing and installing backrest heater element Z7/Z9	438
2	Covers and padding on rear seats	440
2.1	Assembly overview - cover and padding	440
2.2	Removing and installing cover and padding	444
2.3	Detaching cover from padding	448